

Fault Code: 1496


Auto Mode Output Relay Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1496 PID(P): SPN: FMI: Lamp: Warning SRT:	The Auto Mode output relay driver diagnostic has detected an error.	Any customer features dependent on Auto Mode output will not function correctly. No action taken by ECM. No loss of performance.

©Cummins Inc

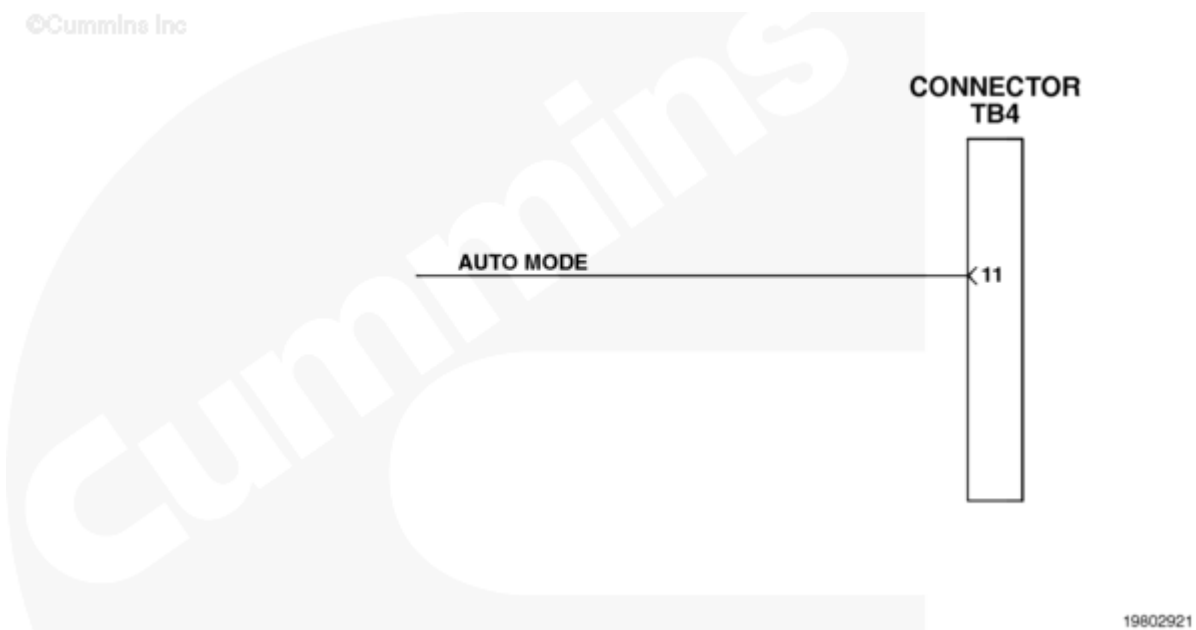

Auto Mode Output Relay Driver Circuit

Circuit Description

The ECM checks the Auto Mode output relay driver to ensure correct operation. The ECM uses the Auto Mode output to inform any customer/features dependent on the ECM for knowledge of when the generator set is running. The ECM monitors the voltage (no voltage increase will trip Fault Code 1496) caused by short circuits, open circuits, or failed Auto Mode output relay driver in the ECM.

Component Location

Refer to Section E for location of the output Auto Mode.

Shoptalk

When the control is in auto mode, the circuit will provide B positive (+) voltage. When the control is **not** in auto mode, the circuit will be open. Possible failure modes are short circuits, short to ground, and loss of supply voltage inside the ECM.

Refer to Troubleshooting Fault Code t05-1496 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1496.html>)

Last Modified: 29-Jul-2010
