

Fault Code: 1497


Manual Run/Stop LED Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1497 PID(P): SPN: FMI: Lamp: Warning SRT:	Switch panel Manual Run/Stop LED driver diagnostic has detected an error.	The Manual Run/Stop LED will not function correctly. No action taken by ECM. No loss of performance.

©Cummins Inc

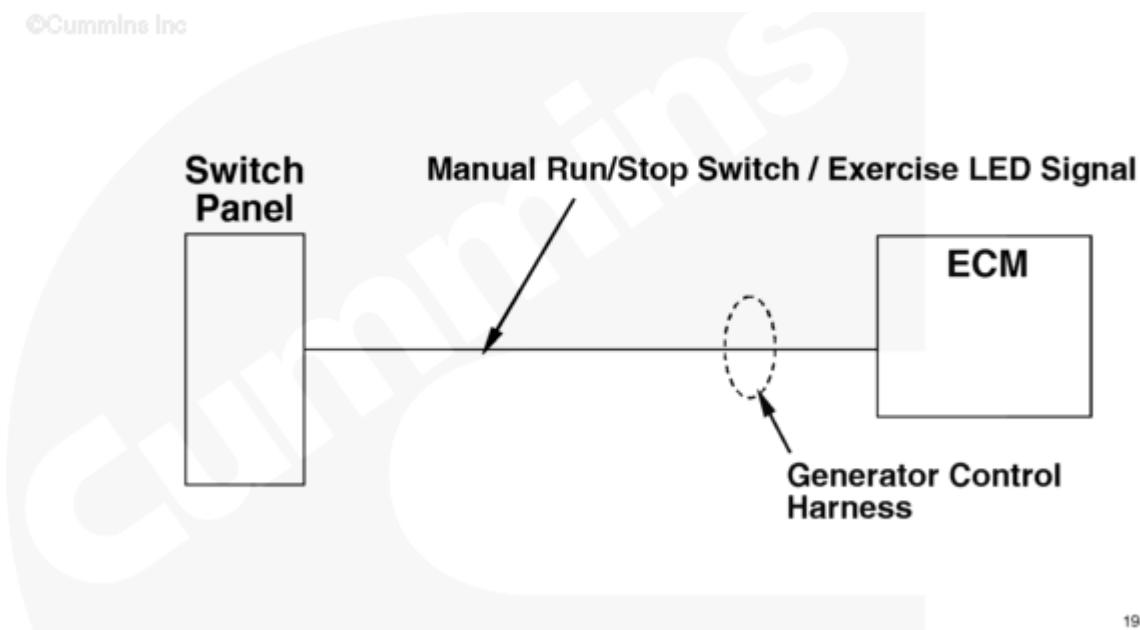

19802922

Manual Run/Stop LED Driver Circuit

Circuit Description

The ECM checks the to ensure correct operation. The ECM uses the Manual Run/Stop lamp to inform the operator if the generator set is in manual Run mode. The ECM monitors the voltage (no voltage drop will trip Fault Code 1497) caused by short circuits, open circuits, bad bulbs, or a failed Manual Run/Stop LED driver in the ECM.

Component Location

Refer to Section E for location of the switch panel, and the Manual Run/Stop lamp.

Shoptalk

Possible failure modes are open circuits, short to ground, burned-out bulb, and loss of supply voltage inside the ECM.

Proper diagnostic lamp operation can be verified by checking to see that the lamps briefly light when the ECM is powered up.

Refer to Troubleshooting Fault Code t05-1497 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1497.html>)

Last Modified: 29-Jul-2010
