


Fault Code: 152

Engine Coolant Temperature Low - Warning

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 152 PID(P): SPN: FMI: Lamp: Warning SRT:	Engine coolant temperature has dropped below the warning threshold for low coolant temperature.	No action is taken by the ECM. No effect on performance.

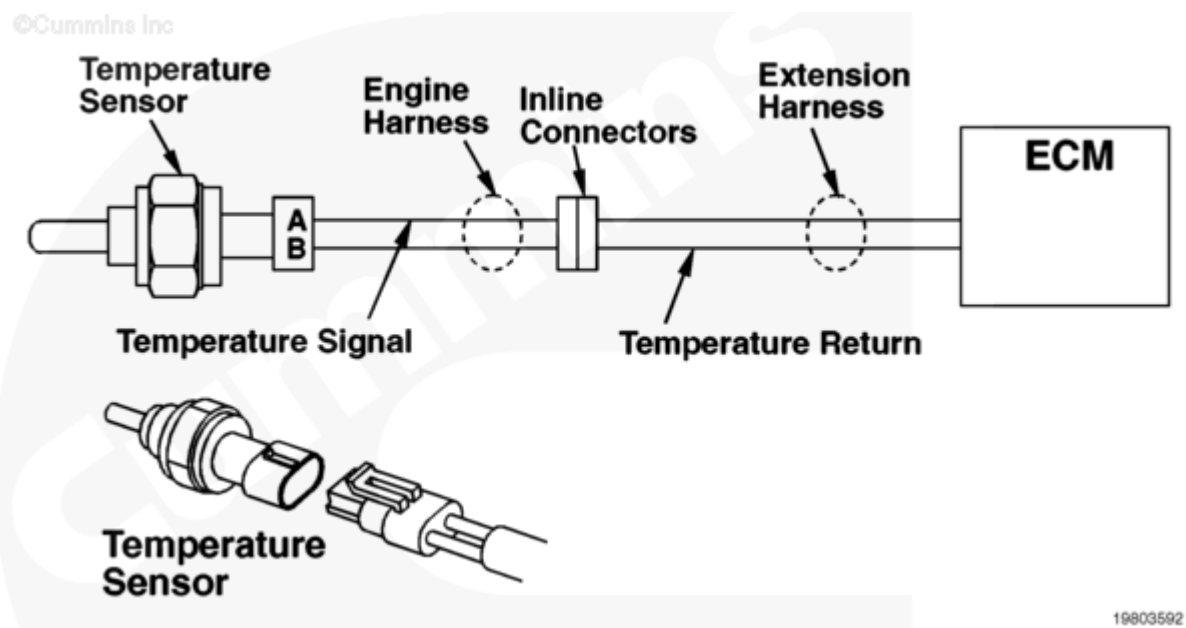

Coolant Temperature Sensor Circuit

Circuit Description

The coolant temperature sensor is used by the electronic control module (ECM) to monitor the temperature of the engine coolant. The coolant temperature is used by the ECM for the engine protection system, timing, and fueling control. If the voltage is high for more than 2 seconds, the ECM will log Fault Code 152.

Component Location

Refer to the Engine Diagrams. 100-002 (</qs3/pubsys2/xml/en/procedures/01/01-100-002.html>) for the component location.

Shoptalk

Make sure the airflow through the radiator is **not** obstructed. The resistance of all the temperature sensors varies with the temperature.

Refer to Troubleshooting Fault Code t05-152 (</qs3/pubsys2/xml/en/procedures/01/01-t05-152.html>)

Last Modified: 29-Jul-2010
