


Fault Code: 168

Fuel Rack Actuator Position 1 Circuit - Open Circuit (Left Bank)

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 168 PID(P): SPN: FMI: Lamp: Shutdown SRT:	Fuel rack actuator position 1 circuit - open circuit (left bank).	Engine can possibly shut down due to an overspeed condition. Fault Code 171 can also activate.

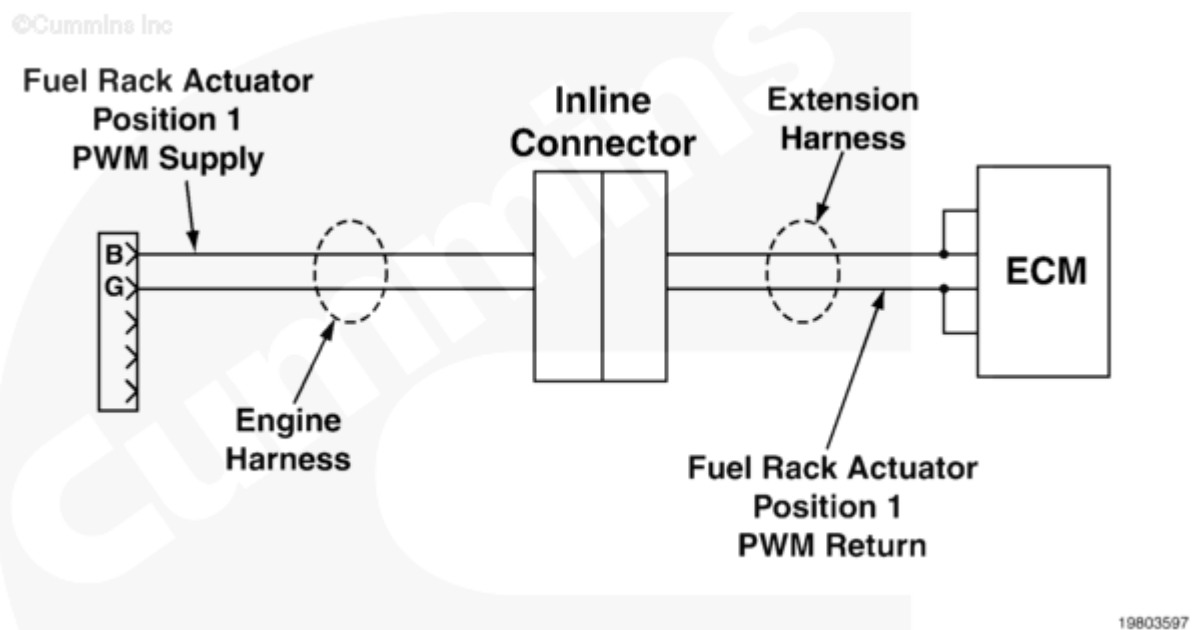

Fuel Rack Actuator Position 1 Circuit

Circuit Description

The fuel rack actuators are actuated by the ECM to control fuel metering. Each rack actuator is connected to the ECM by a supply and a return wire. An electrical pulse is sent to the rack actuator from the ECM on the supply wire and returns to the ECM on the return wire. Each solenoid valve is normally closed, and it is **only** opened by an electrical pulse from the ECM during metering. This test checks to see that the current being supplied from the ECM to the actuator is being fed back to the ECM on the return circuit.

Component Location

The fuel rack actuator position 1 is part of the left bank fuel pump.

Shoptalk

The possible failure modes for this fault are an open circuit or short to ground on the fuel rack actuator PWM 1 supply circuit or an open circuit or short to battery supply on the fuel rack actuator PWM 1 return circuit.

This fault requires engine speed greater than zero before the fault will go active. If fuel rack position is being monitored, the right rack position will be roughly twice that of the left rack position. If the engine logs a Fault Code 234 (engine overspeed) and a Fault Code 168, troubleshoot Fault Code 168 first.

Fault Code 171 can go active after Fault Code 168 is corrected. If this is the case, key off and Fault Code 171 will go inactive and can be cleared.

Refer to Troubleshooting Fault Code t05-168 (</qs3/pubsys2/xml/en/procedures/01/01-t05-168.html>)

Last Modified: 29-Jul-2010
