


Fault Code: 197

Engine Coolant Level Low - Warning

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 197 PID(P): SPN: FMI: Lamp: Warning SRT:	Engine coolant level low - warning. Voltage signal indicates low radiator coolant level.	No action is taken by the ECM. Fault Codes 146, 151, 228, and/or 233 can also be logged.

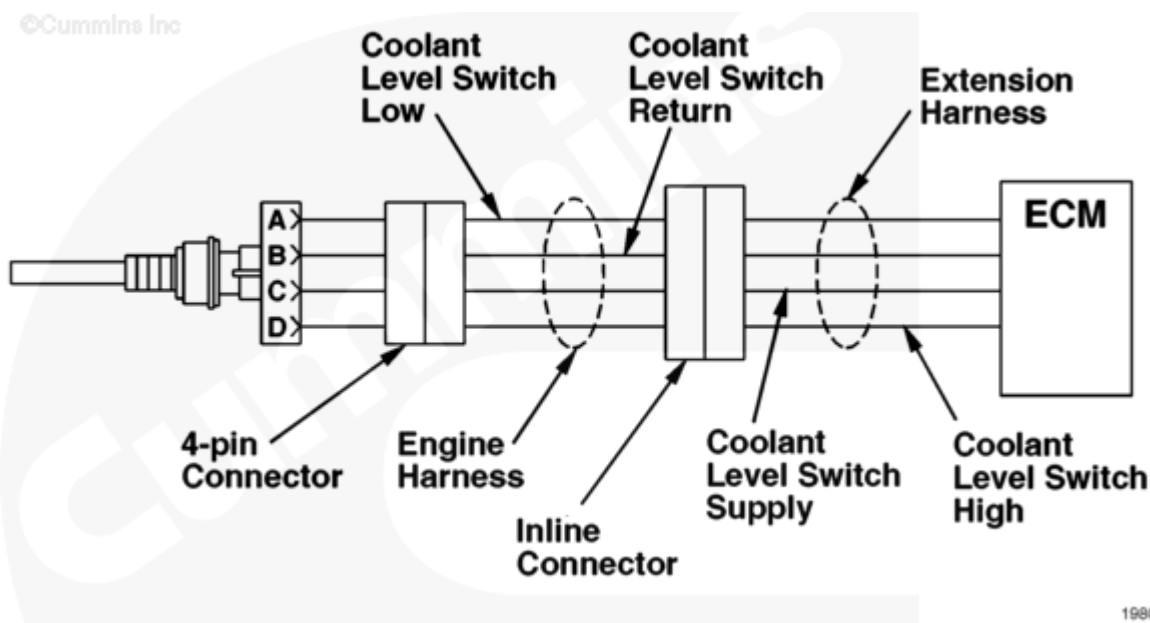

Coolant Level Sensor Circuit

Circuit Description

The coolant level sensor monitors the coolant level within the coolant system and passes information to the electronic control module (ECM).

Component Location

Refer to the Engine Diagrams. 100-002 (/qs3/pubsys2/xml/en/procedures/01/01-100-002.html) for the component location.

Shoptalk

- When the coolant level drops below a certain level, a power derate will be activated, which will decrease the power output by 50 percent over a 30-second period.
- If a shorting plug is used in the coolant level circuit, verify that it is wired correctly, the coolant level switch high signal **must** be shorted to the coolant level switch supply, and the coolant level switch low signal **must** be shorted to the coolant level switch return.
- Inspect the wiring harness between the four-way connector and the coolant level sensor for damage.

Refer to Troubleshooting Fault Code t05-197 (/qs3/pubsys2/xml/en/procedures/01/01-t05-197.html)

Last Modified: 29-Jul-2010
