


Fault Code: 233

Coolant Pressure - Engine Protection

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 233 PID(P): SPN: FMI: Lamp: Warning SRT:	Engine coolant pressure low - warning. Voltage signal indicates coolant pressure has dropped below the warning threshold for low coolant pressure.	Calibration-dependent engine shutdown occurs, or not action is taken by ECM.

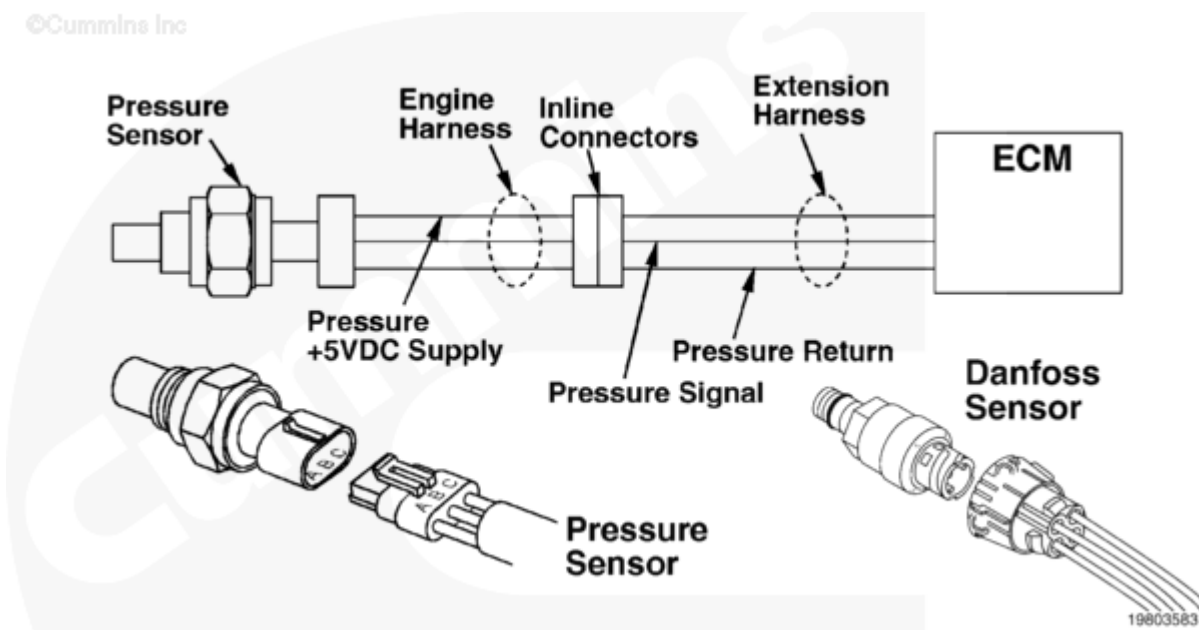

Coolant Pressure Sensor Circuit

Circuit Description

The coolant pressure sensor is used by the electronic control module (ECM) to monitor coolant pressure. The ECM monitors the voltage on the signal pin and converts this to a pressure value. The coolant pressure value is used by the ECM for the engine protection system.

Component Location

Refer to the Engine Diagrams. 100-002 (</qs3/pubsys2/xml/en/procedures/01/01-100-002.html>) for the component location.

Shoptalk

Confirm that the coolant sensor supply is between 4.75 and 5.25 VDC at the sensor. See Fault Code 232.

Refer to specific engine wiring diagram for the output voltage of the pressure sensor.

NOTE: Some engine models will use the Metri-Pack type connector on this pressure sensor, and some will use the Danfoss™ type connector. The Metri-Pack connector pin designators are alpha and the Danfoss™ connector pin designators are numeric. The steps depicted in this fault code show the Metri-Pack type connector with alpha pin callouts. Refer to specific engine wiring diagrams to determine the correct pin designators for the type of connector.

Refer to Troubleshooting Fault Code t05-233 (</qs3/pubsys2/xml/en/procedures/01/01-t05-233.html>)