


Fault Code: 253

Engine Oil Level Number 1 Low - Critical

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 253 PID(P): SPN: FMI: Lamp: Shutdown SRT:	Engine oil level has dropped below the shutdown threshold for low oil level.	Engine will shut down.

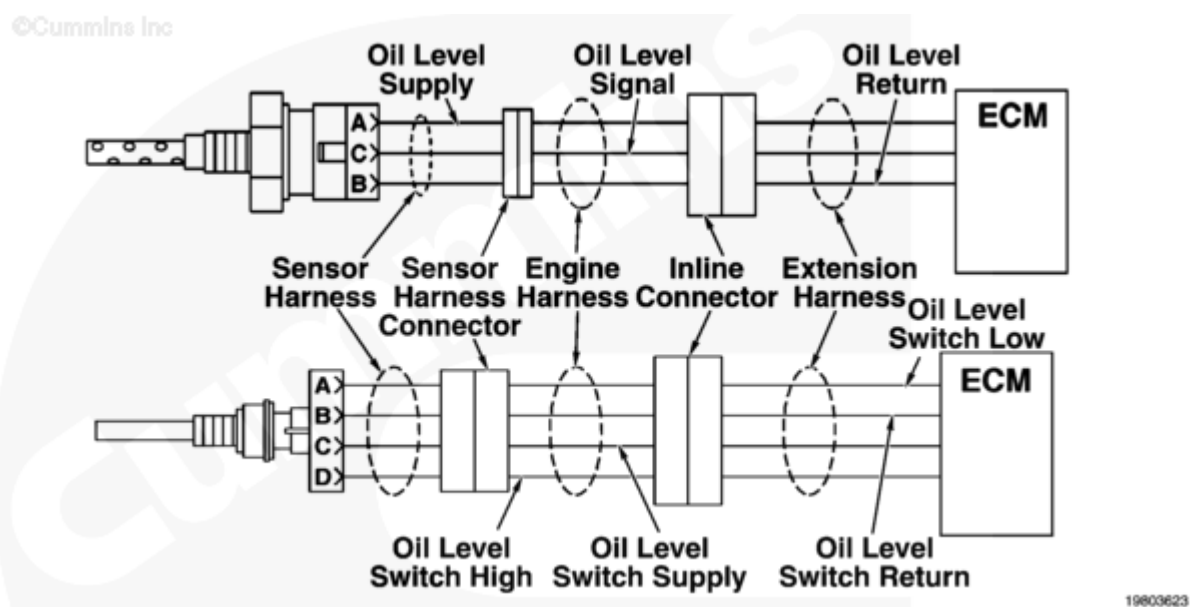

Oil Level Sensor Circuit

Circuit Description

The oil level sensor monitors the oil level within the oil system and passes information to the ECM. Low oil level can cause the engine to **not** start.

Component Location

Refer to the Engine Diagrams in Section E of this manual for the component location.

Shoptalk

Some engine configurations will use a 3-pin oil level sensor and others will use a 4-pin oil level sensor.

Refer to Troubleshooting Fault Code t05-253 (</qs3/pubsys2/xml/en/procedures/01/01-t05-253.html>)

Last Modified: 29-Jul-2010
