


Fault Code: 266

Fuel Temperature High - Critical

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 266 PID(P): SPN: FMI: Lamp: Shutdown SRT:	Engine fuel temperature has exceeded the shutdown threshold for high fuel temperature.	Engine will shut down.

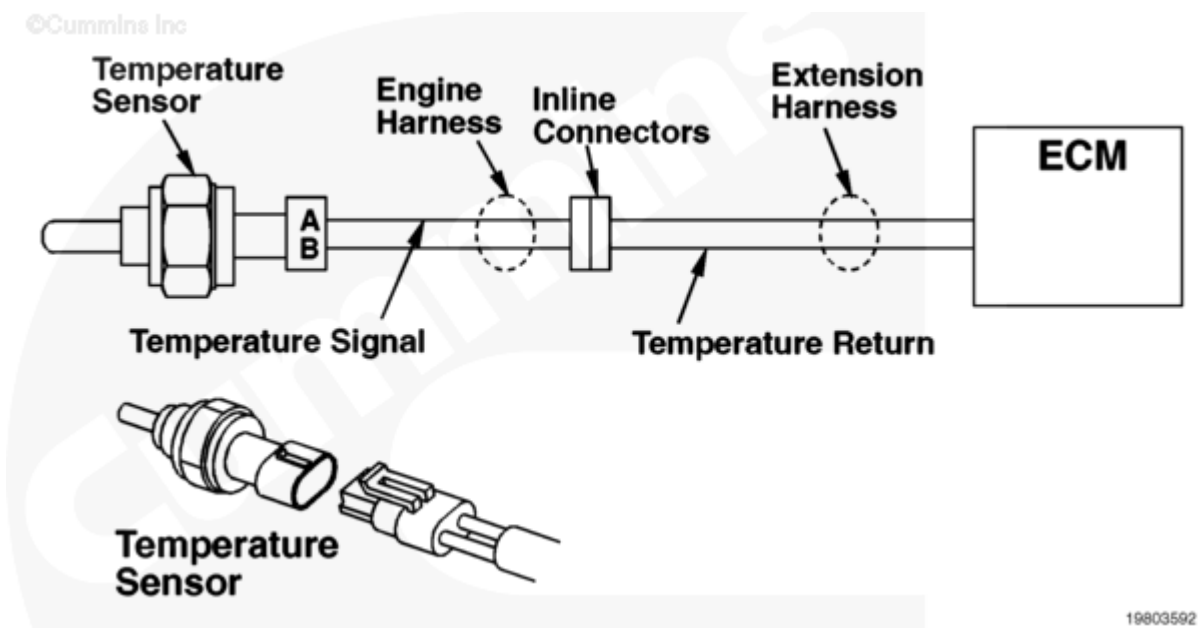

Fuel Temperature Sensor Circuit

Circuit Description

The fuel temperature sensor is used by the electronic control module (ECM) to monitor the temperature of the fuel. The fuel temperature value is used by the ECM for the engine protection system.

Component Location

Refer to the Engine Diagrams. 100-002 (/qs3/pubsys2/xml/en/procedures/01/01-100-002.html) for the component location.

Shoptalk

The resistance of all the temperature sensors varies with the temperature.

Refer to Troubleshooting Fault Code t05-266 (/qs3/pubsys2/xml/en/procedures/01/01-t05-266.html)

Last Modified: 29-Jul-2010
