


Fault Code: 326

Engine Oil Level Number 1 Low - Warning

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 326 PID(P): SPN: FMI: Lamp: Warning SRT:	Engine oil level Number 1 low - warning. Voltage signal indicates low lubricating oil level in the engine.	Calibration-dependent engine shutdown or no action is taken by ECM.

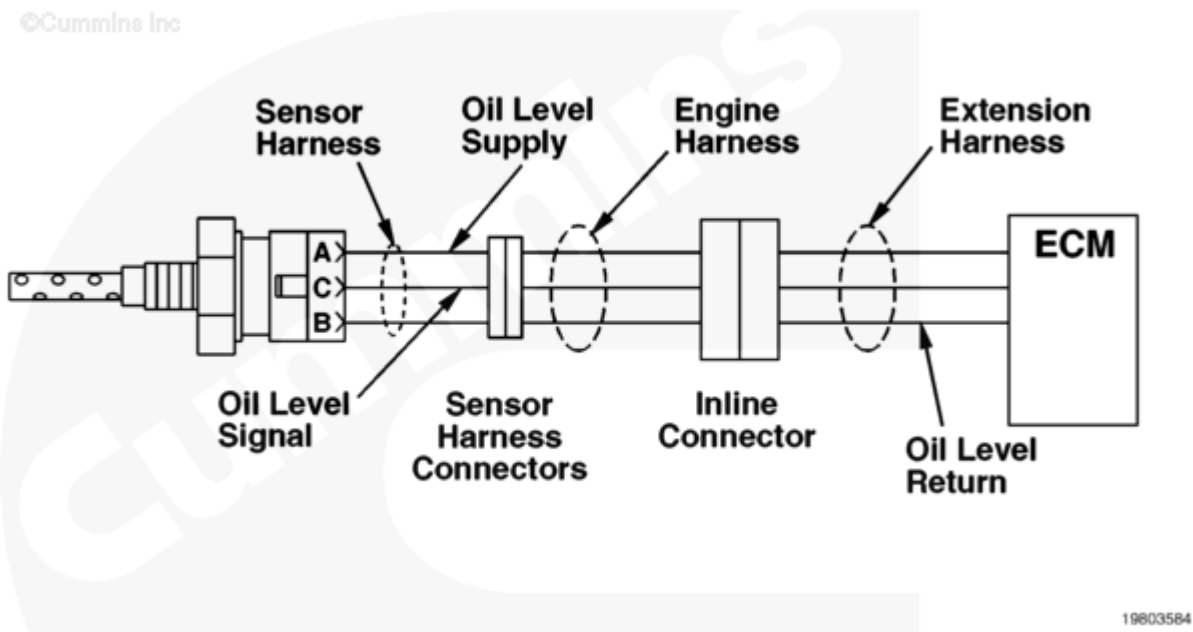

Oil Level Sensor Circuit

Circuit Description

The oil level sensor is used by the electronic control module (ECM) to monitor the amount of oil in the engine.

Component Location

Refer to the Engine Diagrams. 100-002 (/qs3/pubsys2/xml/en/procedures/01/01-100-002.html) for the component location.

Shoptalk

A 4-pin oil level sensor will not trigger Fault Code 326.

Refer to Troubleshooting Fault Code t05-326 (/qs3/pubsys2/xml/en/procedures/01/01-t05-326.html)

Last Modified: 29-Jul-2010
