


Fault Code: 422

Engine Coolant Level Sensor - Data Incorrect

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 422 PID(P): SPN: FMI: Lamp: Warning SRT:	Engine coolant level switch sensor error.	No engine protection for coolant level. No effect on performance.

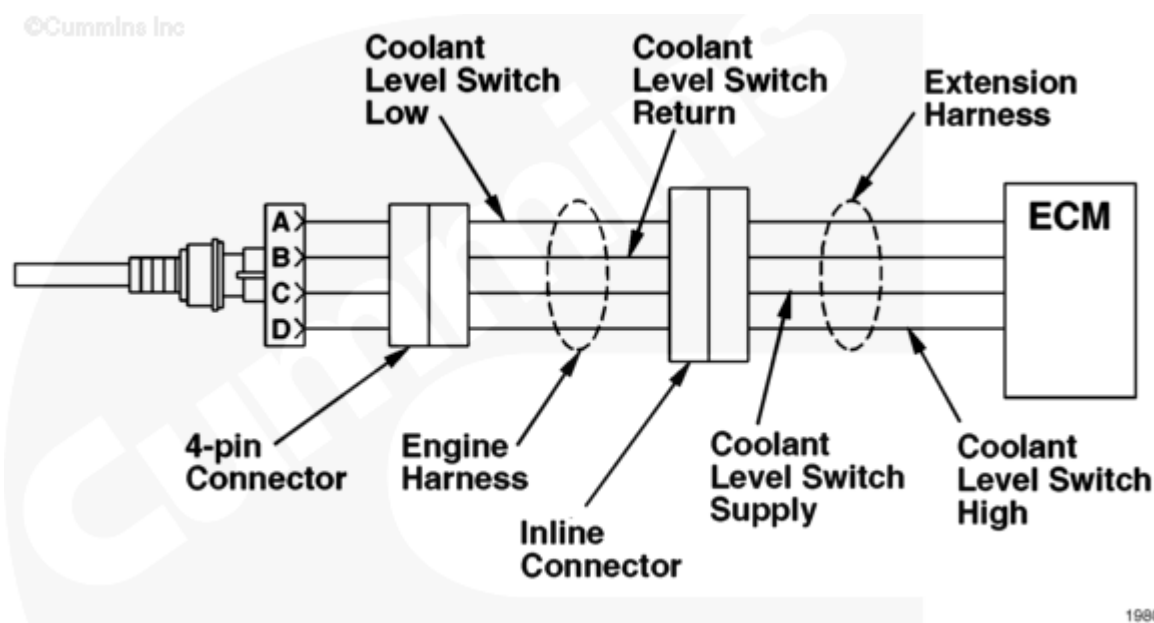

Coolant Level Switch Sensor Circuit

Circuit Description

The coolant level switch sensor monitors the coolant level within the coolant system and passes information to the electronic control module (ECM). For normal coolant level the ECM expects to see 5 VDC on the coolant level switch high signal wire and 0 VDC on the coolant level switch low signal wire. For low coolant level, the ECM expects to see 0 VDC on the coolant level switch high signal wire and 5 VDC on the coolant level switch low signal wire. This fault code occurs when the ECM receives conflicting messages from the two signal wires on the coolant level switch sensor.

Component Location

The coolant level switch sensor is located on the radiator.

Shoptalk

This fault code will go active when both signal wires show the same voltage. An open circuit in a signal wire can cause the signal to give a 5 VDC reading to the ECM. Check the coolant level. A possible failure mode is that the sensor failed while coolant level was normal and the ECM will **not** detect it. If the coolant level then went low, the ECM will then report a sensor error, **not** low coolant level.

Refer to Troubleshooting Fault Code t05-422 (</qs3/pubsys2/xml/en/procedures/01/01-t05-422.html>)

Last Modified: 29-Jul-2010
