


Fault Code: 471

Engine Oil Level Number 1 Low - Warning

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 471 PID(P): SPN: FMI: Lamp: Shutdown SRT:	Engine oil level has dropped below the warning threshold for low oil level.	Calibration-dependent. No action is taken by the ECM, or engine shutdown.

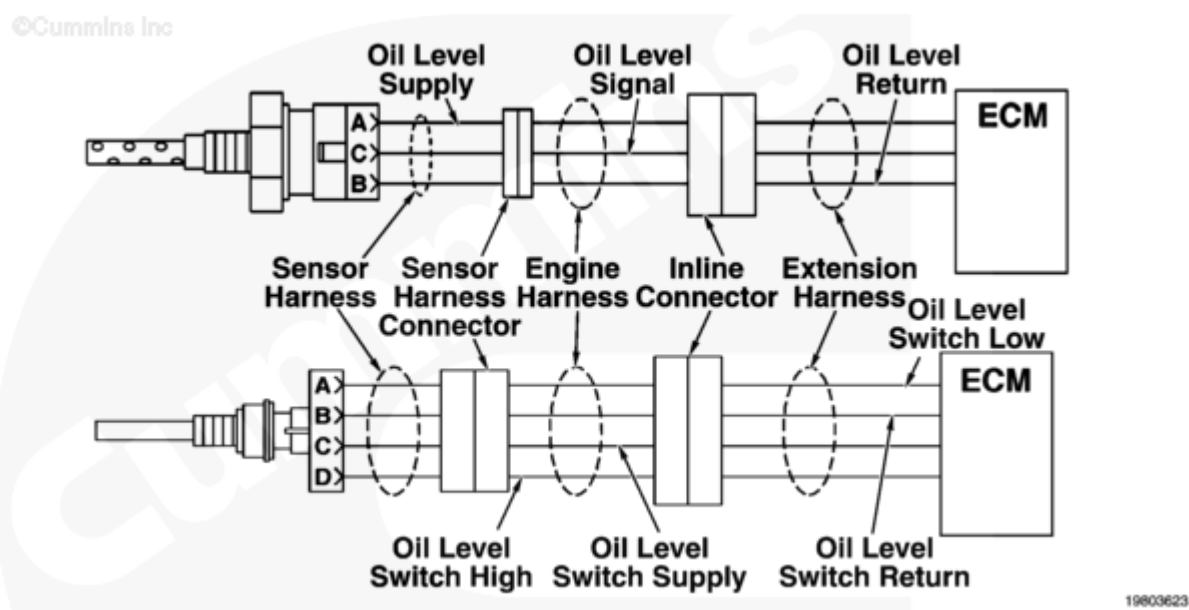

Oil Level Sensor Circuit

Circuit Description

The oil level sensor monitors the oil level within the oil system and passes information to the electronic control module (ECM). Low oil level can cause the engine to **not** start.

Component Location

Refer to the Engine Diagrams. 100-002 (</qs3/pubsys2/xml/en/procedures/01/01-100-002.html>) for the component location.

Shoptalk

Some engine configurations will use a 3-pin oil level sensor and others will use a 4-pin oil level sensor.

Refer to Troubleshooting Fault Code t05-471 (</qs3/pubsys2/xml/en/procedures/01/01-t05-471.html>)

Last Modified: 29-Jul-2010
