


Trainings ▾

Initial Check


Note : The illustrations shown will be of the SS model single-cylinder air compressor. Differences in procedures for SS, QE, and ST model Holset® air compressors will be shown where necessary.

Remove the air governor or air governor line from the air compressor unloader body.

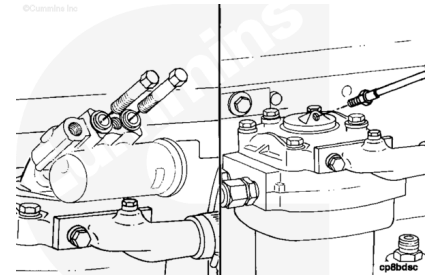

Operate the engine to activate the air compressor.

If the air compressor is pumping, the air governor is malfunctioning and **must** be repaired or replaced. Refer to the manufacturer's instructions.

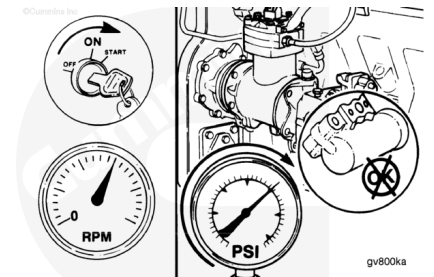

If the air compressor does **not** pump, remove, clean, and inspect the air compressor unloader valve assembly. Refer to Procedure 012-013 (</qs3/pubsys2/xml/en/procedures/04/04-012-013.html>) for air compressor valve assembly.

If the unloader valve assembly operates correctly, clean and inspect the exhaust valve assembly. Refer to Procedure 012-013 (</qs3/pubsys2/xml/en/procedures/04/04-012-013.html>) for air compressor valve assembly.

