

Trainings ▾


Tool Number

ST-302

Ball Joint Vise

Use to hold the air compressor for disassembly or assembly.

©Cummins Inc

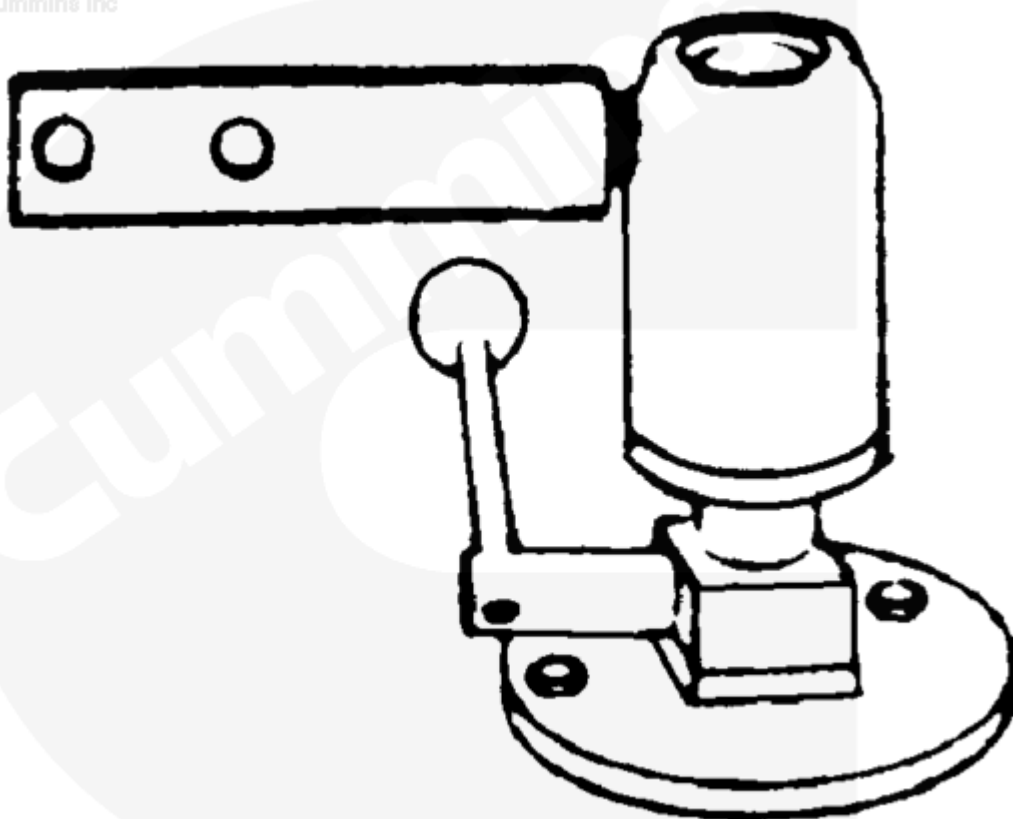


Tool Number

ST-647

Standard Puller

Use to pull the drive gear. Use with puller capscrews that have M8 x 1.25-6H thread.

©Cummins Inc

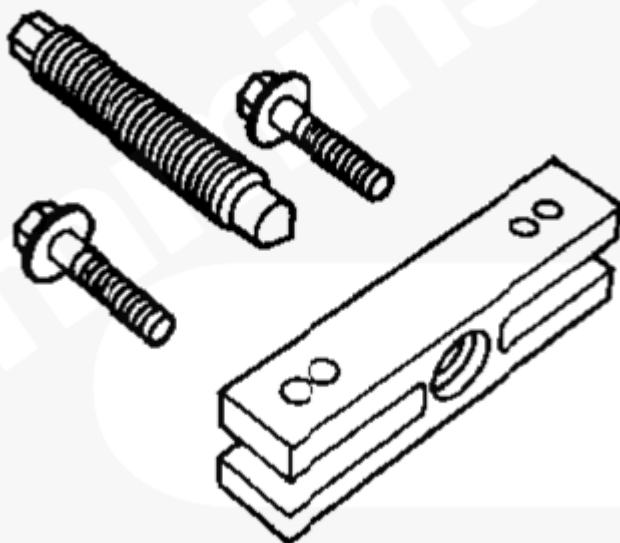

ad8toga


Tool Number

ST-749

Mounting Plate

Use to mount the air compressor to the vise.

©Cummins Inc

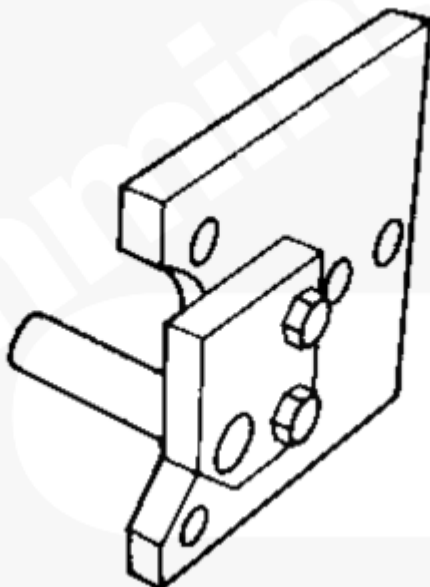

st-749


Tool Number

ST-755

Piston Ring Compressor

Use to compress all piston rings to permit easy installation of piston and rod assemblies.

©Cummins Inc

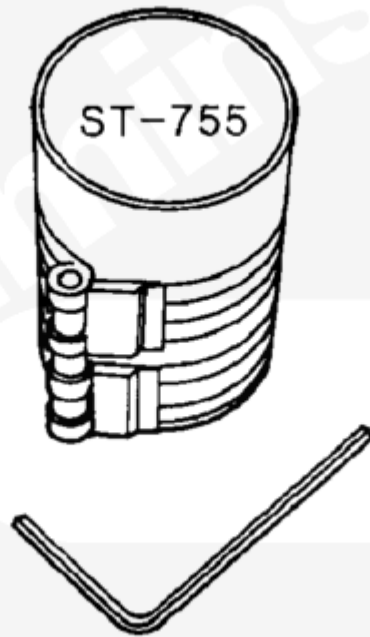**st-755**


Tool Number

ST-1143

Air Compressor Bushing Mandrel

Use to remove and install the crankshaft bushing in the crankcase and the support.

©Cummins Inc

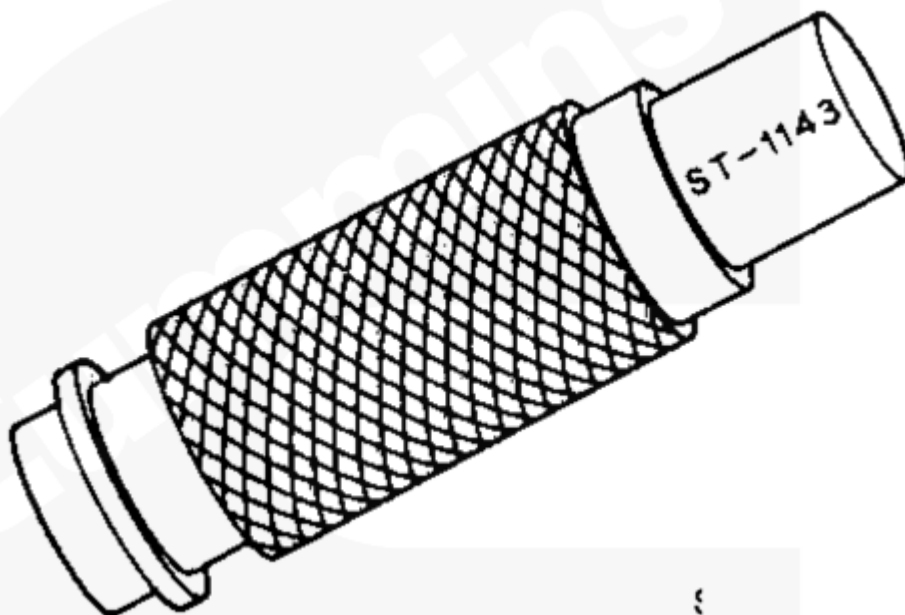

st-1143


Tool Number

3375072

Dial Bore Gauge

Use to measure the cylinder bores.

©Cummins Inc

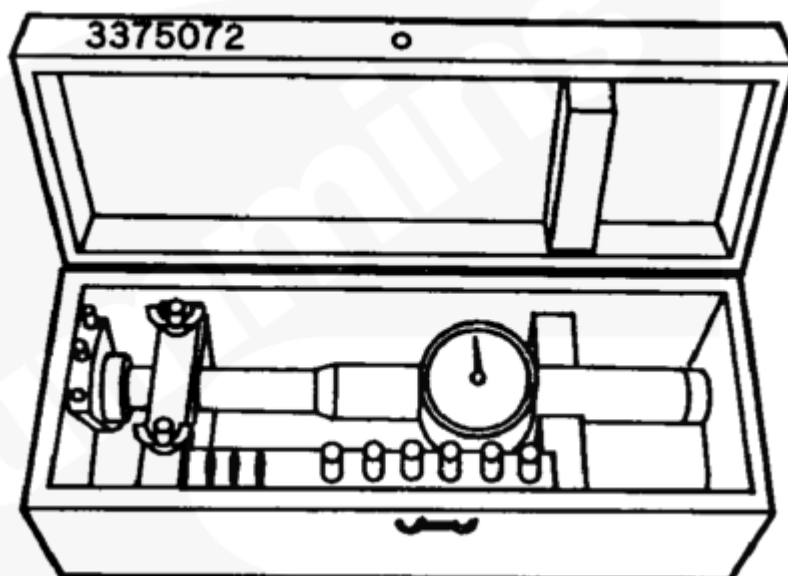

oi8togu

Tool Number

3375182

Valve Spring Tester

Use to check the exhaust valve, intake valve, and unloader valve cap springs.

©Cummins Inc



kn8togs


Tool Number

3376399

O-Ring Pick

Use to remove and install o-rings.

©Cummins Inc

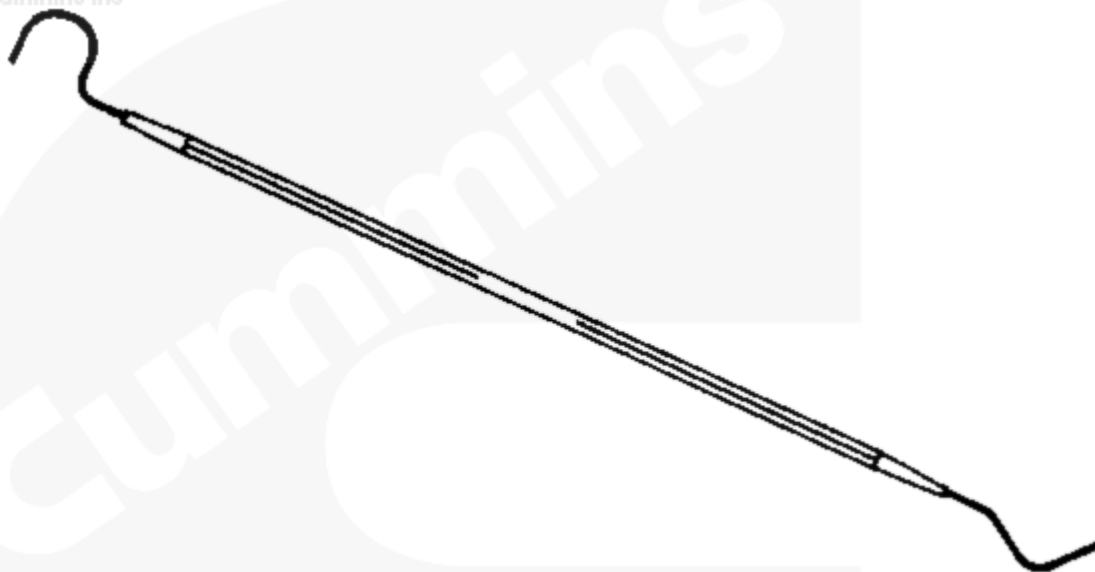

3376399


Tool Number

3376663

Coupling Puller

Use to remove the spline coupling hub.

©Cummins Inc

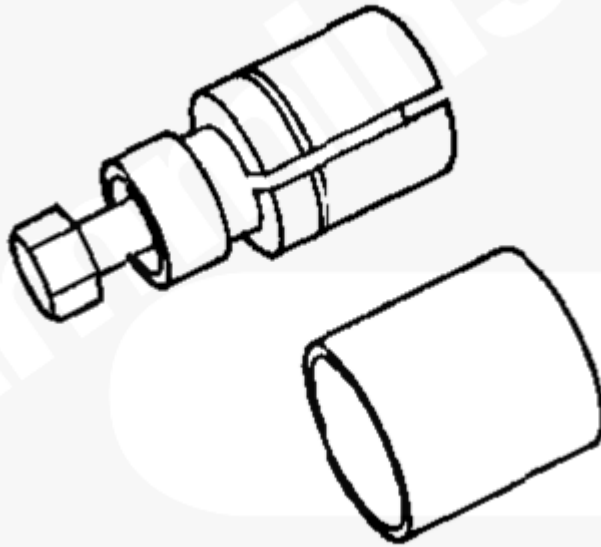

bp8togg

Tool Number

3823923

Spacer

Use with coupling puller, Part No. 3376663, to remove the hydraulic pump drive coupling.

©Cummins Inc



3823923


Tool Number

3377415

Air Compressor Seat Installation Tool

Use to install the exhaust valve seats.

©Cummins Inc

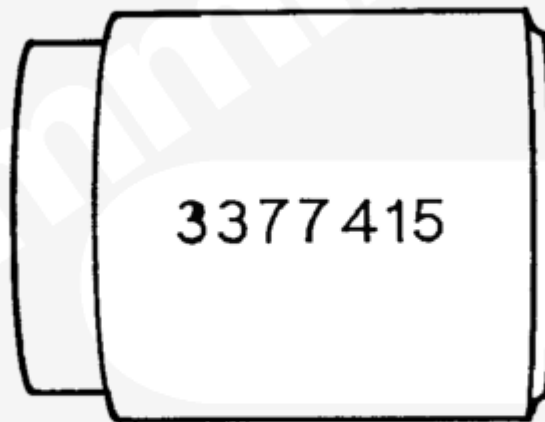

3377415


Tool Number

3377416

Air Compressor Seat Removal Tool

Use to remove the exhaust valve seats.

©Cummins Inc

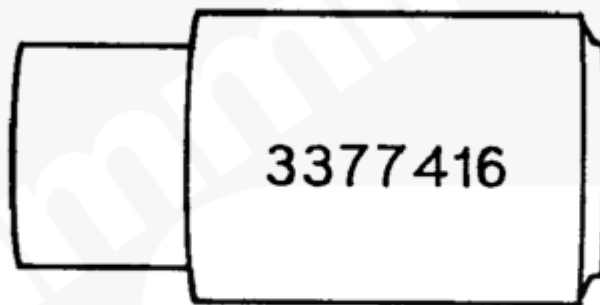

3377416


Tool Number

3823528

Air Compressor Seat Socket

Use to remove the exhaust valve seat and the inlet valve cage.

©Cummins Inc

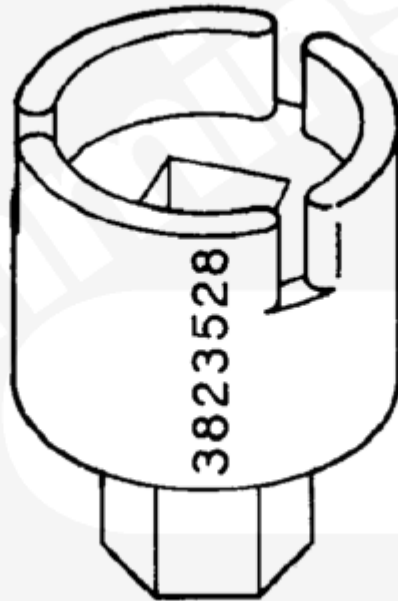**3823528**