



Trainings ▾

Component Dataplates

The dataplate is located on the side of the crankcase. **Always** write the assembly number of the air compressor, and the air compressor model number on all part orders.

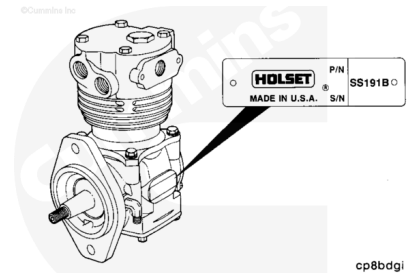


The air compressor dataplate **must not** be changed unless approved by Cummins Inc.

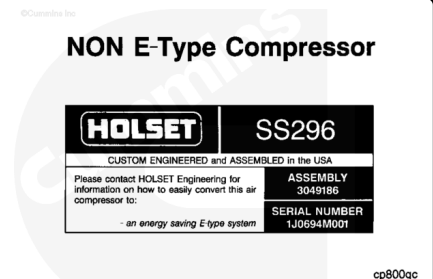

**Air
Compr
essor
Date
Code
(Serial
Numbe
r)**

1	D	16	91	M or B	001
Shift:	Month:	Day of the Month:	Year (Last Two Digits)	Plant: Madison Brazil	Serialization (Optional)

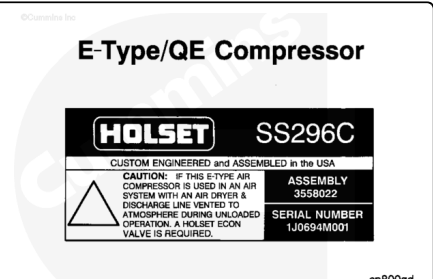

Air Compr essor Date Code (Serial Numbe r)					
1	D	16	91	M or B	001
1	A-Jan				
2	B-Feb				
	C-Mar				
	D-Apr				
	E-May				
	F-Jun				
	G-Jul				
	H-Aug				
	J-Sep				
	K-Oct				
	L-Nov				
	M-Dec				