


## Trainings ▾

### Cutaway View

Holset® SS191 A/C Model

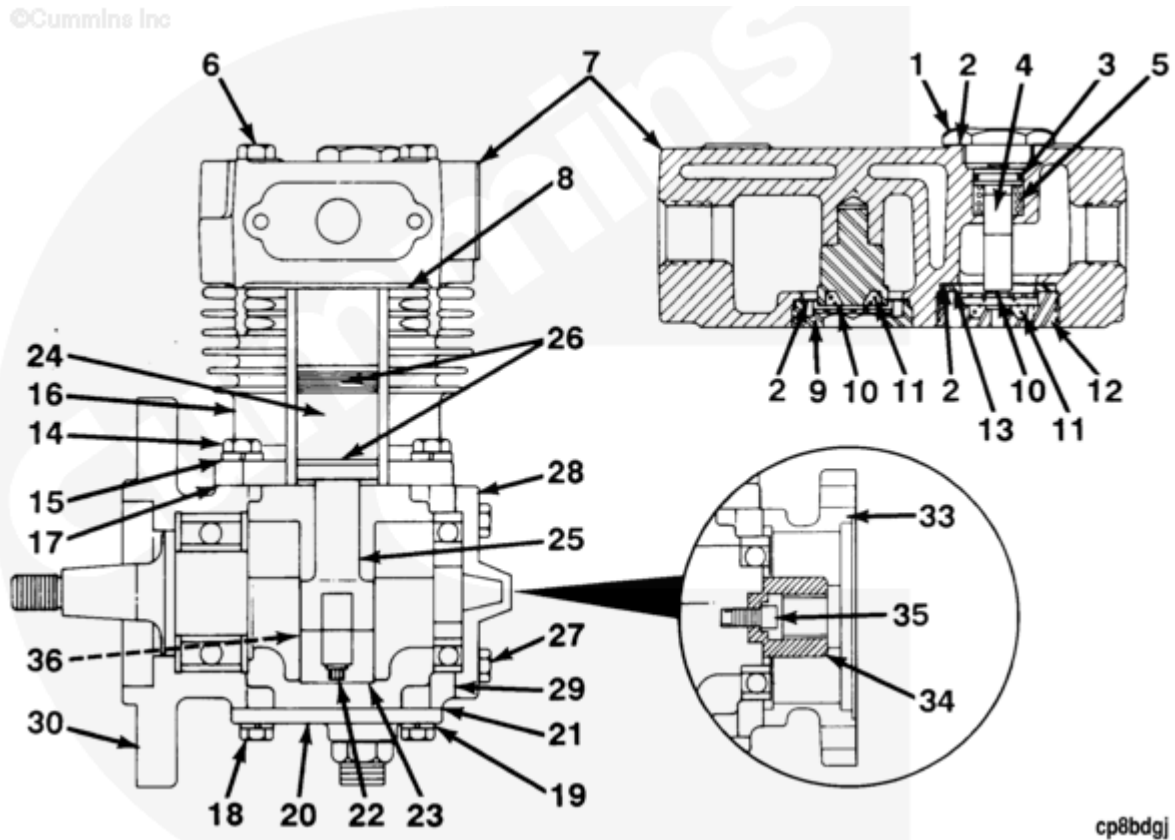

| Reference Number | Part Name          | Quantity (Number Required) |
|------------------|--------------------|----------------------------|
| 1                | Unloader cover     | 1                          |
| 2                | Washer             | 3                          |
| 3                | O-ring             | 1                          |
| 4                | Unloader pin       | 1                          |
| 5                | Spring             | 1                          |
| 6                | Capscrew           | 4                          |
| 7                | Cylinder head      | 1                          |
| 8                | Gasket             | 1                          |
| 9                | Exhaust Valve Seat | 1                          |
| 10               | Valve disc         | 2                          |

| Reference Number | Part Name               | Quantity (Number Required) |
|------------------|-------------------------|----------------------------|
| 11               | Valve Spring            | 2                          |
| 12               | Inlet valve cage        | 1                          |
| 13               | Inlet valve seat        | 1                          |
| 14               | Capscrew                | 4                          |
| 15               | Lockwasher              | 4                          |
| 16               | Cylinder block          | 1                          |
| 17               | Gasket                  | 1                          |
| 18               | Capscrew                | 4                          |
| 19               | Lockwasher              | 4                          |
| 20               | Bottom Cover Plate      | 1                          |
| 21               | Gasket                  | 1                          |
| 22               | Capscrew                | 2                          |
| 23               | Rod cap                 | 1                          |
| 24               | Piston                  | 1                          |
| 25               | Connecting Rod          | 1                          |
| 26               | Rings                   | 2                          |
| 27               | Capscrew                | 4                          |
| 28               | Bearing cap             | 1                          |
| 29               | Gasket                  | 1                          |
| 30               | Crankcase               | 1                          |
| 31               | Button                  | 2                          |
| 32               | Piston pin              | 1                          |
| 33               | Power steering adapter  | 1                          |
| 34               | Power steering coupling | 1                          |
| 35               | Capscrew                | 1                          |
| 36               | Bearing                 | 2                          |

## Exploded View


Holset® SS191 A/C Model

1. Unloader cover
2. Washer
3. O-ring
4. Unloader pin
5. Spring
6. Capscrew
7. Cylinder head
8. Gasket
9. Exhaust valve seat
10. Valve disc
11. Valve spring
12. Inlet valve cage
13. Inlet valve seat
14. Capscrew
15. Lock washer
16. Cylinder block
17. Gasket
18. Capscrew

19. Lockwasher
20. Bottom cover plate
21. Gasket
22. Capscrew
23. Rod cap
24. Piston
25. Connecting rod
26. Rings
27. Capscrew
28. Bearing cap
29. Gasket
30. Crankcase
31. Button
32. Piston pin
33. Power steering adapter
34. Power steering coupling
35. Capscrew
36. Bearing.

## Cutaway View

Holset® SS296, SS296E, and SS338E A/C Model

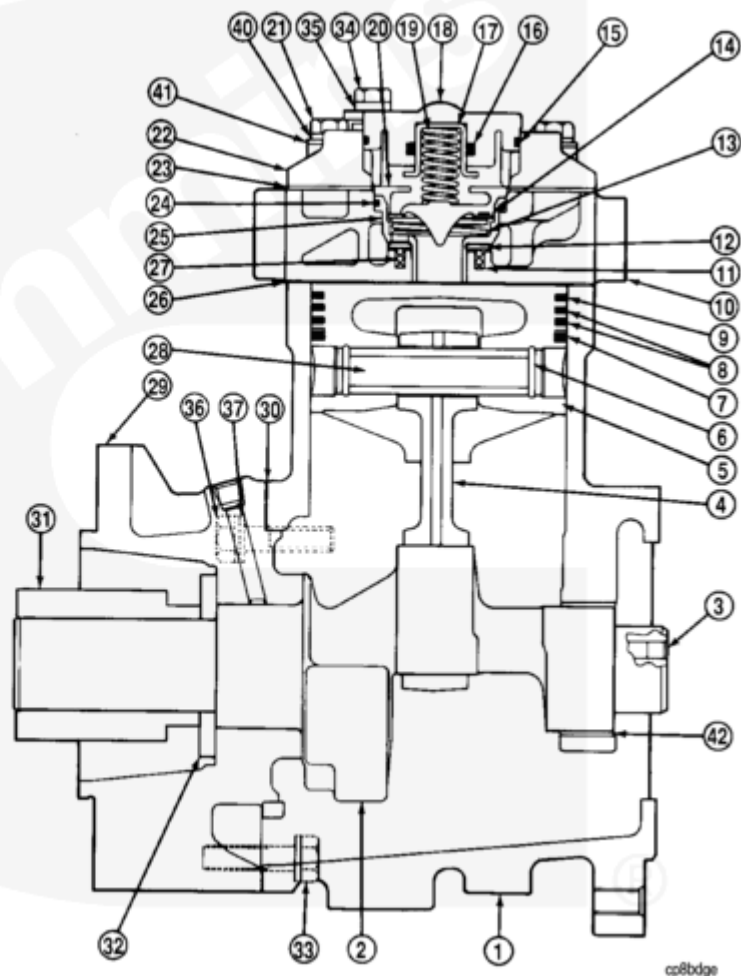


Spline Driven Air Compressor

| Reference Number | Part Name                 | Quantity (Number Required) |
|------------------|---------------------------|----------------------------|
| 1                | Compressor crankcase      | 1                          |
| 2                | Air compressor crankshaft | 1                          |
| 3                | Pipe plug                 | 1                          |
| 4                | Compressor connecting rod | 1                          |
| 5                | Compressor piston         | 1                          |
| 6                | Retaining ring            | 2                          |
| 7                | Oil ring                  | 1                          |
| 8                | Compression piston ring   | 2                          |
| 9                | Compression piston ring   | 1                          |
| 10               | Compressor head           | 1                          |
| 11               | Wear plate                | 1                          |
| 12               | Exhaust valve             | 1                          |
| 13               | Valve intake spring       | 1                          |
| 14               | Intake valve              | 1                          |
| 15               | O-ring seal               | 1                          |

| Reference Number | Part Name                    | Quantity (Number Required) |
|------------------|------------------------------|----------------------------|
| 16               | Rectangular ring seal        | 1                          |
| 17               | Unloader cap                 | 1                          |
| 18               | Unloading valve body         | 1                          |
| 19               | Compression spring           | 1                          |
| 20               | Compressor intake valve seat | 1                          |
| 21               | Hexagon head capscrew        | 4                          |
| 22               | Air compressor cover         | 1                          |
| 23               | Air compressor gasket        | 1                          |
| 24               | O-ring seal                  | 1                          |
| 25               | Compressor exhaust seat      | 1                          |
| 26               | Air compressor gasket        | 1                          |
| 27               | Exhaust valve spring         | 1                          |
| 28               | Piston pin                   | 1                          |
| 29               | Air compressor support       | 1                          |
| 30               | Air compressor gasket        | 1                          |
| 31               | Spline coupling              | 1                          |
| 32               | Thrust bearing               | 1                          |
| 33               | Captive washer capscrew      | 2                          |
| 34               | Captive washer capscrew      | 2                          |
| 35               | Plain washer                 | 2                          |
| 36               | Captive washer capscrew      | 4                          |
| 37               | Plain washer                 | 4                          |
| 38               | Dataplate                    | 1                          |
| 39               | Drive screw                  | 2                          |
| 40               | Lockwasher                   | 4                          |
| 41               | Plain washer                 | 4                          |

## Exploded View

Holset® SS296, SS296E, and SS338E A/C Model

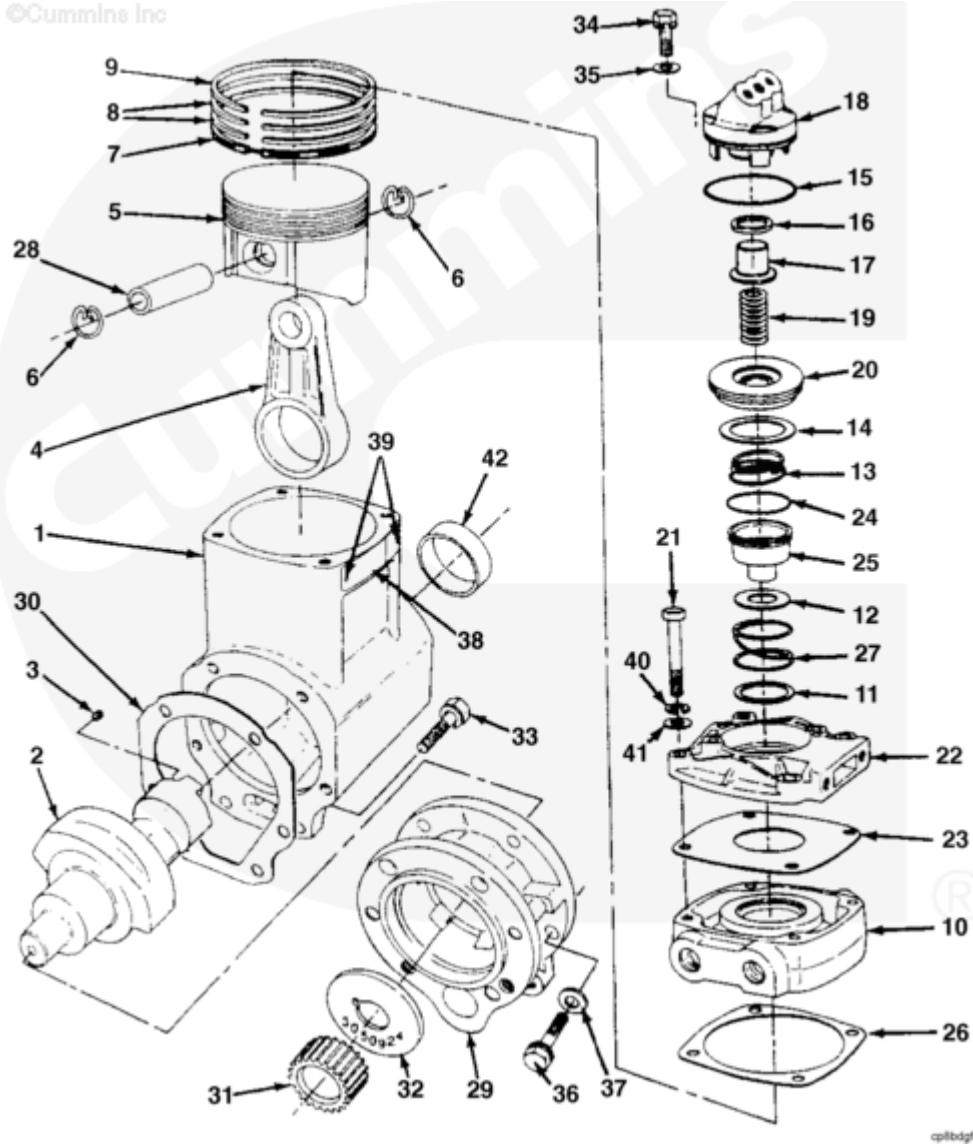

Spline Driven Air Compressor


1. Compressor crankcase
2. Air compressor crankshaft
3. Pipe plug
4. Compressor connecting rod
5. Compressor piston
6. Retaining ring
7. Oil ring
8. Compression piston ring
9. Compression piston ring
10. Compressor head
11. Wear plate
12. Exhaust valve
13. Valve intake spring
14. Intake valve
15. O-ring seal
16. Rectangular ring seal
17. Unloader cap

18. Unloading valve body
19. Compression spring
20. Compressor intake valve seat
21. Hexagon head capscrew
22. Air compressor cover
23. Air compressor gasket
24. O-ring seal
25. Compressor exhaust seat
26. Air compressor gasket
27. Exhaust valve spring
28. Piston pin
29. Air compressor support
30. Air compressor gasket
31. Spline coupling
32. Thrust bearing
33. Captive washer capscrew
34. Captive washer capscrew
35. Plain washer
36. Captive washer capscrew
37. Plain washer
38. Dataplate
39. Drive screw
40. Lockwasher
41. Plain washer.

## Cutaway View

Holset® SS296, SS296E, and SS338E A/C Model



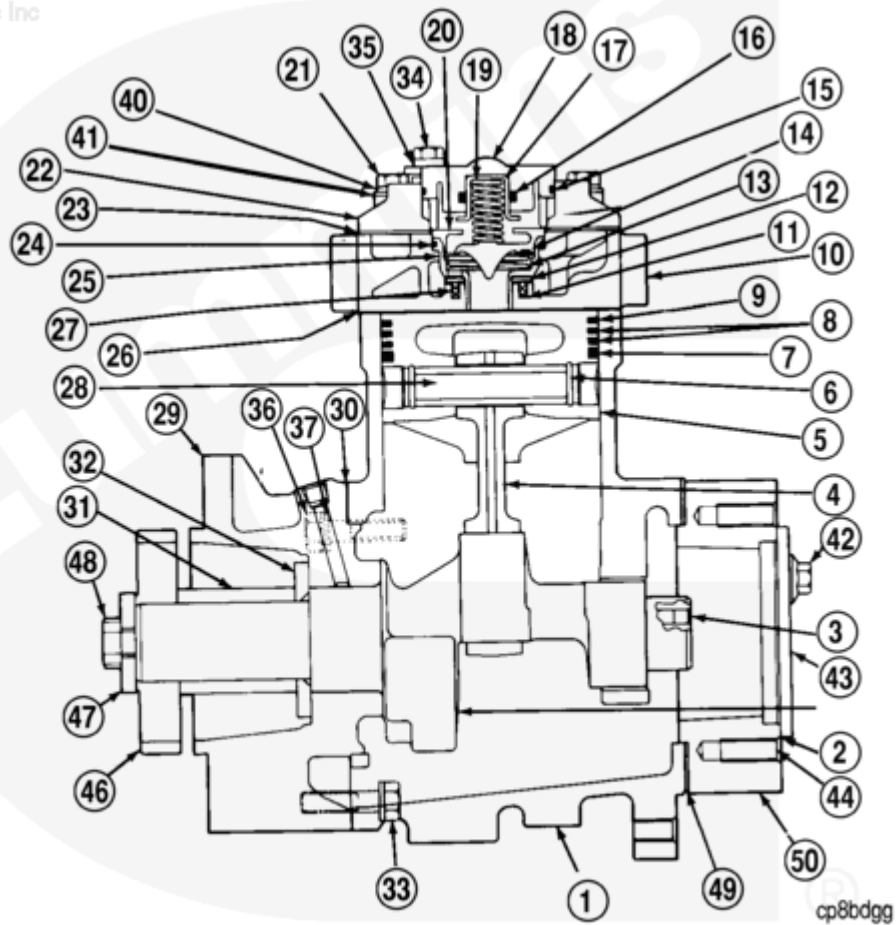


Gear Driven Air Compressor

| Reference Number | Part Name                 | Quantity (Number Required) |
|------------------|---------------------------|----------------------------|
| 1                | Compressor crankcase      | 1                          |
| 2                | Air compressor crankshaft | 2                          |
| 3                | Pipe plug                 | 1                          |
| 4                | Compressor connecting rod | 1                          |
| 5                | Compressor piston         | 1                          |
| 6                | Retaining ring            | 2                          |
| 7                | Oil ring                  | 1                          |
| 8                | Compression piston ring   | 2                          |
| 9                | Compression piston ring   | 1                          |
| 10               | Compressor head           | 1                          |
| 11               | Wear plate                | 1                          |
| 12               | Exhaust valve             | 1                          |
| 13               | Valve intake spring       | 1                          |
| 14               | Intake valve              | 1                          |
| 15               | O-ring seal               | 1                          |

| Reference Number | Part Name                    | Quantity (Number Required) |
|------------------|------------------------------|----------------------------|
| 16               | Rectangular ring seal        | 1                          |
| 17               | Unloader cap                 | 1                          |
| 18               | Unloading valve body         | 1                          |
| 19               | Compression spring           | 1                          |
| 20               | Compressor intake valve seat | 1                          |
| 21               | Hexagon head capscrew        | 4                          |
| 22               | Air compressor cover         | 1                          |
| 23               | Air compressor gasket        | 1                          |
| 24               | O-ring seal                  | 1                          |
| 25               | Compressor exhaust seat      | 1                          |
| 26               | Air compressor gasket        | 1                          |
| 27               | Exhaust valve spring         | 1                          |
| 28               | Piston pin                   | 1                          |
| 29               | Air compressor support       | 1                          |
| 30               | Air compressor gasket        | 1                          |
| 31               | Mounting spacer              | 1                          |
| 32               | Thrust bearing               | 1                          |
| 33               | Captive washer capscrew      | 1                          |
| 34               | Captive washer capscrew      | 2                          |
| 35               | Plain washer                 | 2                          |
| 36               | Captive washer capscrew      | 2                          |
| 37               | Plain washer                 | 4                          |
| 38               | Nameplate                    | 4                          |
| 39               | Drive screw                  | 1                          |
| 40               | Lockwasher                   | 2                          |
| 41               | Plain washer                 | 4                          |
| 42               | Hexagon head capscrew        | 4                          |
| 43               | Cover plate                  | 2                          |
| 44               | Hydraulic pump gasket        | 1                          |
| 45               | Fuel pump gasket             | 1                          |
| 46               | Accessory drive gear         | 1                          |
| 47               | Plain washer                 | 1                          |
| 48               | Twelve point capscrew        | 1                          |
| 49               | Hydraulic pump adapter       | 1                          |
| 50               | Socket head capscrew         | 1                          |

## Exploded View

Holset® SS296, SS296E, and SS338E A/C Model

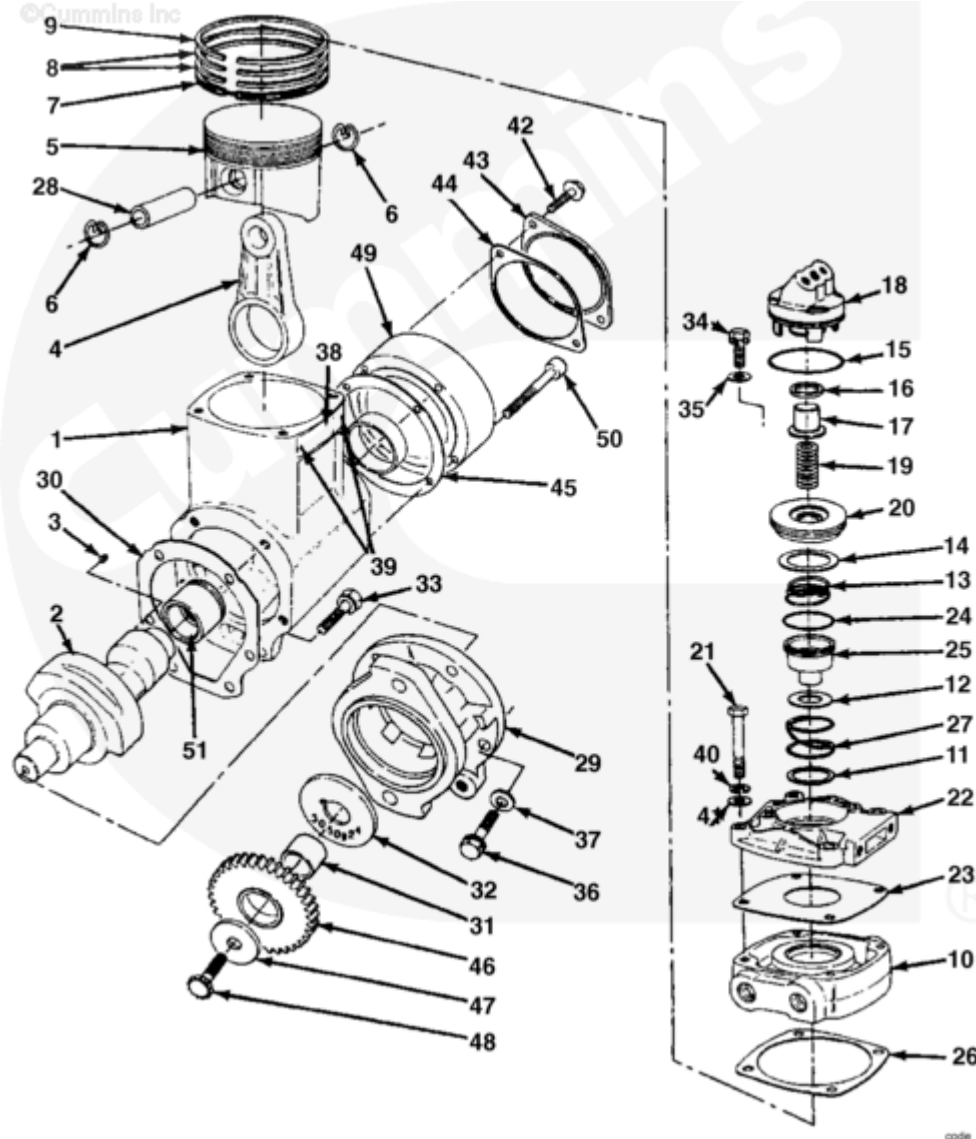

Gear Driven Air Compressor


1. Compressor crankcase
2. Air compressor crankshaft
3. Plug pipe
4. Compressor connecting rod
5. Compressor piston
6. Retaining ring
7. Oil ring
8. Compression piston ring
9. Compression piston ring
10. Compressor head

11. Wear plate
12. Exhaust valve
13. Valve intake spring
14. Intake valve
15. O-ring seal
16. Rectangular ring seal
17. Unloader cap
18. Unloading valve body
19. Compression spring
20. Compressor intake valve seat
21. Hexagon head capscrew
22. Air compressor cover
23. Air compressor gasket
24. O-ring seal
25. Compressor exhaust seat
26. Air compressor gasket
27. Exhaust valve spring
28. Piston pin
29. Air compressor support
30. Air compressor gasket
31. Mounting spacer
32. Thrust bearing
33. Captive washer capscrew
34. Captive washer capscrew
35. Plain washer
36. Captive washer capscrew
37. Plain washer
38. Nameplate
39. Drive screw
40. Lockwasher
41. Plain washer
42. Hexagon head capscrew
43. Cover plate
44. Hydraulic pump gasket
45. Fuel pump gasket
46. Accessory drive gear
47. Plain washer
48. Twelve point capscrew
49. Hydraulic pump adapter
50. Socket head capscrew.

# Cutaway View

Holset® QE230, QE296, and QE338 A/C Model

©Cummins Inc

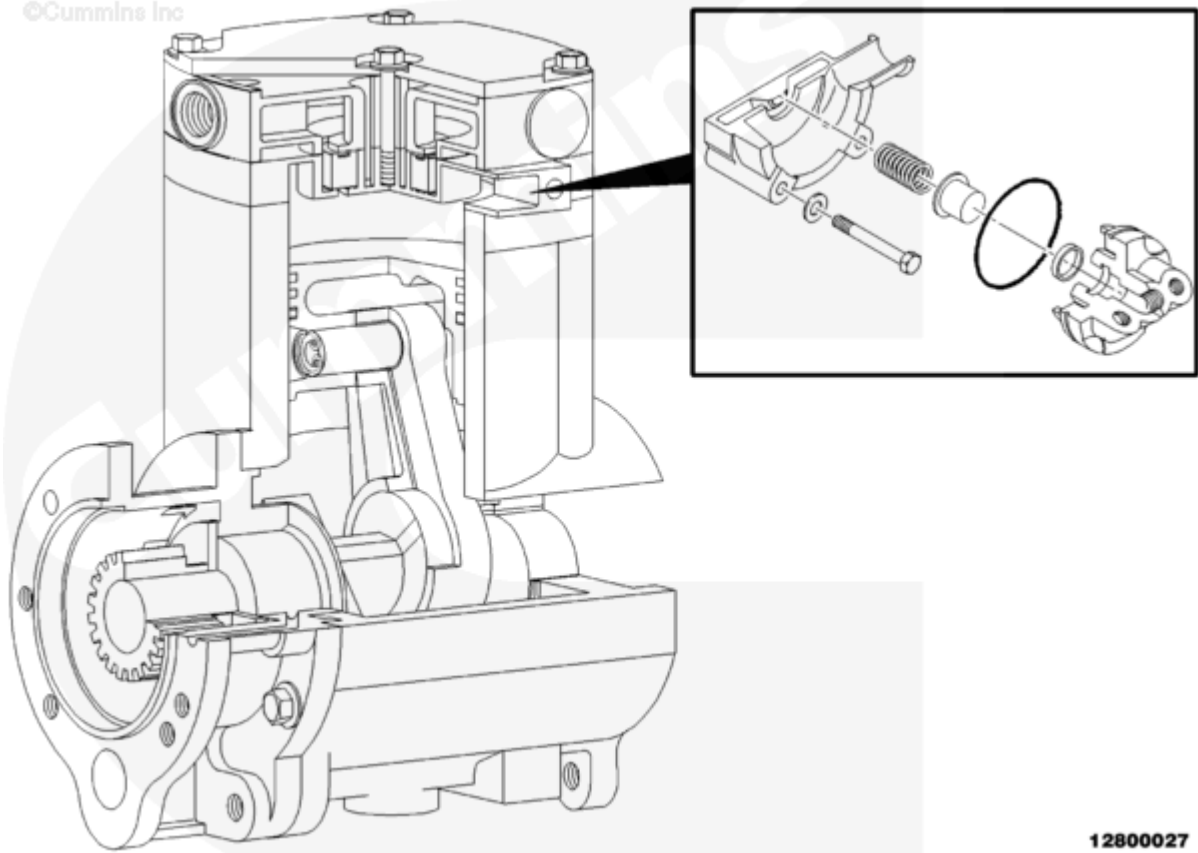


Gear Driven Air Compressor

| Reference Number | Part Name                             | Quantity (Number Required) |
|------------------|---------------------------------------|----------------------------|
| 1                | Heavy hexagon nut                     | 2                          |
| 2                | Plain washer                          | 2                          |
| 3                | Air compressor spline coupling sleeve | 1                          |
| 4                | Hexagon head capscrew                 | 2                          |
| 5                | Hexagon head capscrew                 | 2                          |
| 6                | Plain washer                          | 9                          |
| 7                | Piston pin                            | 1                          |
| 8                | Rectangular ring seal                 | 1                          |
| 9                | Air compressor gasket                 | 1                          |
| 10               | Oil piston ring                       | 1                          |
| 11               | Unloader valve cap                    | 1                          |
| 12               | Compression piston ring               | 1                          |
| 13               | Thrust bearing                        | 1                          |
| 14               | Compression piston ring               | 1                          |

| Reference Number | Part Name                           | Quantity (Number Required) |
|------------------|-------------------------------------|----------------------------|
| 15               | Compression crankshaft              | 1                          |
| 16               | Pipe plug                           | 1                          |
| 17               | Air compressor support              | 1                          |
| 18               | Captive washer capscrew             | 4                          |
| 19               | Captive washer capscrew             | 2                          |
| 20               | Compressor connecting rod           | 1                          |
| 21               | Bushing                             | 1                          |
| 22               | Spline coupling hub                 | 1                          |
| 23               | O-ring seal                         | 1                          |
| 24               | Compressor piston                   | 1                          |
| 25               | Compression spring                  | 1                          |
| 26               | Support gasket                      | 1                          |
| 27               | Compressor bushing<br>crankcase     | 1                          |
| 28               | Compressor crankcase                | 1                          |
| 29               | Compressor intake valve             | 1                          |
| 30               | Compressor exhaust valve            | 1                          |
| 31               | Air compressor gasket               | 1                          |
| 32               | Air compressor gasket               | 1                          |
| 33               | Valve disc retainer                 | 1                          |
| 34               | Spring washer                       | 2                          |
| 35               | Nameplate                           | 1                          |
| 36               | Connection gasket                   | 1                          |
| 37               | Drive screw                         | 2                          |
| 38               | Retaining ring                      | 2                          |
| 39               | Hexagon head capscrew               | 1                          |
| 40               | Hexagon head capscrew               | 4                          |
| 41               | Compressor valve body               | 1                          |
| 42               | Compressor intake valve<br>retainer | 1                          |
| 43               | Cover plate                         | 1                          |
| 44               | Compressor head                     | 1                          |
| 45               | Unloading valve body                | 1                          |
| 46               | Air compressor inlet<br>connection  | 1                          |
| 47               | Captive washer capscrew             | 4                          |
| 48               | Air compressor gasket               | 4                          |

## Exploded View

Holset® QE230, QE296, and QE338 A/C Model

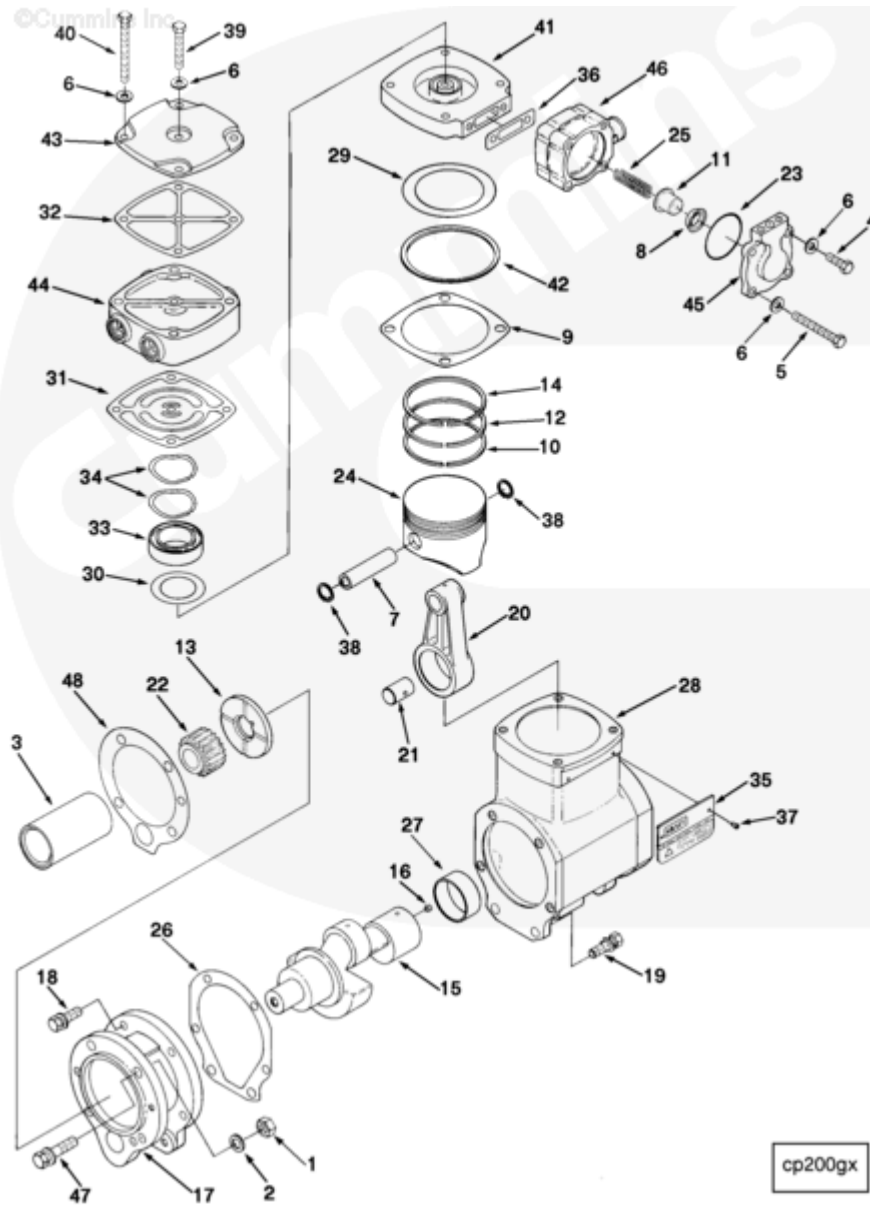

Gear Driven Air Compressor

1. Heavy hexagon nut
2. Plain washer
3. Air compressor spline coupling sleeve
4. Hexagon head capscrew
5. Hexagon head capscrew
6. Plain washer


7. Piston pin
8. Rectangular ring seal
9. Air compressor gasket
10. Oil piston ring
11. Unloader valve cap
12. Compression piston ring
13. Thrust bearing
14. Compression piston ring
15. Compression crankshaft
16. Pipe plug
17. Air compressor support
18. Captive washer capscrew
19. Captive washer capscrew
20. Compressor connecting rod
21. Bushing
22. Spline coupling hub
23. O-ring seal
24. Compressor piston
25. Compression spring
26. Support gasket
27. Compressor bushing crankcase
28. Compressor crankcase
29. Compressor intake valve
30. Compressor exhaust valve
31. Air compressor gasket
32. Air compressor gasket
33. Valve disc retainer
34. Spring washer
35. Nameplate
36. Connection gasket
37. Drive screw
38. Retaining ring
39. Hexagon head capscrew
40. Hexagon head capscrew
41. Compressor valve body
42. Compressor intake valve retainer
43. Cover plate
44. Compressor head
45. Unloading valve body
46. Air compressor inlet connection
47. Captive washer capscrew
48. Air compressor gasket.



# Cutaway View

Holset® ST676 A/C Model

©Cummins Inc

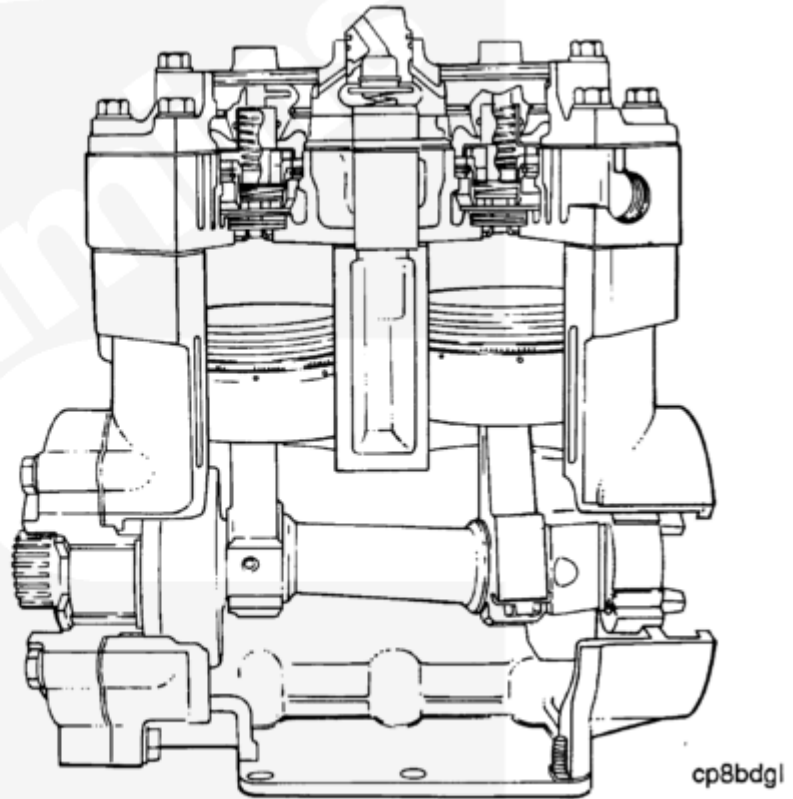

Coupling Driven Two Cylinder Air Compressor

| Reference Number | Part Name                  | Quantity (Number Required) |
|------------------|----------------------------|----------------------------|
| 1                | Pipe plug                  | 3                          |
| 2                | Crankshaft                 | 1                          |
| 3                | Support                    | 1                          |
| 4                | Bushing                    | 1                          |
| 5                | Thrust bearing (rear)      | 1                          |
| 6                | Thrust bearing (front)     | 1                          |
| 7                | Spline coupling hub        | 1                          |
| 8                | Hexagon head capscrew      | 3                          |
| 9                | Hexagon head capscrew      | 3                          |
| 10               | Lockwasher                 | 3                          |
| 11               | Pipe plug                  | 1                          |
| 12               | Plain washer               | 4                          |
| 13               | Rectangular ring seal      | 3                          |
| 14               | Unloading valve cap spring | 1                          |
| 15               | Unloader valve cap         | 2                          |


| Reference Number | Part Name             | Quantity (Number Required) |
|------------------|-----------------------|----------------------------|
| 16               | Unloader cap          | 2                          |
| 17               | O-ring seal           | 2                          |
| 18               | Unloader cap spring   | 2                          |
| 19               | Cover                 | 1                          |
| 20               | Unloading body        | 2                          |
| 21               | Unloading valve body  | 1                          |
| 22               | Retaining clamp       | 1                          |
| 23               | O-ring seal           | 1                          |
| 24               | O-ring seal           | 1                          |
| 25               | O-ring seal           | 1                          |
| 26               | Exhaust valve         | 2                          |
| 27               | Exhaust valve spring  | 2                          |
| 28               | O-ring seal           | 2                          |
| 29               | Exhaust valve seat    | 2                          |
| 30               | Intake valve          | 2                          |
| 31               | Intake valve seat     | 2                          |
| 32               | Wear plate            | 2                          |
| 33               | Cover plate           | 1                          |
| 34               | Head gasket           | 1                          |
| 35               | Intake valve spring   | 2                          |
| 36               | Head                  | 1                          |
| 37               | Hexagon head capscrew | 8                          |
| 38               | Pipe plug             | 2                          |
| 39               | Lockwasher            | 4                          |
| 40               | Twelve point capscrew | 4                          |
| 41               | Support gasket        | 1                          |
| 42               | Hexagon head capscrew | 2                          |
| 43               | Access cover gasket   | 1                          |
| 44               | Access cover          | 1                          |
| 45               | Bushing               | 1                          |
| 46               | Pipe plug             | 1                          |
| 47               | Crankcase             | 1                          |
| 48               | Hexagon head capscrew | 3                          |
| 49               | Flat head capscrew    | 3                          |
| 50               | Piston pin            | 2                          |
| 51               | Retaining ring        | 4                          |

| Reference Number | Part Name               | Quantity (Number Required) |
|------------------|-------------------------|----------------------------|
| 52               | Piston                  | 2                          |
| 53               | First compression ring  | 2                          |
| 54               | Second compression ring | 2                          |
| 55               | Oil ring                | 2                          |
| 56               | Connecting rod          | 2                          |
| 57               | Hexagon head capscrew   | 4                          |
| 58               | Lockplate               | 4                          |

## Exploded View

Holset® ST676 A/C Model



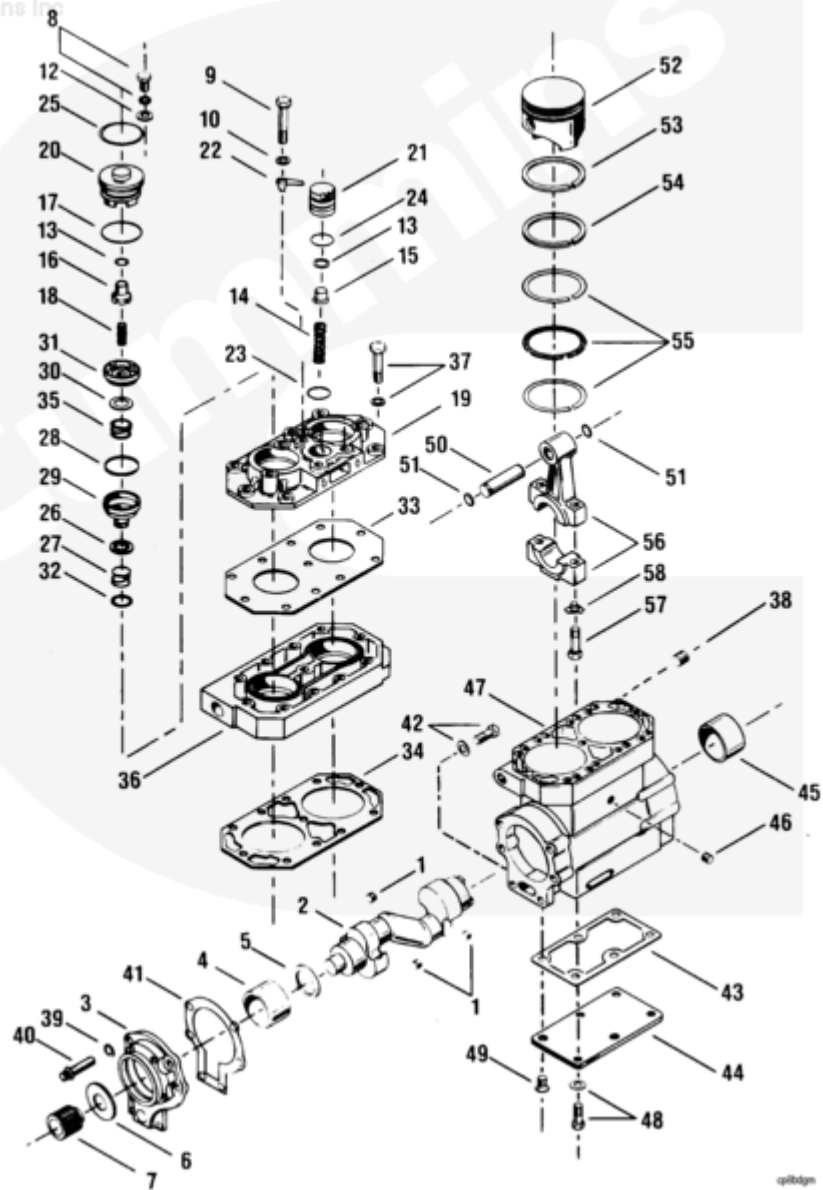


Coupling Driven Two Cylinder Air Compressor

1. Pipe plug
2. Crankshaft
3. Support
4. Bushing
5. Thrust bearing (rear)
6. Thrust bearing (front)
7. Spline coupling hub
8. Hexagon head capscrew
9. Hexagon head capscrew
10. Lockwasher
11. Pipe plug
12. Plain washer
13. Rectangular ring seal
14. Unloader valve cap spring
15. Unloader valve cap

16. Unloader cap
17. O-ring seal
18. Unloader cap spring
19. Cover
20. Unloading body
21. Unloading valve body
22. Retaining clamp
23. O-ring seal
24. O-ring seal
25. O-ring seal
26. Exhaust valve
27. Exhaust valve spring
28. O-ring seal
29. Exhaust valve seat
30. Intake valve
31. Intake valve seat
32. Wear plate
33. Cover gasket
34. Head gasket
35. Intake valve spring
36. Head
37. Hexagon head capscrew
38. Pipe plug
39. Lockwasher
40. Twelve point capscrew
41. Support gasket
42. Hexagon head capscrew
43. Access cover gasket
44. Access cover
45. Bushing
46. Pipe plug
47. Crankcase
48. Hexagon head capscrew
49. Flat head capscrew
50. Piston pin
51. Retaining ring
52. Piston
53. First compression ring
54. Second compression ring
55. Oil ring
56. Connecting rod
57. Hexagon head capscrew
58. Lockplate.

# Cutaway View

Holset® ST773 A/C Model

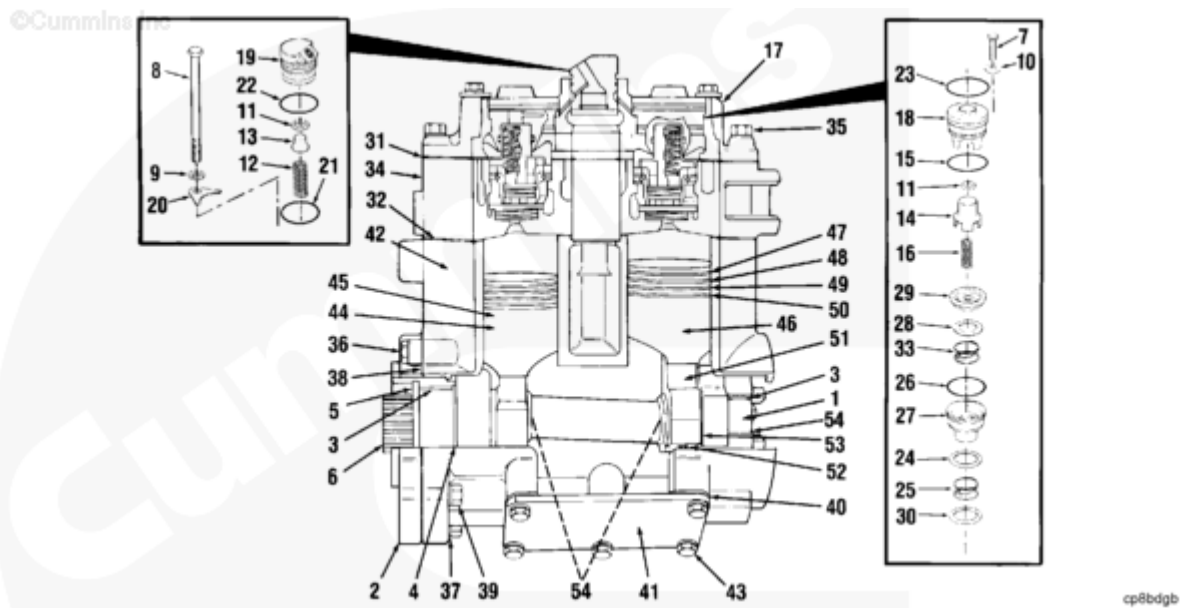

Coupling Driven Two Cylinder Air Compressor


| Reference Number | Part Name                  | Quantity (Number Required) |
|------------------|----------------------------|----------------------------|
| 1                | Crankshaft                 | 1                          |
| 2                | Support                    | 1                          |
| 3                | Bushing                    | 2                          |
| 4                | Thrust bearing (rear)      | 1                          |
| 5                | Thrust bearing (front)     | 1                          |
| 6                | Spline coupling hub        | 1                          |
| 7                | Hexagon head capscrew      | 4                          |
| 8                | Hexagon head capscrew      | 3                          |
| 9                | Lockwasher                 | 3                          |
| 10               | Plain washer               | 4                          |
| 11               | Rectangular ring seal      | 3                          |
| 12               | Unloading valve cap spring | 1                          |
| 13               | Unloading valve cap        | 2                          |
| 14               | Unloader cap               | 2                          |
| 15               | O-ring seal                | 2                          |
| 16               | Unloader cap spring        | 2                          |
| 17               | Cover                      | 1                          |
| 18               | Unloading body             | 2                          |
| 19               | Unloading valve body       | 1                          |

| Reference Number | Part Name               | Quantity (Number Required) |
|------------------|-------------------------|----------------------------|
| 20               | Retaining clamp         | 1                          |
| 21               | O-ring seal             | 1                          |
| 22               | O-ring seal             | 1                          |
| 23               | O-ring seal             | 2                          |
| 24               | Exhaust valve           | 2                          |
| 25               | Exhaust valve spring    | 2                          |
| 26               | O-ring seal             | 2                          |
| 27               | Exhaust valve seat      | 2                          |
| 28               | Intake valve            | 2                          |
| 29               | Intake valve seat       | 2                          |
| 30               | Wear plate              | 2                          |
| 31               | Cover gasket            | 1                          |
| 32               | Head gasket             | 1                          |
| 33               | Intake valve spring     | 2                          |
| 34               | Head                    | 1                          |
| 35               | Captive washer capscrew | 8                          |
| 36               | Hexagon head capscrew   | 4                          |
| 37               | Flat washer             | 4                          |
| 38               | Support gasket          | 1                          |
| 39               | Captive washer capscrew | 2                          |
| 40               | Access cover gasket     | 1                          |
| 41               | Access cover            | 1                          |
| 42               | Crankcase               | 1                          |
| 43               | Captive washer capscrew | 6                          |
| 44               | Piston pin              | 2                          |
| 45               | Retaining ring          | 4                          |
| 46               | Piston                  | 2                          |
| 47               | First compression ring  | 2                          |
| 48               | Second compression ring | 2                          |
| 49               | Third compression ring  | 2                          |
| 50               | Oil ring                | 2                          |
| 51               | Connecting rod          | 2                          |
| 52               | Hexagon head capscrew   | 4                          |
| 53               | Lockplate               | 4                          |
| 54               | Pipe plug               | 3                          |

# Exploded View

Holset® ST773 A/C Model

©Cummins Inc

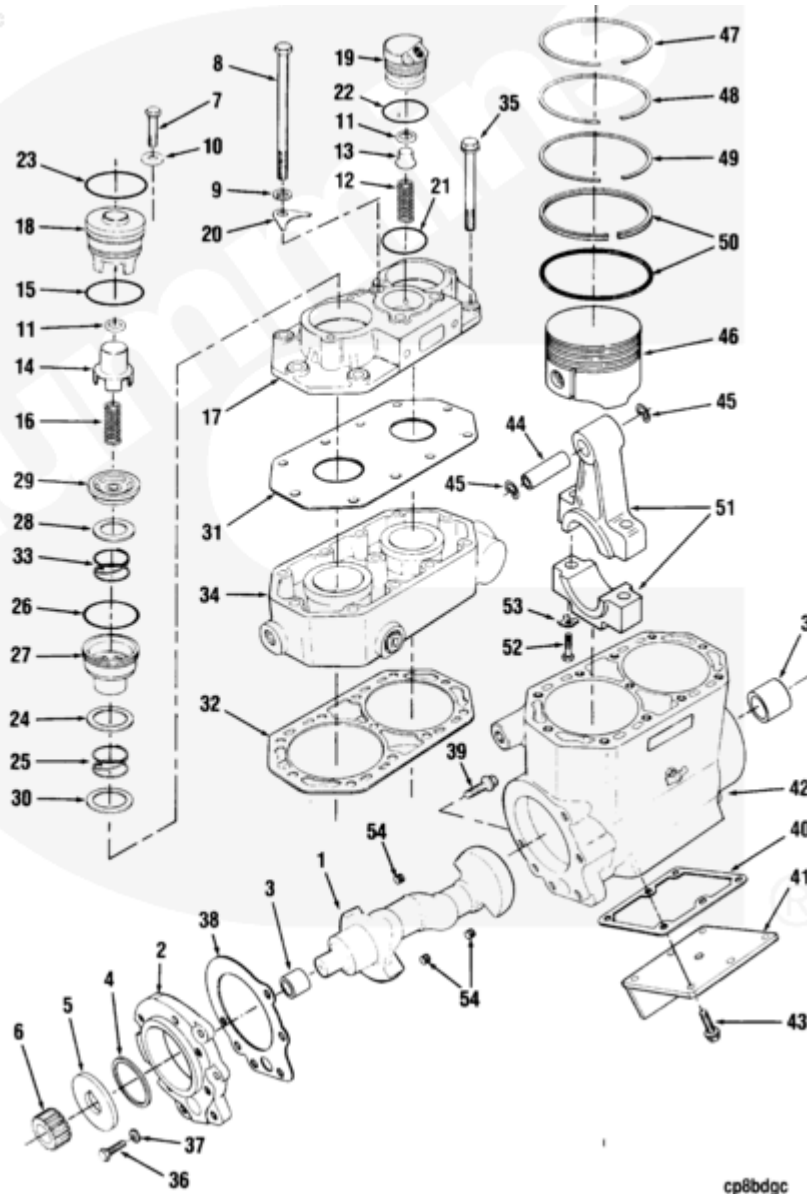

Coupling Driven Two Cylinder Air Compressor

1. Crankshaft
2. Support
3. Bushing
4. Thrust bearing (rear)
5. Thrust bearing (front)
6. Spline coupling hub
7. Hexagon head capscrew
8. Hexagon head capscrew



9. Lockwasher
10. Plain washer
11. Rectangular ring seal
12. Unloading valve cap spring
13. Unloading valve cap
14. Unloader cap
15. O-ring seal
16. Unloader cap spring
17. Cover
18. Unloading body
19. Unloading valve body
20. Retaining clamp
21. O-ring seal
22. O-ring seal
23. O-ring seal
24. Exhaust valve
25. Exhaust valve spring
26. O-ring seal
27. Exhaust valve seat
28. Intake valve
29. Intake valve seat
30. Wear plate
31. Cover gasket
32. Head gasket
33. Intake valve spring
34. Head
35. Captive washer capscrew
36. Hexagon head capscrew
37. Flat washer
38. Support gasket
39. Captive washer capscrew
40. Access cover gasket
41. Access cover
42. Crankcase
43. Captive washer capscrew
44. Piston pin
45. Retaining ring
46. Piston
47. First compression ring
48. Second compression ring
49. Third compression ring
50. Oil ring
51. Connecting rod
52. Hexagon head capscrew
53. Lockplate

54. Pipe plug

---

**Last Modified: 13-Jun-2005**

---