


Trainings ▾

Remove

Disconnect the marine OEM harness and engine harness connectors from the ECM.


Record all of the programmable parameters, features, and calibration information from the old ECM for programming the new ECM.

Refer to Procedure 019-032
(</qs3/pubsys2/xml/en/procedures/07/07-019-032.html>) for calibration of a new ECM.

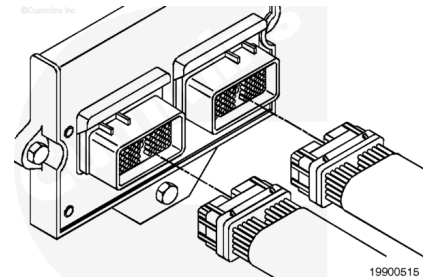

Remove the three capscrews that mount the ECM to the mounting bracket.

Remove the ECM from the mounting bracket.

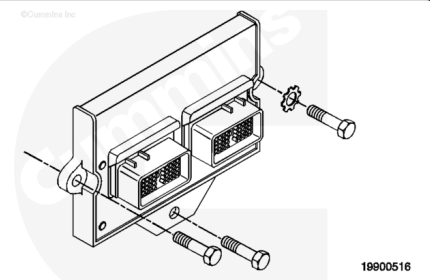


Install

⚠ CAUTION ⚠

Do not blow compressed air into the ECM ports or connectors. Compressed air can contain moisture due to condensation.

Use quick-dry electrical contact cleaner, Part Number 3824510, to remove all dirt and moisture from the ECM connector ports and the harness connectors.

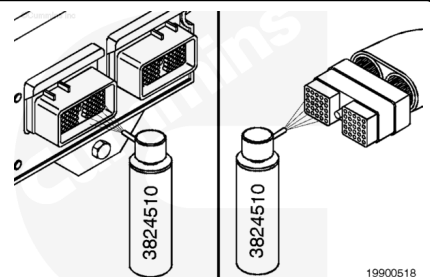


Make sure there is no grease or dirt between the ECM and the mounting bracket.

Install the new ECM onto the mounting bracket.


Tighten the three mounting capscrews.

Torque Value: 8 n•m [71 in-lb]

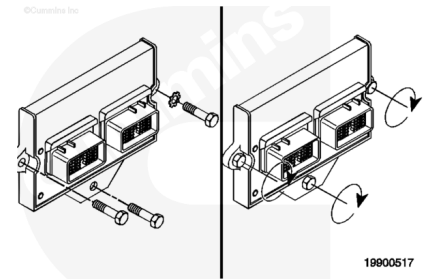

⚠ CAUTION ⚠


Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.

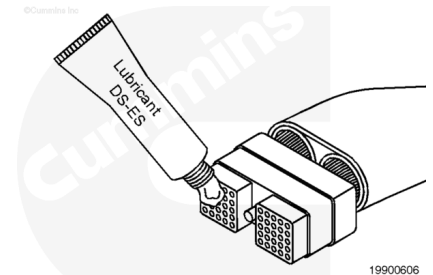

Apply a thin coating of lubricant to the connector nosepiece.

Spread the lubricant across the connector nosepiece so it enters every pin hole and lubricates the contacts.

Lubricant **must not** be visible on the surface of the nosepiece.

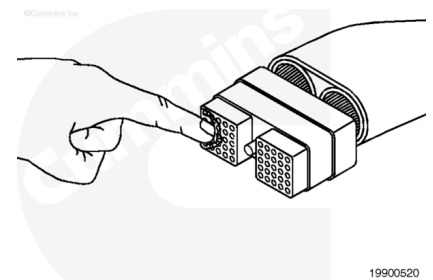

Connect the OEM and engine harness connectors to the ECM.

Tighten the connector capscrews.

Torque Value: 3 n•m [27 in-lb]

When an ECM is replaced, the new ECM **must** be calibrated using an electronic service tool.

