


Trainings ▾

General Information


C Series engines use two separate wiring harnesses to control the engine and some of the vehicle operations:

1. Engine harness
2. Marine original equipment manufacturer (OEM) harness.

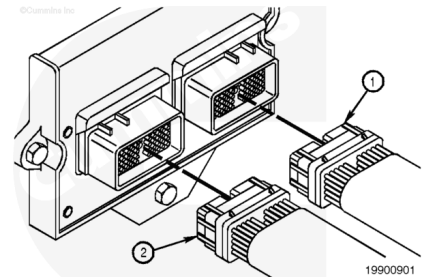


Remove

Remove the harness clamps from the support bracket of the engine block.

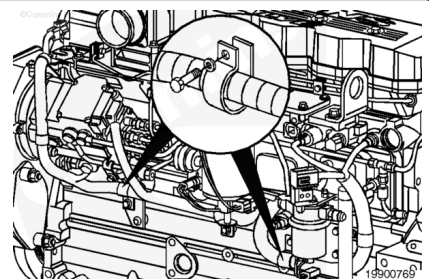


Disconnect the fuel lift pump connector.

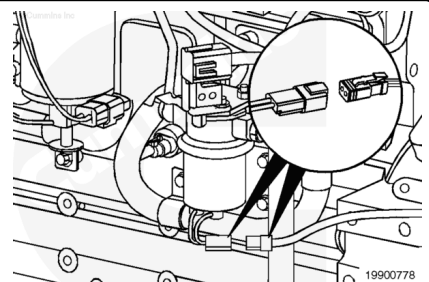

Disconnect the harness from the following:

1. Engine coolant temperature sensor
2. Fuel shut off
3. Oil pressure sensor
4. Intake manifold temperature sensor
5. Intake manifold pressure sensor

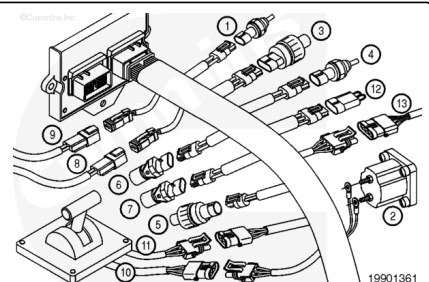


6. Primary speed sensor
7. Secondary speed sensor.


Unplug the following:

8. Heater relay control
9. Bosch® RE governor
10. Throttle connector
11. Idle validation
12. Neutral safety jumper plug
13. Unswitched battery supply + connector.

Remove the datalink connector from the mounting bracket.

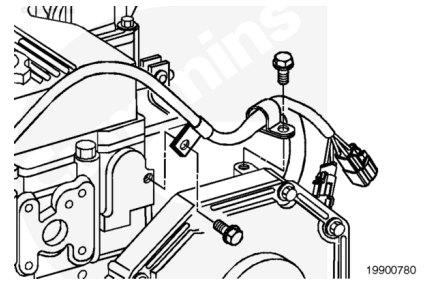


Disconnect the engine harness from the electronic control module (ECM).

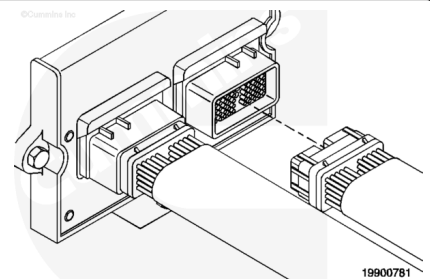


Inspect for Reuse

If an open or short circuit is found under the protective covering of the harness, repair or replace the engine harness.

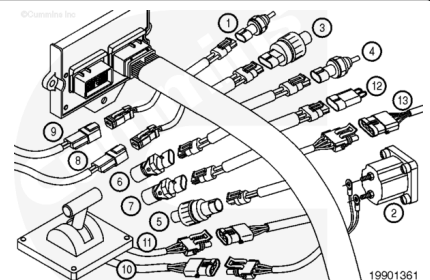


Install

Connect the engine harness to the ECM.

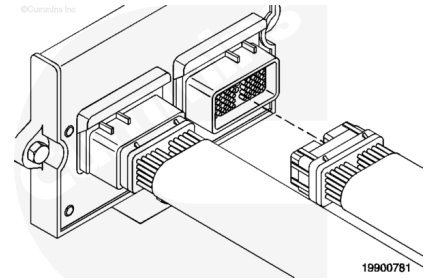


Install the datalink connector to the mounting bracket.

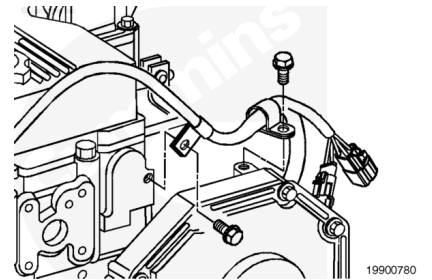

Connect the harness to the following:


1. Engine coolant temperature sensor
2. Fuel shut off
3. Oil pressure sensor
4. Intake manifold temperature sensor
5. Intake manifold pressure sensor
6. Primary speed sensor
7. Secondary speed sensor.

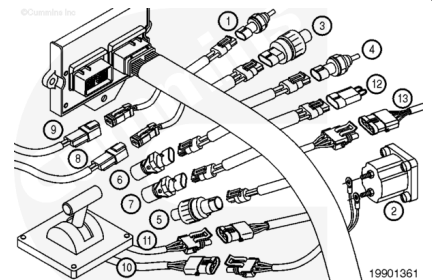


Plug in the following:

8. Heater relay control
9. Bosch® RE governor
10. Throttle connector
11. Idle validation
12. Neutral safety jumper plug
13. Unswitched battery supply + connector.

Connect the fuel lift pump connector.

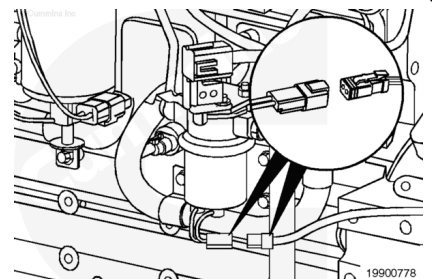

Install the harness clamps that hold the engine harness to the block.

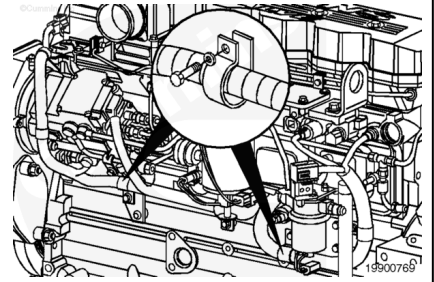

Last Modified: 09-Dec-2003
