



Trainings ▾

Remove

Lift the locking tab and pull the electrical connectors apart.

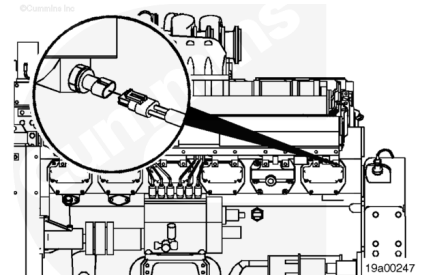


Remove the sensor from the engine.

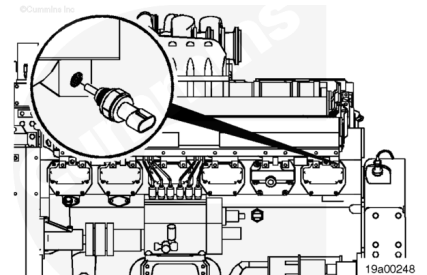

Install


Make sure the new sensor has an o-ring around the surface where it seals against the engine block.

Lubricate the o-ring with clean engine oil.

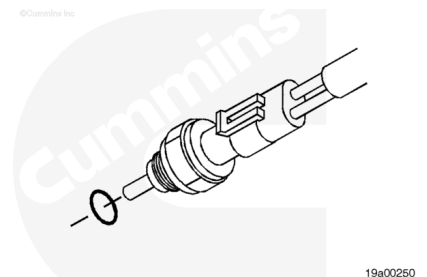


Install the sensor in the engine block.

Torque Value: 14 n•m [124 in-lb]

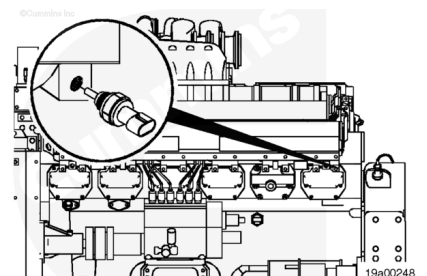


⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.

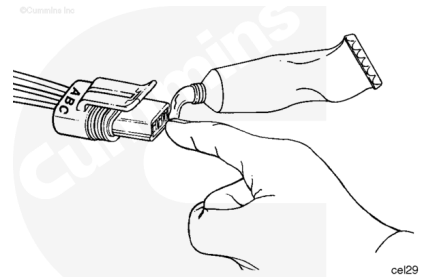


Apply a small amount of lubricant to the connector terminals.
Before installing, fill the entire connector cavity with lubricant.

Push the connectors together until they lock.

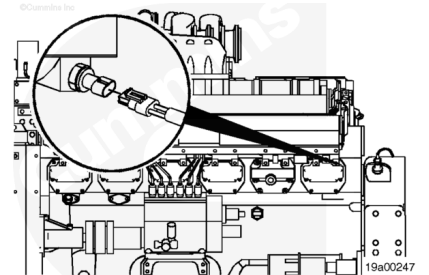

Resistance Check

Lift the locking tab and pull the electrical connectors apart.

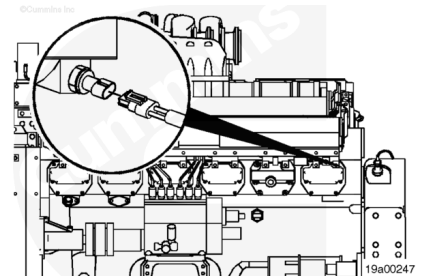


Use a multimeter to measure the resistance between the two pins of the intake air temperature sensor.

The resistance **must** be 600 ohms to 36k ohms*.

If the resistance is **not** within specifications, replace the sensor.

If the resistance is within specifications, the sensor **must** still be checked for a short to ground.

* The resistance value is temperature-dependent as follows:

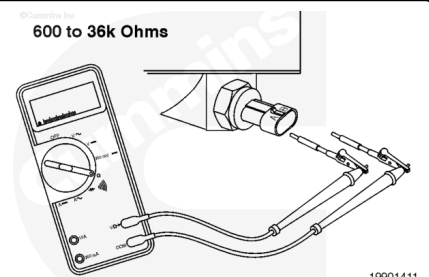

Temperature		Acceptable Resistance Range
°C	°F	(ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Check for Short Circuit to Ground

Measure the resistance from one of the pins of the intake air temperature sensor to the engine block.

The multimeter **must** show an open circuit (more than 100k ohms).

If the circuit is **not** open, replace the sensor.

