


## Trainings ▾


### Initial Check

Connect the INSITE™ electronic service tool to the vehicle datalink.

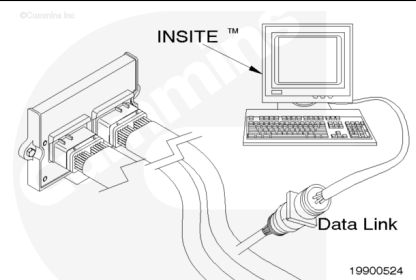

Install a 0- to 2030-mm Hg [0- to 80-in Hg] manometer (or gauge) in the 3/8-inch pipe plug hole in the aftercooler housing.


Do **not** drill and tap a hole in the aftercooler cover. A faulty reading can result if the aftercooler core is leaking.

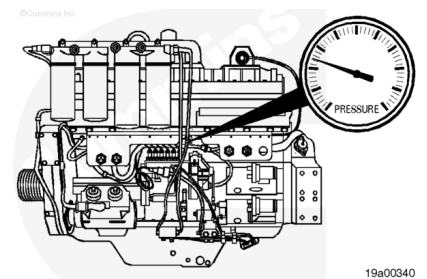

Operate the engine at rated rpm and full load.


Compare the reading from the electronic service tool to the gauge reading.

If the electronic service tool reading differs by more than 75 mm Hg [3 in Hg] from the gauge reading, replace the intake manifold pressure sensor.

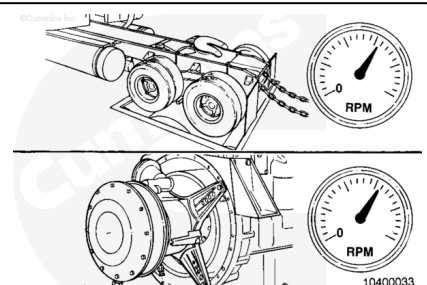


### Remove

Lift up on the tab and disconnect the connector from the sensor.

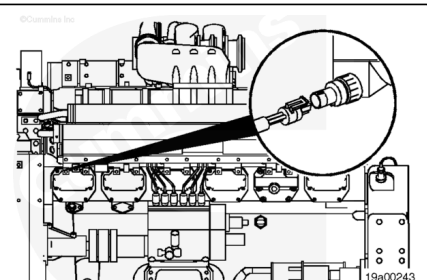


Remove the sensor from the air intake manifold with a deep flank drive socket, Part Number 3823843.

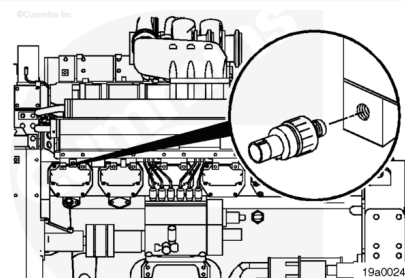

## Install


Make sure the new sensor has an o-ring around the surface where it seals against the air intake manifold.

Lubricate the o-ring with clean engine oil.

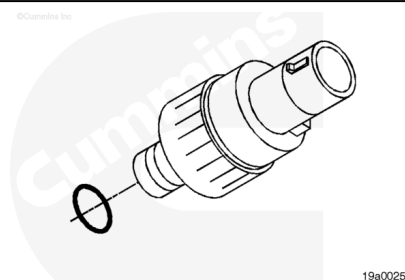


Install the sensor into the air intake manifold by turning it **clockwise**.

**Torque Value:** 14 n•m [ 124 in-lb ]

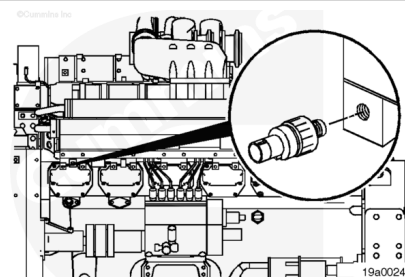

### **⚠ CAUTION ⚠**


**Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector pin wear.**

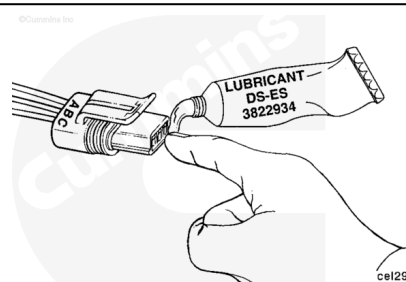

Apply a small amount of lubricant to the connector terminals.

Fill the entire cavity with lubricant before installing.

Push the harness connector into the sensor until it locks.

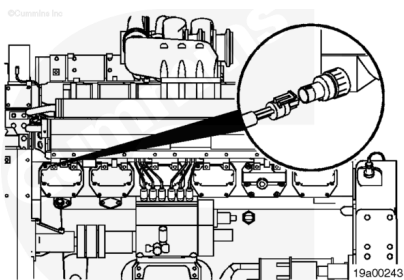

---

**Last Modified: 01-Dec-2003**

---