



Trainings ▾

Remove

Lift up on the tab and disconnect the connector from the sensor.

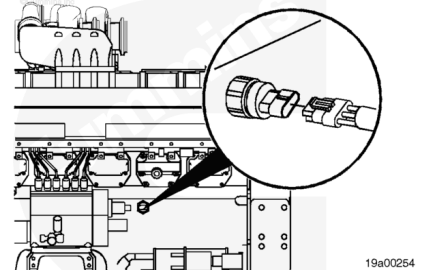


Remove the sensor from the engine block. Use a deep flank drive socket, Part Number 3823843.

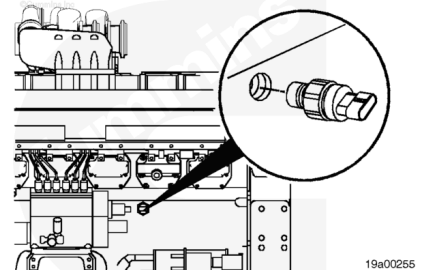

Install


Make sure the new sensor has an o-ring around the surface where it seals against the engine block.

Lubricate the o-ring with clean engine oil.

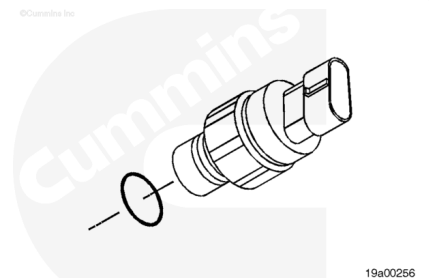


Install the sensor in the engine block.

Torque Value: 14 n•m [124 in-lb]

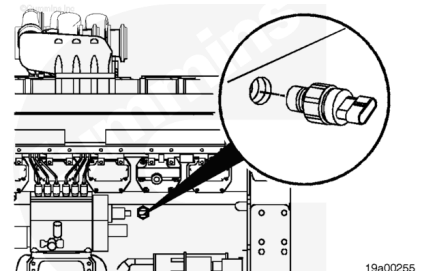

Push the connectors together until they lock.

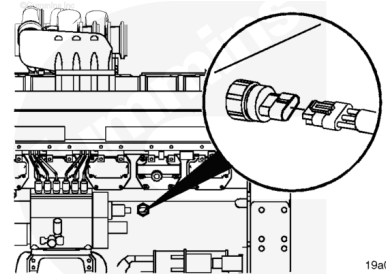

19a00254

Last Modified: 01-Dec-2003
