

Fault Code: B


Multiple Fault Code B

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: B PID(P): SPN: FMI: Lamp: SRT:	Multiple fault codes are generated due to a common supply or return wire failure in the engine harness.	Fault Codes 123 and 141 are active.

©Cummins Inc

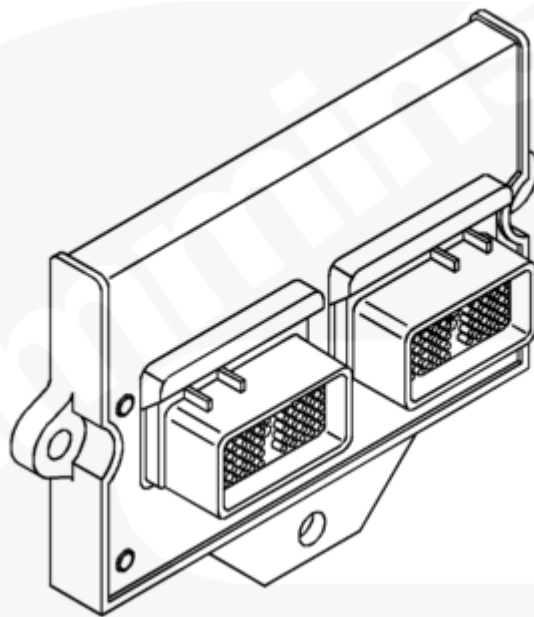

19900397

Electronic Control Module (ECM)

Circuit Description

The electronic control module (ECM) supplies all engine pressure sensors on the engine harness with +5 VDC. The ECM has common returns for all the engine pressure and temperature sensors. Reference the wiring diagram, Bulletin 4021331, for the pin assignments of these circuits. A failure on either of these circuits causes multiple fault codes.

Component Location

Reference Section E for a detailed component location view. The ECM is located at the top of the engine, mounted to the air intake manifold.

Shoptalk

An open circuit in the common supply and return wires, short circuits from battery or ground to the supply, or a defective ECM power supply can cause multiple fault codes.

A failed pressure sensor can cause multiple fault codes.

A failed pressure sensor can cause multiple active fault codes to go inactive once the engine has been started.

Refer to Troubleshooting Fault Code t05-mfc02 (</qs3/pubsys2/xml/en/procedures/07/07-t05-mfc02.html>)

Last Modified: 18-Dec-2012
