

Trainings ▾


General Information

The front crankshaft gear has an interference fit with the crankshaft. If the gear is damaged, the crankshaft will also be damaged. If it is necessary to replace the front crankshaft gear, the crankshaft **must** be replaced. Refer to Procedure 001-016 (/qs3/pubsys2/xml/en/procedures/39/39-001-016.html) in the Troubleshooting and Repair Manual, C8.3G, C Gas Plus, and L Gas Plus Engines, Bulletin 3666206 or Procedure 001-016 (/qs3/pubsys2/xml/en/procedures/41/41-001-016.html) in the Troubleshooting and Repair Manual, C Series Engines, Bulletin 3666003.

©Cummins Inc.

Inspect for Reuse

Inspect the crankshaft gear for cracks and broken or chipped teeth.

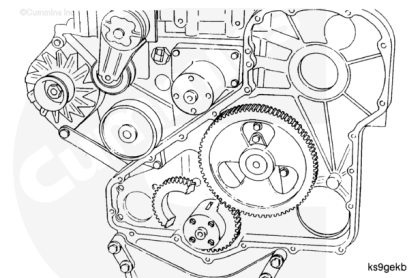

Remove any burrs with Scotch-Brite™ 7448 abrasive pad, Part Number 3823258.

