


Trainings ▾

Failure Analysis Inspection

Use a new piston ring and feeler gauge to measure the side clearance of the rectangular intermediate and oil control ring grooves.


	mm		in
Intermediate Ring	0.07	MIN	0.003
	0.15	MAX	0.006
Oil Control Ring	0.02	MIN	0.001
	0.13	MAX	0.005

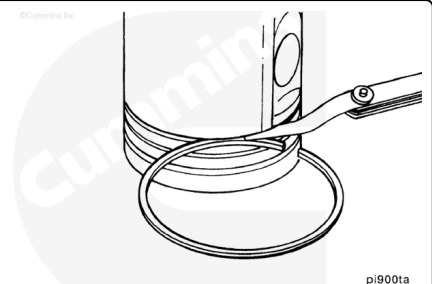

Measure the piston ring gap.


To measure the piston ring gap, use the top end of a piston to align the piston rings in the wear area of the cylinder where used.

Measurements		
	mm	in
A	80	3.5

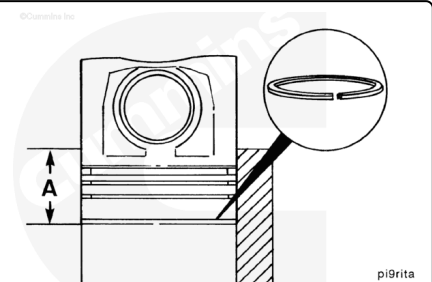

Use a feeler gauge to measure the piston ring end gap. Replace the ring if it does **not** meet the following specifications:

	mm		in
Top	0.40	MIN	0.016
	0.70	MAX	0.028
Intermediate	0.25	MIN	0.010
	0.55	MAX	0.022
Oil Control	0.25	MIN	0.010

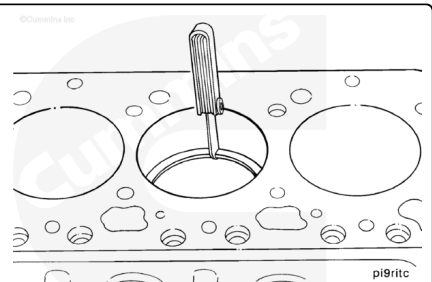

	0.55	MAX	0.022
--	------	-----	-------

Note : Add 0.09 mm [0.004 in] for every 0.03 mm [0.001 in] of bore wear, up to the maximum bore wear limit.

Identify the ring sets for installation in the cylinder where the end gap was measured.

