

Trainings ▾

Preparatory Steps

Remove the drive belt. Refer to Procedure 008-002 in Section 8 (</qs3/pubsys2/xml/en/procedures/100/100-008-002.html>).




Remove

Note : The speed ring is held in place by the same capscrews as the vibration damper.

Remove the six capscrews.

Remove the vibration damper.

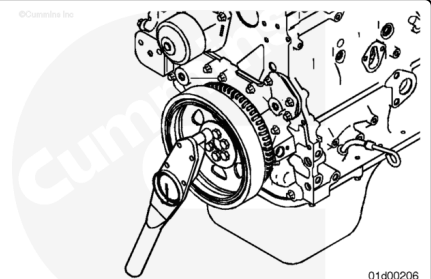


Inspect for Reuse

Check the mounting web for cracks.

Check the housing for dents or raised surfaces.

Replace the damper if damage is identified.

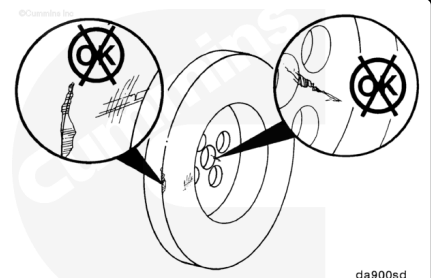


Note : The viscous damper is filled with a silicone fluid. After many hours of use, the silicone fluid can become thicker and expand.


To determine if the damper thickness is correct, remove the paint from the damper in four locations on either side of the damper.

Measure and record the thickness of the damper in four places. Measure the thickness at 80.65 mm [3.175 in] from the outside of the damper.

Replace the damper if its thickness varies by more than 6.35 mm [0.25 in].

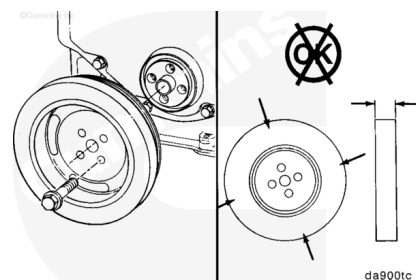

Spray the damper with spot check developer, type SKD-S2, or equivalent.

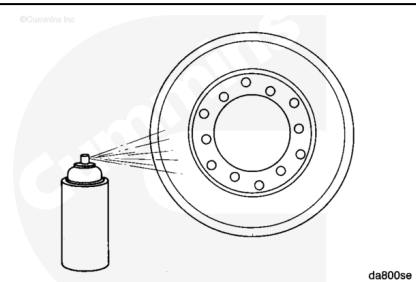


Install

Note : Align the speed ring and vibration damper with the index pin.

Lubricate the bolts with clean engine oil.


Install the vibration damper and speed ring.

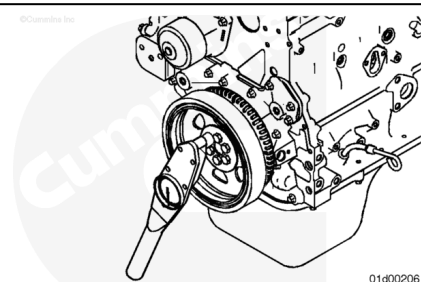

Tighten vibration damper capscrews.

Torque Value:

1. 50 N•m [37 ft-lb]
2. Rotate 90 degrees

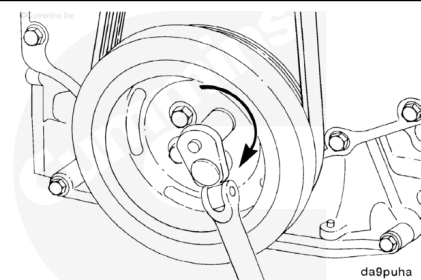

Finishing Steps

Install the drive belt. Refer to Procedure 008-002 in Section 8 (</qs3/pubsys2/xml/en/procedures/100/100-008-002.html>).

Service Tip: If difficulty is experienced installing the drive belt (the belt seems too short), position the belt over the grooved pulleys first, and then, while holding the tensioner up, slide the belt over the water pump pulley.

Operate the engine to check the vibration damper and drive belt operation.

