


Trainings ▾


Remove

Remove the rivets that secure the dataplate to the gear housing.

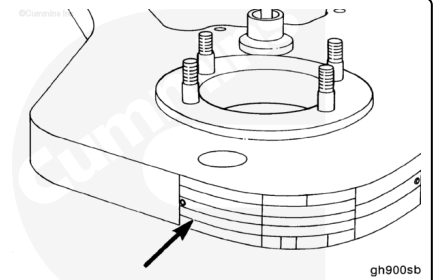


Install

Drive the rivets in until they contact the dataplate.

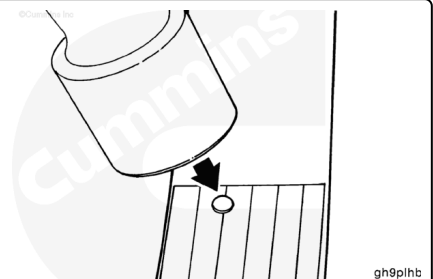


⚠ CAUTION ⚠


If the rivets are driven in too far, they will cut through the dataplates.

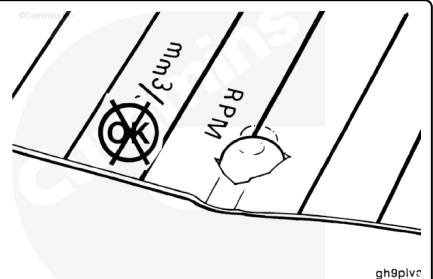

If the dataplate is loose or has been damaged, drill new holes, and attach with new rivets. Mark the drill bit at 6.0 mm [0.236 in] to avoid drilling too deeply into the gear housing.

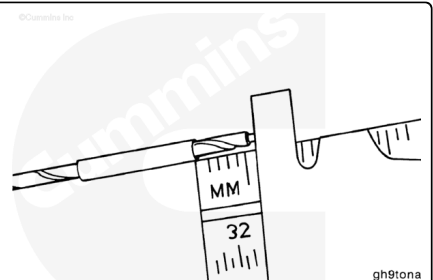

Drill the dataplate, taking care **not** to destroy any data printed on the dataplate.

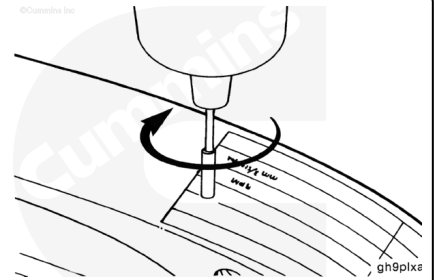

Drive the rivets in until they contact the dataplate.

