


Trainings ▾

General Information

The block stiffener plate is **not** used on all engines.

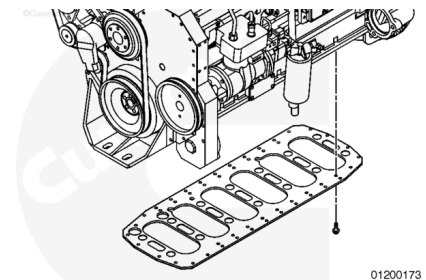

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.



Drain engine oil. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-037.html>)


Remove the oil pan. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-025.html>)

Remove the oil suction tube. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-035.html>)

Remove

Remove the block stiffener plate.

Note : The plate will be loose after the oil pan capscrews are removed.

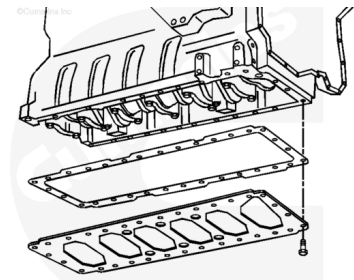


07900177

Clean and Inspect for Reuse

Remove all gasket material from both gasket surfaces.

Inspect the block stiffener plate for cracks or other damage.

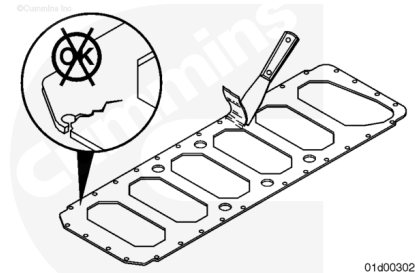


01d00302

Install

Install the block stiffener plate. Use a new gasket and/or RTV sealant as required.

Note : The engines use a variety of combinations of gaskets and/or RTV sealant. Use the same combination of gaskets and/or RTV sealant as previously removed.

Note : The block stiffener plate must be held in place while the oil suction tube is installed. Use a few oil pan capscrews or wire ties to accomplish this

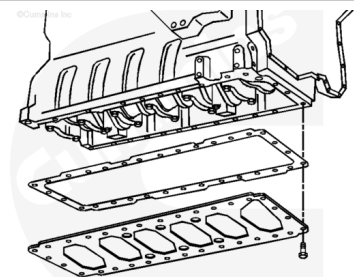

07900177

Finishing Steps

Install the oil suction tube. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-035.html>)

Install the oil pan. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-025.html>)

Fill the engine with oil. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-037.html>)

Operate the engine and check for leaks.

