

Trainings ▾

Preparatory Steps


- Remove the crankcase breather tube and hose. Refer to Procedure 003-018 (</qs3/pubsys2/xml/en/procedures/100/100-003-018.html>).
- Remove the rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/100/100-003-011.html>).
- Loosen the adjusting screw locknuts. Loosen the adjusting screws until they stop.
- Remove the capscrews, retaining clamps, rocker lever assemblies, and supports.




Remove

If the rocker lever and push rods are to be inspected for reuse, follow these steps.


Remove the retaining rings and thrust washers.

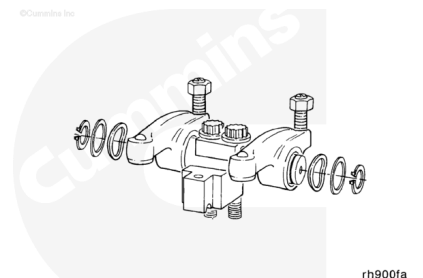

Remove the rocker levers.

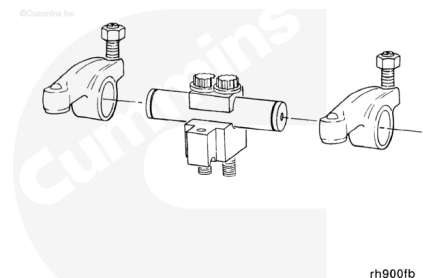

Remove the pedestal assembly.

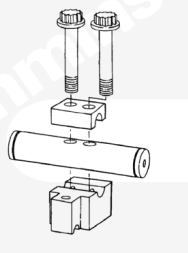

rh900ha


Remove the locknut and adjusting screw.



rh900fc

Clean and Inspect for Reuse

Clean all parts in a strong solution of laundry detergent in hot water.

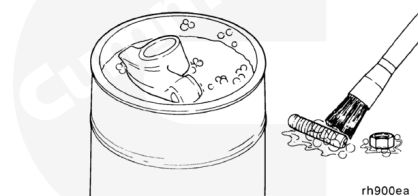


rh900ea

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Use compressed air to dry the parts after rinsing in clean hot water.

Note : The pedestals are made from powdered metal and will continue to show wetness after they have been cleaned and dried.

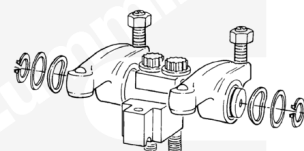

rh900fa


Inspect for cracks and excessive wear in the bore and the contact surface of the valve stem.

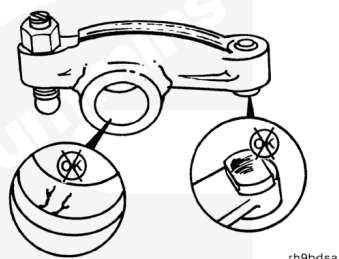

rh9bdsa

Measure the rocker lever bore.


mm		in
22.301	MAX	0.878

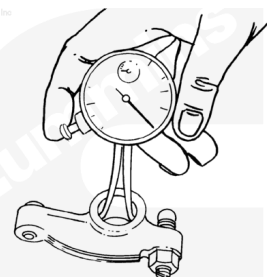

rh9brta

Measure the rocker lever shaft diameter.

mm		in
22.199	MIN	0.874

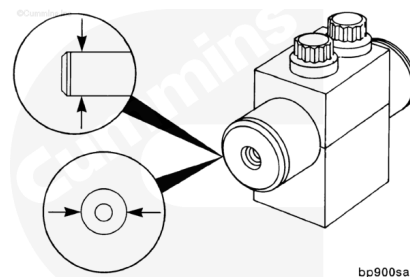

bp900sa


Install

Install the adjusting screw and locknut.



rh900fc


Install a retaining ring, thrust washer, and wavy spring washer as illustrated.



rh900aa

Lubricate the shaft with clean engine lubricating oil.


©Cummins Inc.

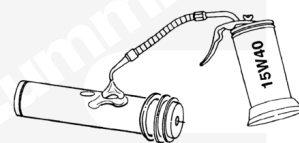

rh9ehwa

Position the levers on the rocker shaft.


©Cummins Inc.

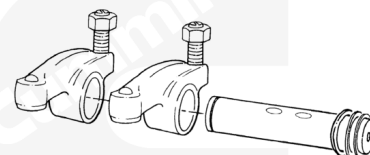

rh900ab

Install the remaining wavy spring washer, thrust washer, and retaining ring as illustrated.


©Cummins Inc.

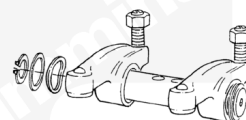

rh900ac

Compress the wavy spring washers and install the bottom half of the pedestal as illustrated.


©Cummins Inc.

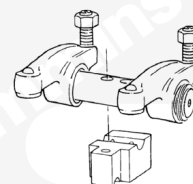

rh900ad

Make sure the rocker lever adjusting screws are completely backed out.


©Cummins Inc.

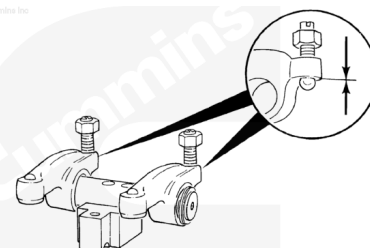

rh900da


Install the support and rocker lever assemblies over the rocker lever oil manifold.

Make sure the dowel rings in the pedestals are installed into the dowel bores.

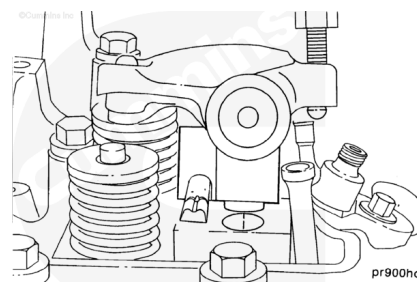


Use clean engine oil to lubricate the threads and under the heads of the pedestal capscrews.

Install the retaining clamps and capscrews.

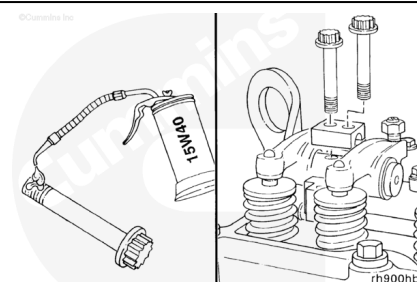

⚠ CAUTION ⚠

To prevent damage to the rocker lever and push rod, make sure the adjusting screw ball is positioned in the socket of the push rods when tightening.

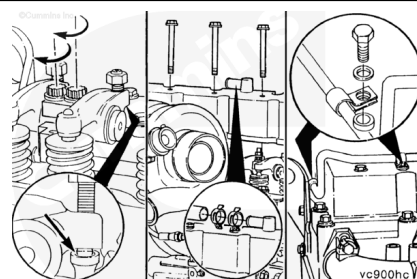


Tighten the pedestal capscrews.

Torque Value: 55 n•m [41 ft•lb]

Finishing Steps

- Adjust the intake and exhaust valve lash. For C Series diesel engines, refer to Procedure 003-004 (</qs3/pubsys2/xml/en/procedures/41/41-003-004.html>) in the Troubleshooting and Repair Manual, C Series Engines, Bulletin 3666003. For C Series gas engines, refer to Procedure 003-004 (</qs3/pubsys2/xml/en/procedures/39/39-003-004-tr.html>) in the Troubleshooting and Repair Manual, C8.3G, C Gas Plus, and L Gas Plus Engines, Bulletin 3666206.
- Install the rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/100/100-003-011.html>).
- Install the crankcase breather tube and hose. Refer to Procedure 003-011

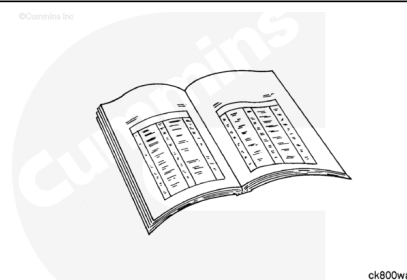

(/qs3/pubsys2/xml/en/procedures/100/100-003-011.html).

Last Modified: 17-Apr-2007
