

Trainings ▾

Preparatory Steps

Remove the crankcase breather tube and hose. Refer to Procedure 003-018 (</qs3/pubsys2/xml/en/procedures/100/100-003-018.html>).

Remove the air crossover tube (off-highway vehicles). Refer to Procedure 010-019 (</qs3/pubsys2/xml/en/procedures/100/100-010-019.html>).


Remove the capscrew from the support bracket for the turbocharger wastegate actuator hose (on-highway vehicles).



Remove

Remove the six valve cover mounting capscrews.


Discard the sealing o-rings.

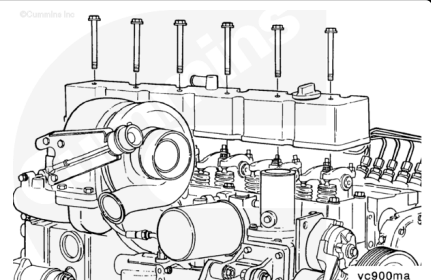

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

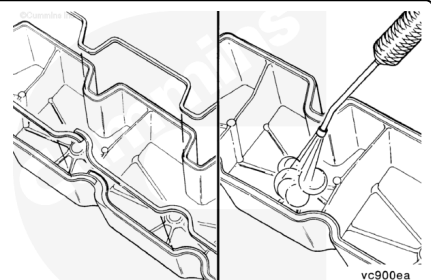

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Inspect the seal for damage.

Note : The gasket can be reused if it is not damaged.

Steam-clean and dry with compressed air.


Inspect the cover for cracks or damage and replace if necessary.

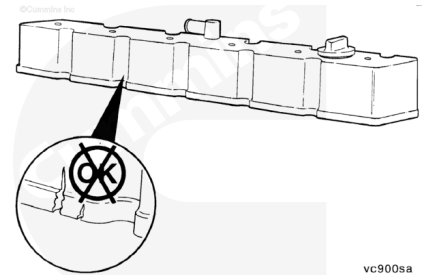

Install


Rocker Lever Cover and Crankcase Breather Assembly Components

1. Hose
2. Breather
3. Capscrew (self tapping)
4. Mounting Flange
5. Rocker Lever Cover.

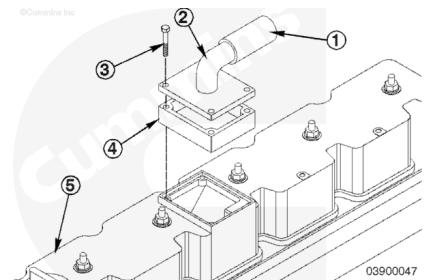

Rocker Lever Cover and Crankcase Breather Assembly

1. Breather
2. Rocker Lever Cover.

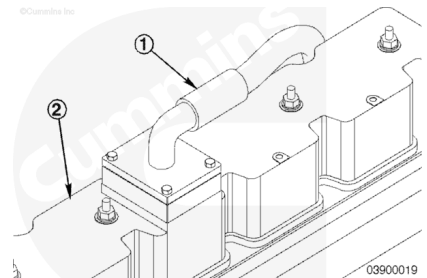


Note : If the rocker lever gasket is not damaged, it can be reused.

If the rocker lever gasket is damaged, install a new gasket.


Install the rocker lever gasket into the groove in the rocker lever cover. Start the installation at the overlap area shown in the illustration. Do **not** stretch the rubber rocker lever gasket.

If the rocker lever gasket has more overlap than shown in the illustration, trim the length to provide the correct overlap.

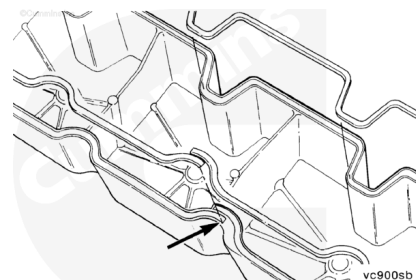


Install new sealing o-rings on the capscrews.

Install the six capscrews into the cover.

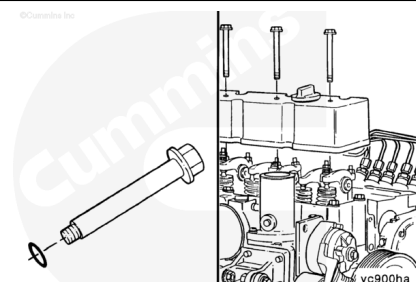

Tighten the capscrews in the sequence shown.

Torque Value: 24 n•m [18 ft-lb]

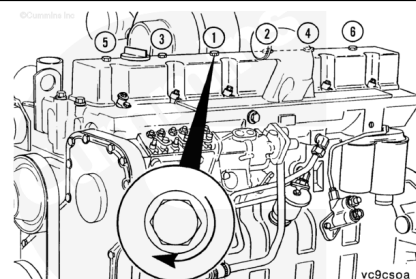

Finishing Steps

Install the capscrew into the support bracket for the turbocharger wastegate actuator hose (on-highway vehicles).

Temporarily install the crankcase breather tube and hose.

Refer to Procedure 003-018

(</qs3/pubsys2/xml/en/procedures/100/100-003-018.html>).

Install the air crossover tube (off-highway vehicles).

