


Trainings ▾

Remove

Remove the two hose clamps from the crankcase breather.


Remove the two breather tube support bracket capscrews (A and B).

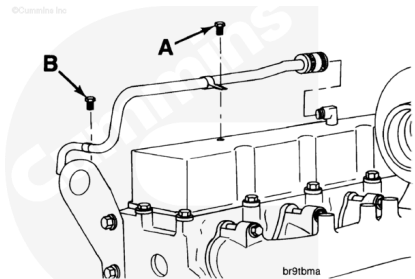

Inspect for Reuse

Inspect the hose and tube for restrictions, cracks, or other damage.

Replace the hose and tube if damaged.

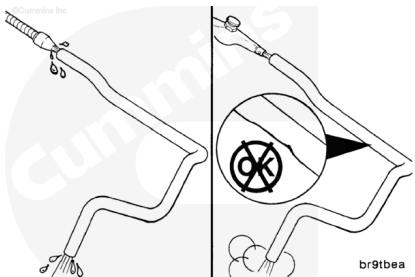


Install

Install the breather tube and hose clamps with the outlet oriented to allow the best routing of a 2.54 cm [1 in] diameter breather hose to the oil pan flange.

Tighten the capscrews for the breather tube support brackets.

Torque Value:	Step 1	24 n.m [18 ft-lb]
	Step 2	43 n.m [32 ft-lb]

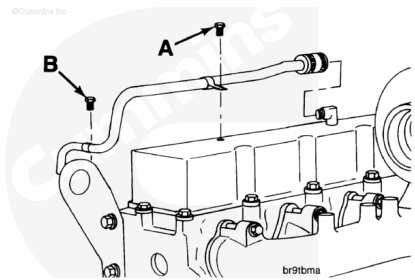

Last Modified: 25-Aug-2004
