

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠


Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

Drain the lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/100/100-007-037.html>).



Remove


Disconnect the oil heater electrical cord and remove the heater element. Refer to the OEM service manual.

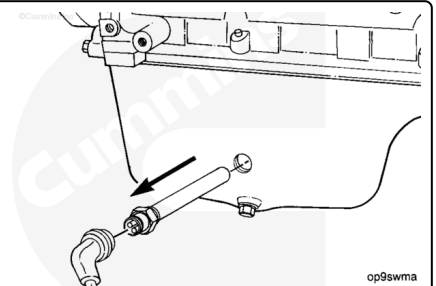

Install

Replace the heater element; refer to the OEM's service manual.

Torque Value: 80 n•m [59 ft-lb]

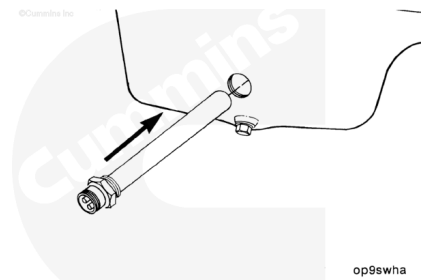

Finishing Steps

Fill the engine to the correct oil level. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/100/100-007-037.html>).

Connect the oil heater electrical cord.

Operate the engine and check for leaks.

