


Trainings ▾

Remove


Clean the area around the dipstick tube before removing to prevent debris from entering the oil system.

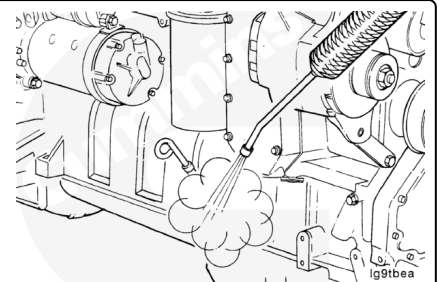

Remove the dipstick from the dipstick tube.


Remove the dipstick tube from the cylinder block.

Service Tip: Use a dent puller and a M8 x 1.25 x 21-mm self-tapping capscrew. Thread the capscrew into the dipstick tube and remove the tube.

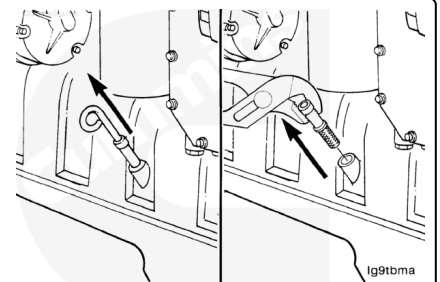


Install

Apply a thin bead of Loctite™ 277 around the knurled end of the dipstick tube.

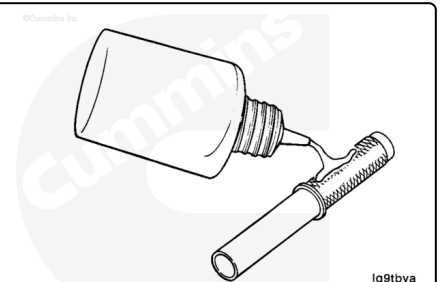


Place the knurled end of the dipstick tube into the dipstick tube bore in the cylinder block.

Note : Use a flat washer and hex head capscrew to drive the tube into the cylinder block.

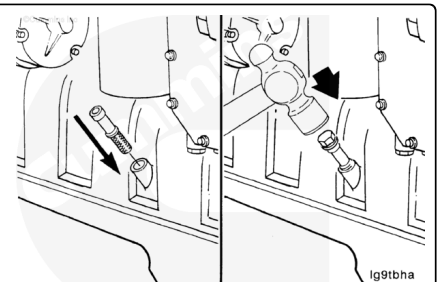

Lightly drive the dipstick tube until it seats against the block casting.

Install the dipstick into the dipstick tube.

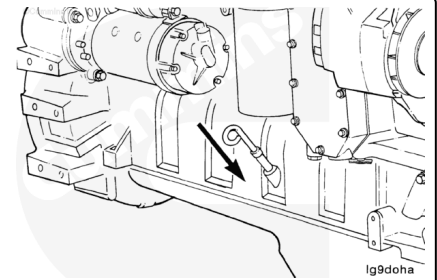

Last Modified: 28-Aug-2003
