

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.




Note : C and L Series engines use a variety of combinations of gaskets and/or RTV for sealing. When installing the oil pan, use the same combinations of gasket and/or RTV that were on the pan.

- Drain the lubricating oil. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-037.html>)
- Drain the lubricating oil.

Remove

Remove the lubricating oil pan and gasket.

Remove the suction tube, if required. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-035.html>)

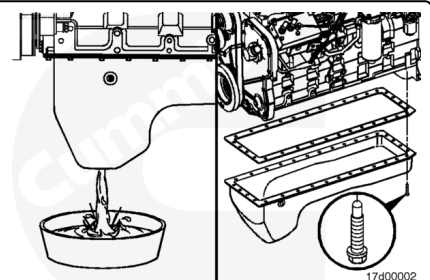

Clean and Inspect for Reuse

⚠ WARNING ⚠


When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ CAUTION ⚠

When scraping gasket material from the front gear housing, do not gouge into the surface. Damage to the component can occur.

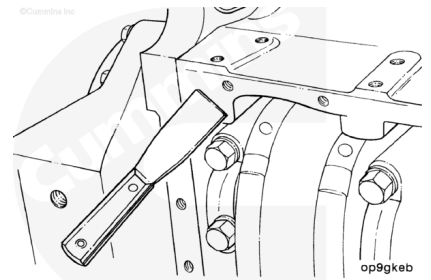

Remove all gasket material from the cylinder block and oil pan surfaces.


Steam clean the oil pan.

Dry with compressed air.

Inspect the lubricating oil pan, suction tube, and tube braces for other damage.

If cracks are found, replace the damaged part. Do **not** attempt to repair the oil pan by welding.

Install the suction tube, if required. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-035.html>)

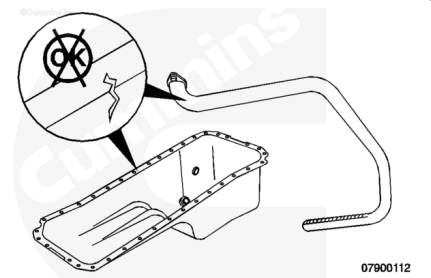

Install


Note : C and L Series engines use a variety of combinations of gaskets and/or RTV for sealing. When

installing the oil pan, use the same combinations of gasket and/or RTV that were on the pan.

Note : Install three guide pins, Part Number 3164977, to improve alignment of the oil pan sealing components to the cylinder block.


Use RTV sealant, or equivalent, to fill the joints between the lubricating oil pan rail, gear housing, and rear seal housing.

Install the suction tube, if removed. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-035.html>)

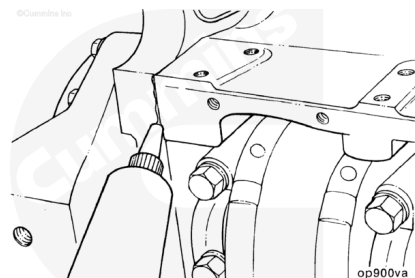

Install the gasket and lubricating oil pan.


Install the oil pan corner braces, if equipped.

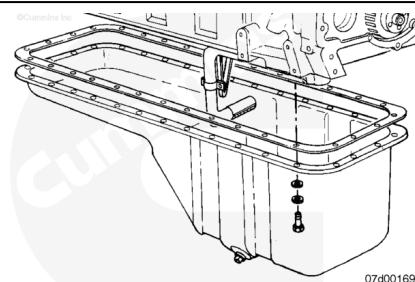

Assemble the washers and capscrews to secure the lubricating oil pan, as illustrated.

Remove the guide pins and install the capscrews.

Tighten all capscrews in the sequence shown in the accompanying chart.

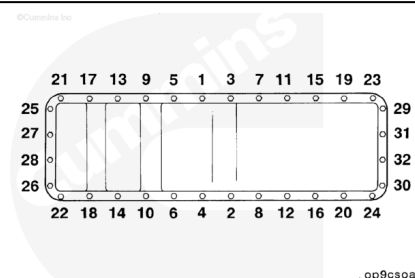

Torque Value: 28 n•m [248 in-lb]

Finishing Steps

- Fill the lubricating oil system. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-037.html>)
- Fill the lubricating oil system. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/147/147-007-037.html>)
- Operate the engine and check for leaks.



