


Trainings ▾

Remove

⚠ CAUTION ⚠


Using a socket extension is not recommended because it can cause axial twisting damage to the belt tensioner.

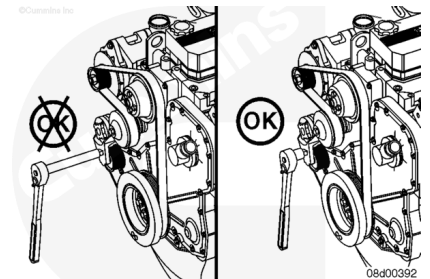

Note : If a socket extension is necessary, support the head of the ratchet with one hand to prevent the belt tensioner arm from being subjected to unintended loading.


Lift the tensioner to remove the drive belt.

Note : The belt tensioner winds in the direction that the spring tang is bent over the tensioner body. To loosen the tension on the belt, rotate the tensioner to wind the spring tighter.

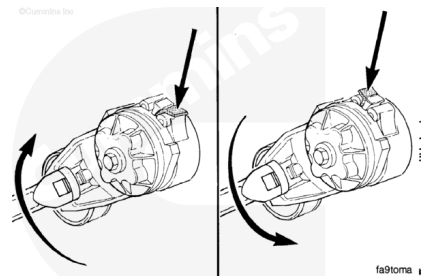

⚠ CAUTION ⚠

Applying excessive force in the opposite direction of windup or after the tensioner has been wound up to the positive stop can cause the tensioner arm to break.

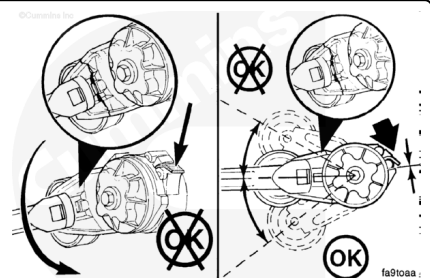


Inspect for Reuse

Inspect the drive belt for:

- Cracks
- Glazing
- Tears or cuts


- Hardening
- Excessive wear.

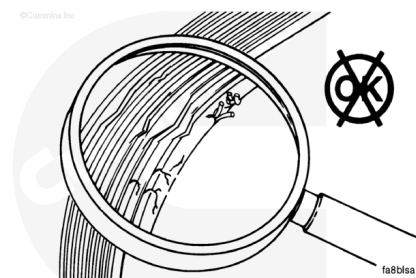

Install

⚠ CAUTION ⚠

The belt tensioner is spring-loaded and must be pivoted away from the drive belt. Pivoting in the wrong direction can result in damage to the belt tensioner.

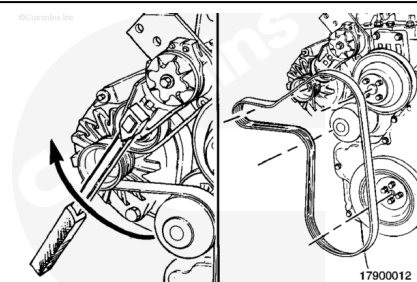

Lift the tensioner to install the drive belt.