


Trainings ▾

Remove

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

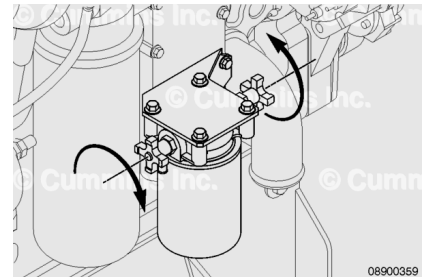

Close the coolant inlet and outlet valves on the coolant filter head by rotating the valves **clockwise**.

⚠ WARNING ⚠

A small amount of coolant can leak when servicing the coolant filter with the shutoff valve in the OFF position. To reduce the possibility of personal injury, avoid contact with hot coolant.




⚠ WARNING ⚠


Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

Use coolant filter wrench, Part Number 3376807, to remove the coolant filter. Discard the coolant filter.

Turn the shutoff valve to the OFF position by rotating the knobs in a **clockwise** direction until the valves are fully closed.

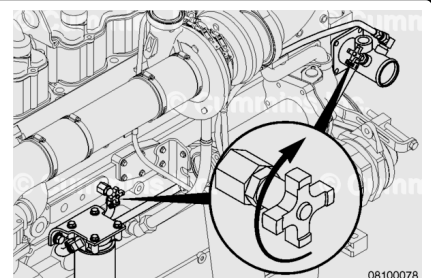


Remove and discard the coolant filter.

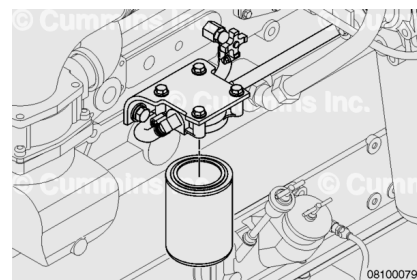


Clean

Clean the gasket surface.

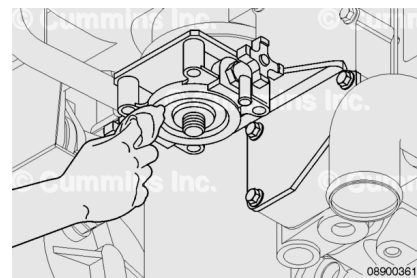

Clean the gasket surface.

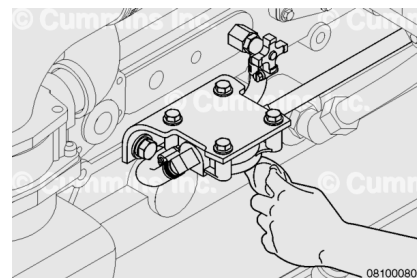


Install

⚠ CAUTION ⚠

Do not allow oil to get into the filter. Oil will damage the DCA.

⚠ CAUTION ⚠

Mechanical overtightening can distort the threads or damage the filter head.

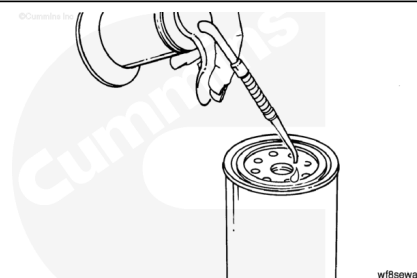

Apply a thin film of lubricating oil to the gasket sealing surface before installing the new coolant filter.


Install the coolant filter on the filter head. Tighten the filter until the gasket contacts the filter head surface.

Tighten the coolant filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn, or as specified by the filter manufacturer.


⚠ CAUTION ⚠

The valve must be in the ON position to prevent engine damage.

Open the coolant inlet and outlet valves on the coolant filter head by rotating the valves **counterclockwise**.

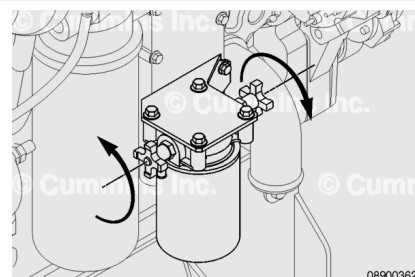

Install the coolant system pressure cap.

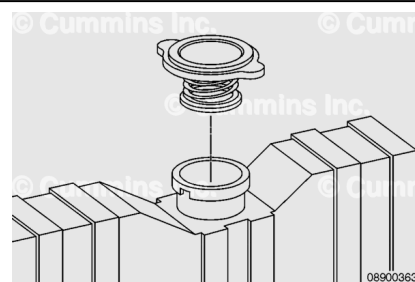

Operate the engine and check for coolant leaks.

After the air has been purged from the system, check the coolant level.

