


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

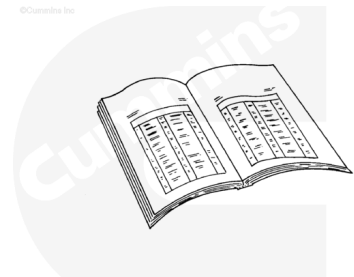

ck800wa

⚠ WARNING ⚠


Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

Remove the coolant filter. Refer to Procedure 008-006 (</qs3/pubsys2/xml/en/procedures/100/100-008-006.html>).

Remove

Remove the coolant outlet connection.

Note : If the coolant filter head is remote mounted; refer to the OEM service manual.

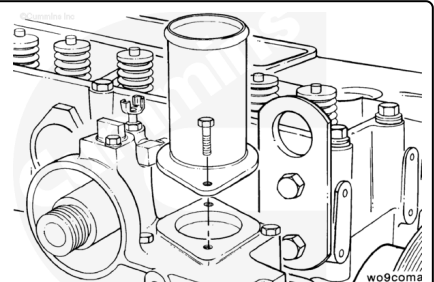


wo9coms

Install

Install a new gasket and the coolant outlet connection.

Tighten the thermostat housing and coolant connection capscrews.

Torque Value: 24 n•m [18 ft-lb]

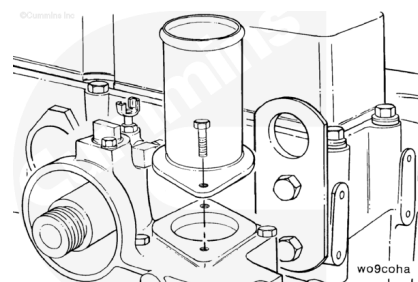

Finishing Steps

Fill the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/100/100-008-018.html>).

Operate the engine and check for leaks.

