


Trainings ▾

Initial Check

⚠ CAUTION ⚠

The fan shroud must be installed correctly, be in good condition, and the shroud-to-fan clearance must be within the manufacturer's specifications for proper airflow through the radiator to provide adequate engine cooling.

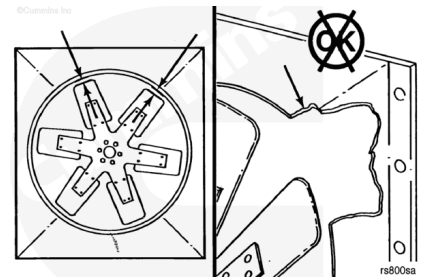

Inspect the fan shroud for proper fan clearance, cracks, air leaks, or damage. Replace, if necessary. Refer to the equipment manufacturer's service manual for instructions.

Cummins Inc. recommends fan clearance be 5.08 to 10.16 cm [2 to 4 in] from the radiator core. Refer to the equipment manufacturer's service manual for alternative positions.

