

Trainings ▾

Preparatory Steps


- Remove the drive belt.

Note : Loosen the capscrews before removing the belt, and tighten the capscrews after the belt is installed.



Remove


Remove the four capscrews, fan, and spacer.

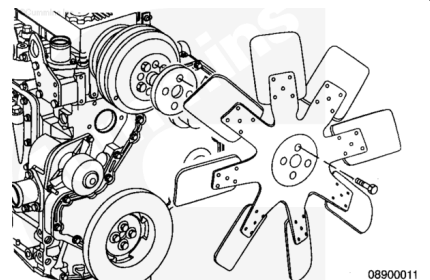

Inspect for Reuse

Inspect the fan pulley for cracks near bolt holes.

Check for cracks, loose rivets, and bent or loose blades.

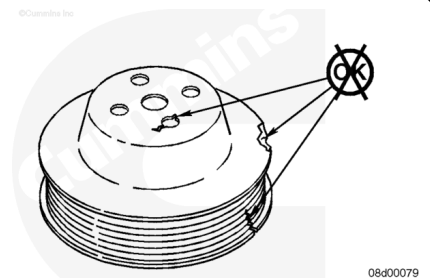

Install

Lift the tensioner, and install the belt.

Service Tip: If difficulty is experienced installing the drive belt (the belt seems too short), position the belt over the grooved pulleys first; then, while holding the tensioner up, slide the belt over the water pump pulley.



Install the four capscrews, fan, and spacer.

Torque Value: 24 n•m [212 in-lb]

Torque Value: 43 n•m [32 ft-lb]

