

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools


- No Cummins® service tools required.

Additional Service Items

- No additional service items required.

General Information

Air forced through the fins of the radiator by a fan cools the coolant pumped through the radiator. Environmental debris (such as paper, straw, lint, and dust) can obstruct the fins and stop the flow of air, which will reduce the cooling effect of the radiator.

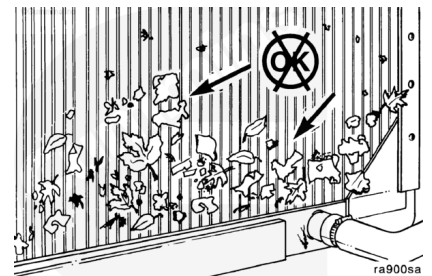


Initial Check

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ CAUTION ⚠

Keep the compressed air nozzle a minimum of 15cm [6 in] from the radiator core to avoid damaging the fins. See call out 1 in the illustration

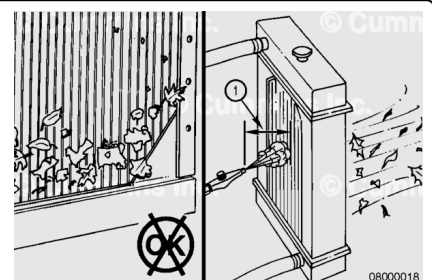

Inspect for plugged radiator fins.

Use compressed air to blow out the dirt and debris.


Measurements

	kpa	psi
Air Pressure:	552	80

Inspect the radiator for bent or broken fins.


Inspect the radiator core and gasket for leaks.

If the radiator **must** be replaced, see equipment manufacturer service information.

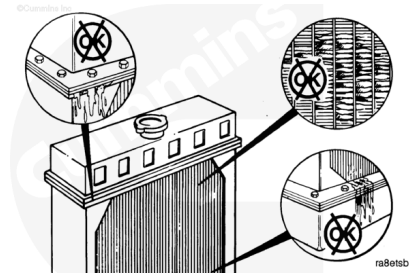

⚠ WARNING ⚠

If a liquid refrigerant system (air conditioning) is used, wear eye and face protection, and wrap a cloth around the fittings before removing. Liquid refrigerant can cause serious eye and skin injuries.

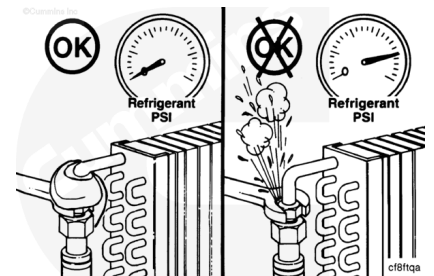

⚠ WARNING ⚠

To protect the environment, liquid refrigerant systems must be properly emptied and filled using equipment that prevents the release of refrigerant gas into the atmosphere. Federal law requires capturing and recycling the refrigerant.

Use care in removing the refrigerant system, if equipped, before removing the radiator.