


Trainings ▾

Inspect for Reuse

Be sure the correct radiator cap is being used. Refer to Procedure 018-018 (</qs3/pubsys2/xml/en/procedures/39/39-018-018-tr.html>) in the Troubleshooting and Repair Manual, C8.3G, C Gas Plus and L Gas Plus Engines, Bulletin 3666206 or Procedure 018-018 (</qs3/pubsys2/xml/en/procedures/41/41-018-018.html>) in the Troubleshooting and Repair Manual, C Series Engines, Bulletin 3666003.

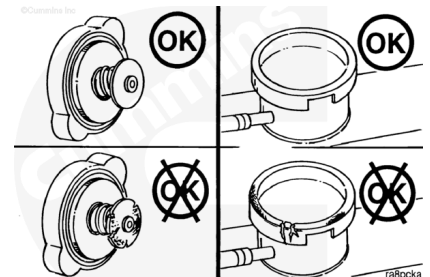

Inspect the rubber seal of the pressure cap for damage.

Inspect the radiator fill neck for cracks or other damage.

Refer to the equipment manufacturer's service manual for instructions if the fill neck is damaged.

Pressure-test the radiator cap.

The pressure cap **must** seal within 14 kPa [2 psi] of the value stated on the cap, or it **must** be replaced.

Refer to the equipment manufacturer's service manual for radiator cap test procedure.

