



Trainings ▾

Remove

Remove the drive belt. Refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/100/100-008-002.html>).

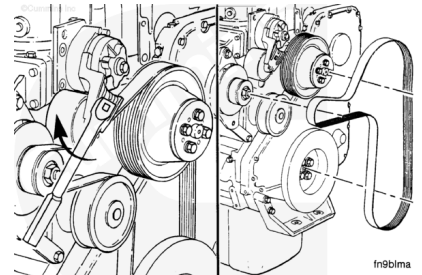

Remove the belt tensioner from the bracket.

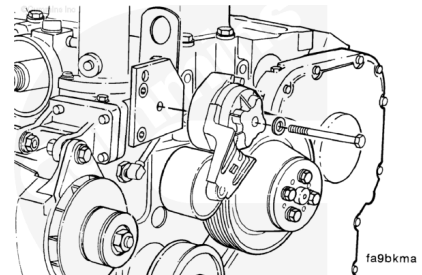


Install


Install the belt tensioner.

Install and tighten the belt tensioner mounting capscrew.

Torque Value: 43 n•m [32 ft-lb]

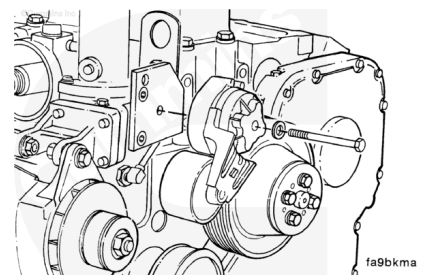

Install the drive belt. Refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/100/100-008-002.html>).

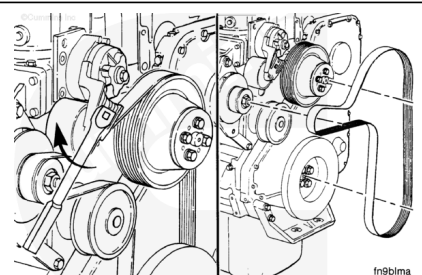

Last Modified: 02-Sep-2003