


Trainings ▾

Remove

Loosen the hose clamps, and position the crossover tube so that it can be removed.

Remove the tube.

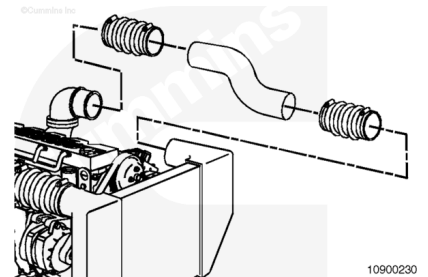


Inspect for Reuse

Check the crossover tube for cracks, holes, and worn sections.

Also check for poor sealing between the hose and tube.

Inspect the clamps for wear.


Replace with a new hose and clamps if necessary.

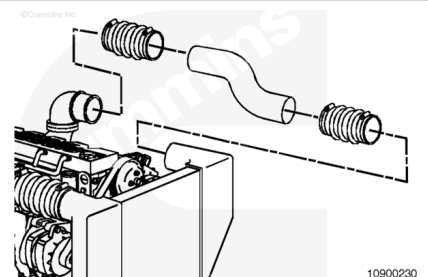

Install

Install the crossover tube and clamps in the reverse order of removal.

Tighten the clamps. Refer to the OEM manual for torque specification.

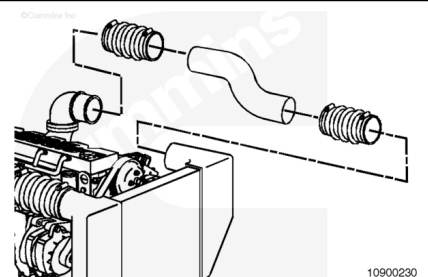

Last Modified: 02-Sep-2003
