


Trainings ▾

Initial Check

Inspect the turbocharger oil drain line for oil leaks or damage.


Repair as necessary.

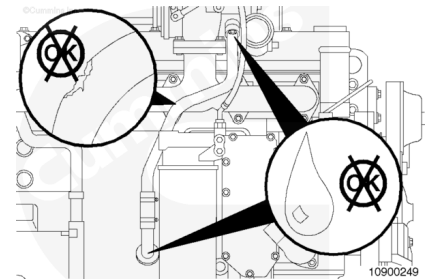

Remove

Remove the capscrews from the oil drain tube.


Pull the drain line out of the drain line boss.

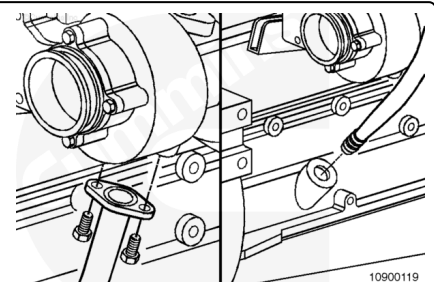

Clean and Inspect for Reuse

Clean the gasket sealing surfaces.


Clean the o-ring seating bore and make sure it is free of dirt and debris.

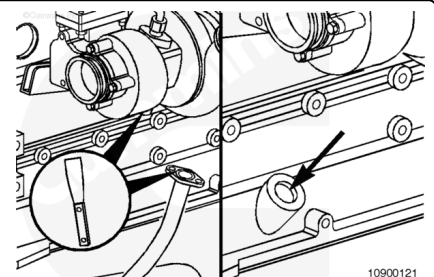

Inspect the line for cracks, wear, and damage.

Inspect the o-ring for fretting and cracking. Replace if necessary.

Check the rubber section of the drain line for deterioration.

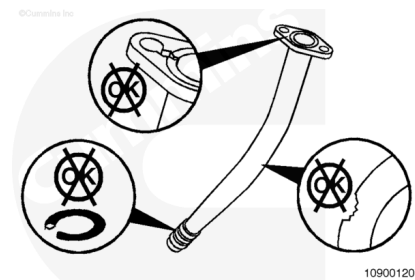

Install

Apply a thin film of oil to the drain line o-rings.

Push the drain line into the drain line boss. Be sure both o-rings are completely seated in the bore.

Install a new gasket.

Install and tighten the turbocharger oil drain line.

Torque Value: 27 n•m [20 ft-lb]

Operate the engine and check for leaks.

