


Trainings ▾

Initial Check

The intake air temperature sensor is located in the intake manifold.

Disconnect the harness connector from the temperature sensor.

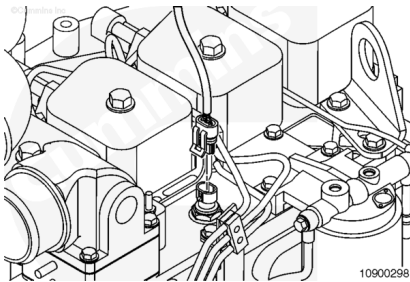


Resistance Check

Use an ohmmeter to measure the resistance between the two pins of the intake air temperature sensor.

If the resistance is **not** correct, replace the sensor.

If the resistance is correct, the sensor **must** be checked for a short to ground.

The resistance value is temperature-dependent.

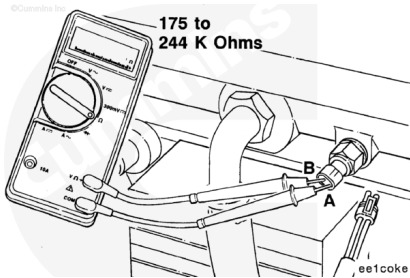


Temperature (°C)	Temperature (°F)	Acceptable Resistance Range (ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Measure the resistance from each pin of the intake air temperature sensor to the engine block.

The ohmmeter **must** show an open circuit (more than 100k ohms).

If the circuit is **not** open, replace the sensor.

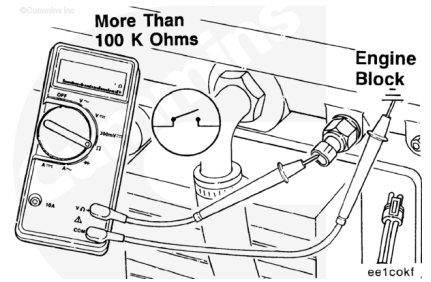

Last Modified: 26-Aug-2003
