



Trainings ▾

Resistance Check

Disconnect the ground cable from the battery. Remove all wires from the intake manifold air heater.

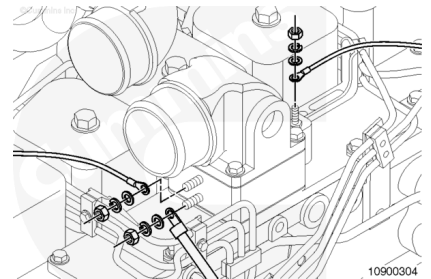


Use an ohmmeter to check the resistance across both terminals.

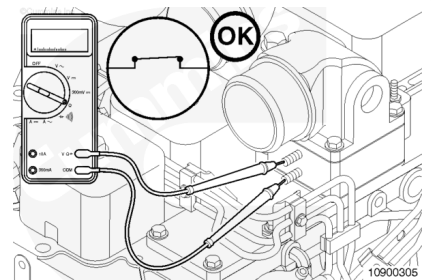

Use an ohmmeter to check the resistance from the ground of each positive heater terminal.

The resistance should indicate zero ohms.


If high ohms are indicated, inspect and clean or repair all heater electrical connections and grounds and recheck for zero ohms.

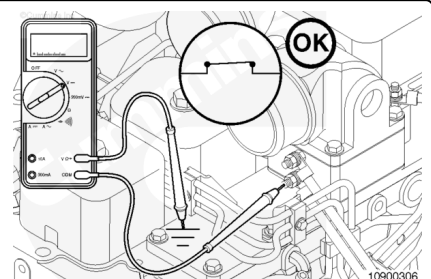

- A. Meter reads zero = good heater (both elements)
- B. Meter does **not** move = defective heater
- C. Meter indicates, but **not** zero = dirty or corroded connections. Clean and repair, as necessary.


Check the resistance from the ground wire to a known good ground.

The reading should be less than 10 ohms. If **not**, replace the heater ground wire.

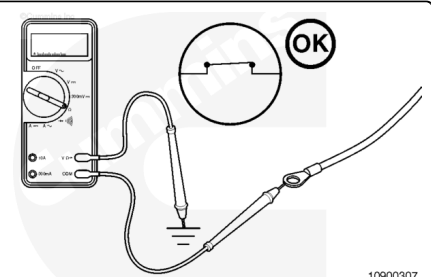


Remove


Remove all three electrical leads from the intake manifold heater.

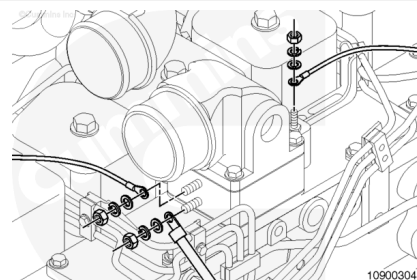

Remove the four capscrews that attach the air-crossover connection and heater.

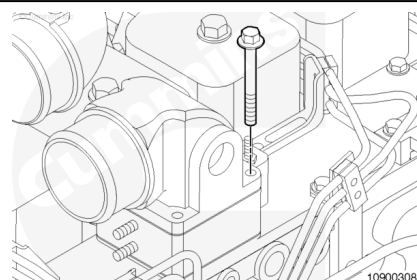


Remove the heater and gaskets.
Clean the mounting surface.

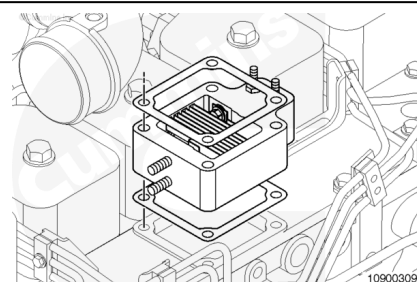

Inspect for Reuse


Check the intake manifold heater leads and grids for corrosion and damage.

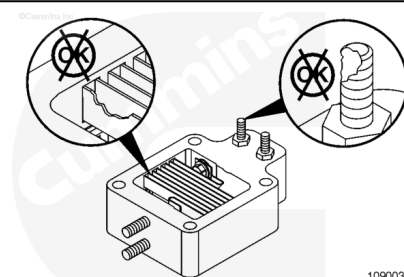

Install

Install new gaskets and the intake manifold heater.

Install the four capscrews and the single black (ground) heater lead.

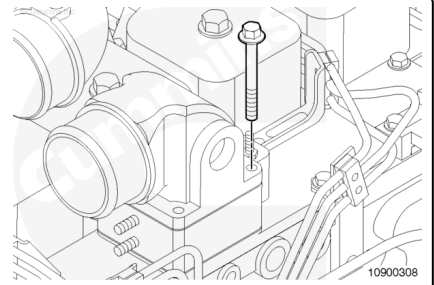

Install the intake manifold heater leads on the terminals.

