



Trainings ▾

Resistance Check

Disconnect the ground cable from the battery terminal.

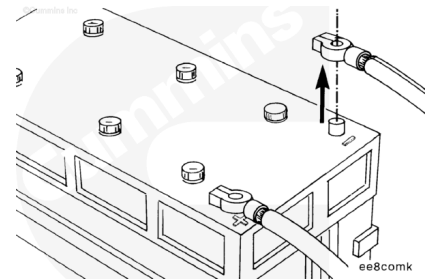


Label and remove the leads on the air heater solenoid(s) to be tested.

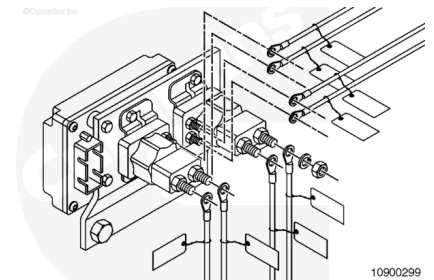


Use an multimeter to check the continuity between the small terminals at the base of the solenoid.

Continuity: 50 to 100 ohms

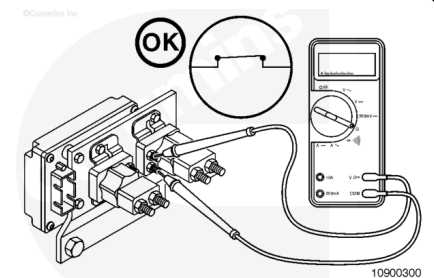


If the circuit is open, replace the solenoid.

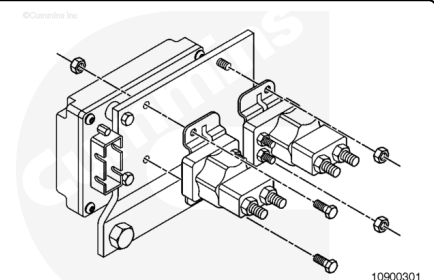


Check for continuity between the two large terminals on the top of the solenoids.

The multimeter should indicate an open circuit.

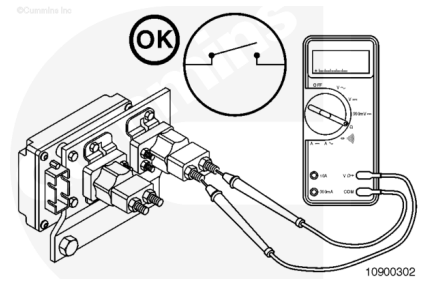

If any resistance or continuity is detected, replace the solenoids.

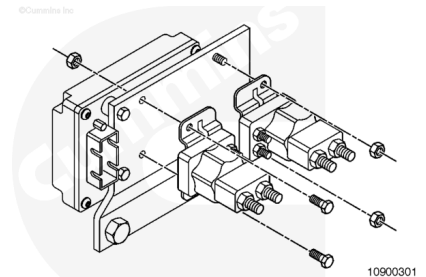

Test


Check the solenoid for proper operation.

Connect an multimeter to the two large terminals.


Ground one of the small terminals to the battery ground.

Apply system voltage to the other small terminal.


The multimeter should indicate zero ohms.

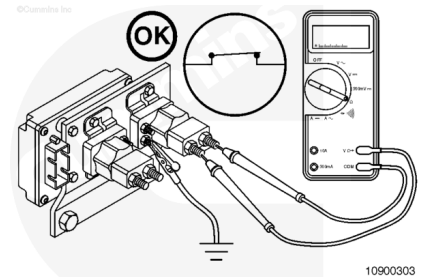

If the multimeter detects an open circuit, replace the solenoid.

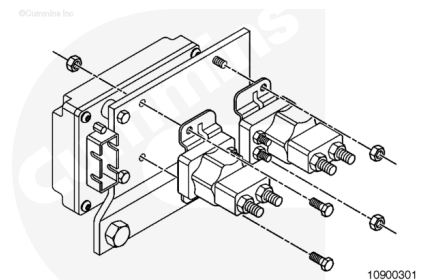

Reconnect the ground cable to the battery terminal.

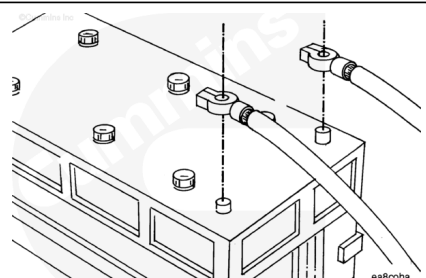

Last Modified: 26-Aug-2003
