

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.




Disconnect the ground cable from the battery terminal.

Remove and tag all wires.

Remove the drive belt from the alternator pulley.


Remove

Remove the alternator link capscrew.

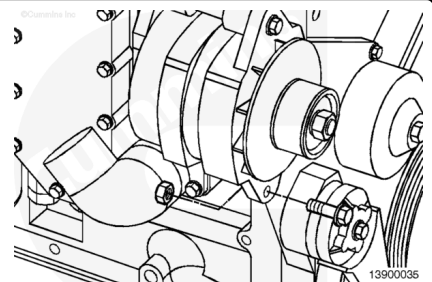

Remove the alternator mounting capscrew.


Remove the alternator.

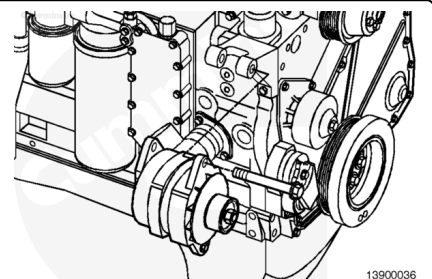

Install

To install the alternator, the alternator mounting components **must** be tightened in the following sequence:

1. Alternator-to-alternator bracket capscrew
2. Lower brace-to-alternator capscrew
3. Lower alternator brace-to-water pump capscrew
4. Water inlet-to-block capscrews.

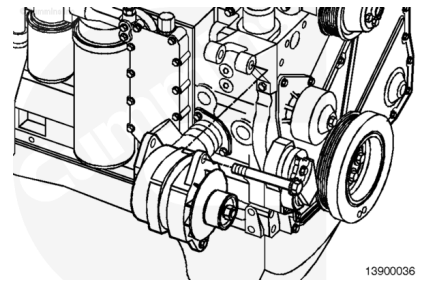

Note : The wrench size and torque value is determined by the make and model of the alternator.

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.



Install the drive belt from the alternator pulley.

Install and tag all wires.

Connect the ground cable from the battery terminal.