


Trainings ▾

Remove

Remove the alternator bracket mounting capscrews.

Remove the alternator bracket.

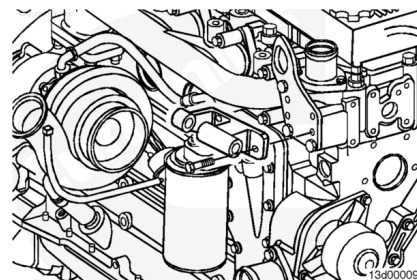

Install

Install the alternator bracket.

Install and tighten the alternator mounting capscrews.

Torque Value: 24 n•m [212 in-lb]

