


Trainings ▾

Preparatory Steps

Remove the transmission.


Refer to equipment manufacturer's instructions.

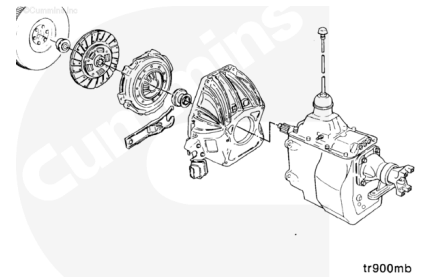

Initial Check

Inspect the ring gear teeth for cracks and chips.


Note : If the ring gear teeth are damaged, the ring gear must be replaced.

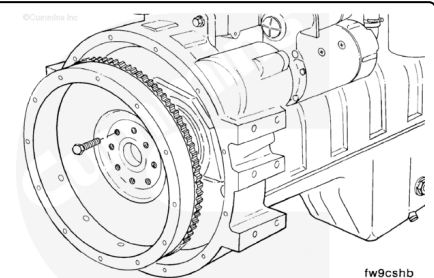

Remove

⚠ WARNING ⚠


The component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component.

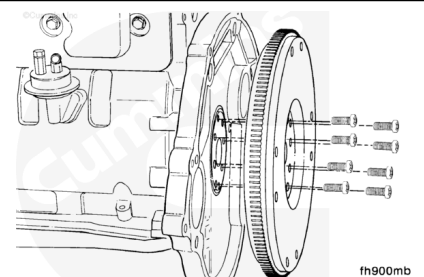

Remove the flywheel. Refer to Procedure 016-005 (</qs3/pubsys2/xml/en/procedures/100/100-016-005.html>).

⚠ WARNING ⚠


To reduce the possibility of severe eye damage, wear eye protection when you drive the gear from the flywheel. Do not use a steel drift pin.

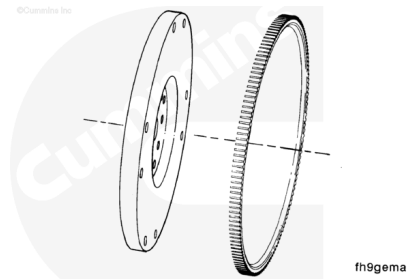

Use the brass drift pin to drive the ring gear from the flywheel.

Install

Heat the new ring gear for 20 minutes in an oven preheated to 127°C [260°F].

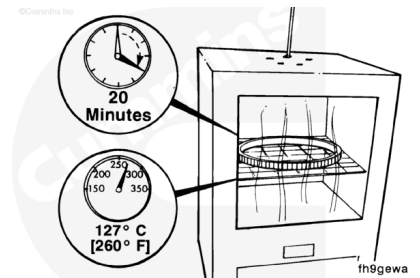


⚠ WARNING ⚠


To reduce the possibility of severe burns, wear protective gloves when installing the heated gear.

Note : The ring gear must be installed so the bevel on the teeth is toward the crankshaft side of the flywheel.

Install the ring gear.

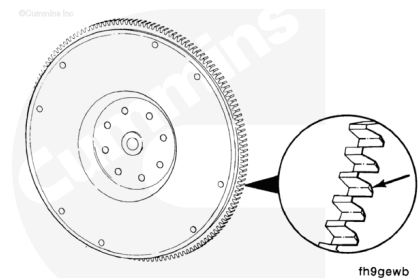


Use two capscrews and the barring tool, Part Number 3824591, in the front of the crankshaft to hold the crankshaft when the flywheel capscrews are being tightened.

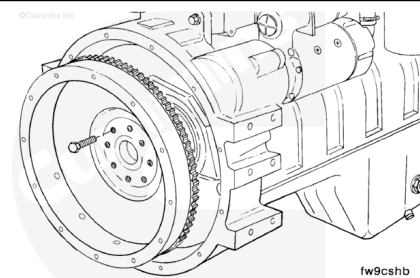

Tighten the capscrews in the sequence shown.

Torque Value: 137 n•m [101 ft-lb]

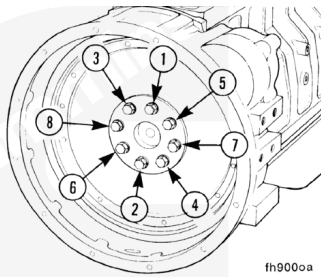

Last Modified: 07-Jun-2005
