


Trainings ▾

Remove

⚠ CAUTION ⚠


Do not allow metal shavings to fall in the engine when drilling a hole in the cup plug. Damage to engine components can occur.

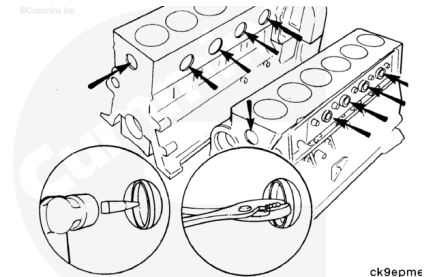

Use a center punch to mark the cup plug for drilling.

Drill a 1/8-inch hole into the cup plug.


Use a dent puller to remove the plug.

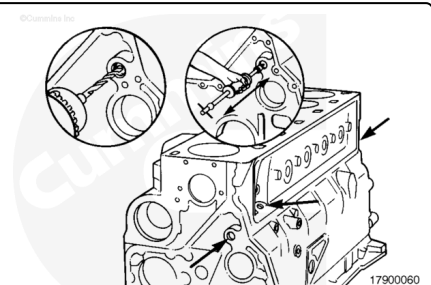

Clean

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

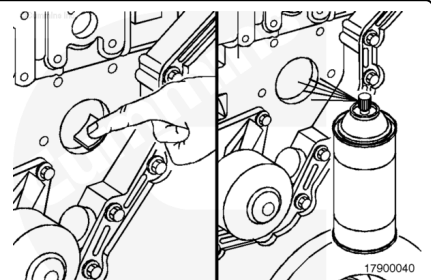


Thoroughly clean the cup plug hole using Scotch-Brite®, or equivalent.

Use spray cleaner, Part Number 3375433, or equivalent, to clean the bore for the final time.

Inspect for Reuse


Inspect the cup plug bores for damage.

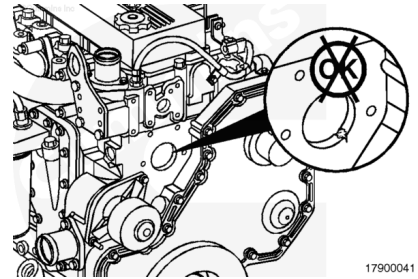

Install

⚠ CAUTION ⚠


Excessive sealant can run back into the engine and cause damage to other components. Allow the sealant to dry for a minimum of 2 hours before operating the engine. The plug can come out of the bore if the sealant is not dry.

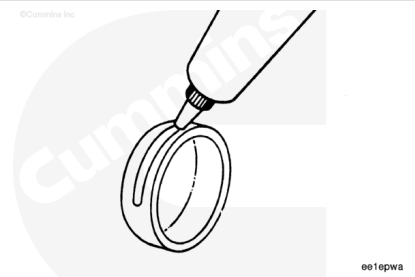

Apply a 2-mm [1/16-in] bead of cup plug sealant, Part Number 3375068, or equivalent, to the outside circumference of the cup plug and the inside circumference of the cup plug bore.

Note : Do not install a used cup plug. Discard all plugs after removal.


Install the cup plug with the appropriate cup plug driver. Refer to the Service Products Catalog, Bulletin 3377710.

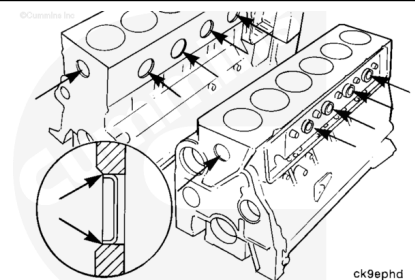

⚠ CAUTION ⚠

Do not install the cup plug too deeply. If the cup plug is not installed straight and flat, it must be replaced with a new cup plug.

The cup plug **must** be installed with the edge of the cup plug 0.5 to 1.0 mm [0.020 to 0.040 in] deeper than the leading chamfer of the bore.

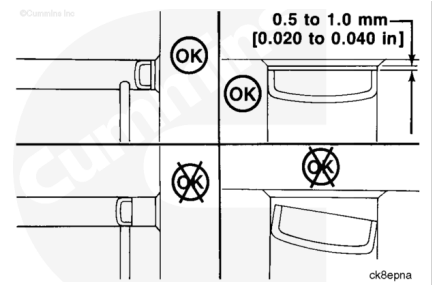

Last Modified: 05-Apr-2017
