


Trainings ▾

Remove

Remove the pipe plug.

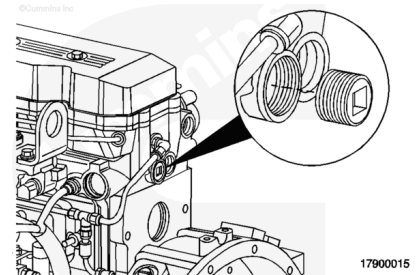


Clean and Inspect for Reuse

⚠ WARNING ⚠


When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

Use spray cleaner, Part Number 3375433, or equivalent, to clean the threads of the pipe plugs and threaded bores.

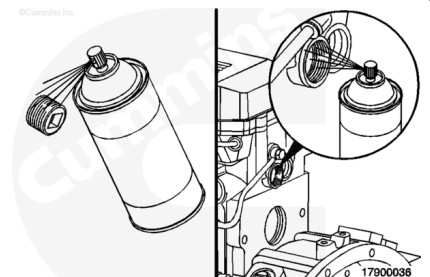

Inspect the threads of the pipe plugs for mutilation or damage.


Inspect the threaded bores for damage.

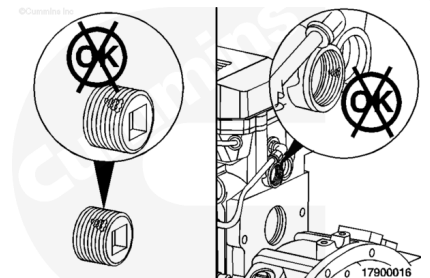

Install

Apply a film of pipe plug sealant, Part Number 3375066, or equivalent, to the threads.

Install the pipe plugs.

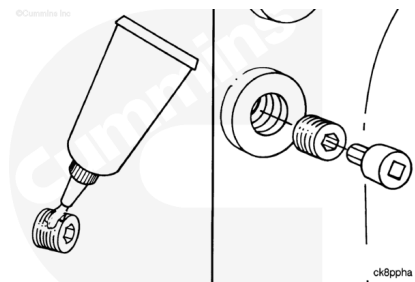

Tighten the pipe plugs. See the adjoining chart for the appropriate torque values.

©Cummins Inc.

Pipe Plug Torque Values					
Thread	Size		Torque		Torque
	Actual Thread O.D.		In Aluminum Components		In Cast Iron or Steel Components
	in.	mm [in]	N•m	[ft-lbs]	N•m [ft-lbs]
1/16	8.1	[0.32]	5	[45 in-lb]	15 [10]
1/8	10.4	[0.41]	15	[10]	20 [15]
1/4	13.7	[0.54]	20	[15]	25 [20]
3/8	17.3	[0.68]	25	[20]	35 [25]
1/2	21.6	[0.85]	35	[25]	55 [40]
3/4	26.7	[1.05]	45	[35]	75 [55]
1	33.5	[1.32]	60	[45]	95 [70]
1 1/4	42.2	[1.66]	75	[55]	115 [85]
1 1/2	48.3	[1.90]	85	[65]	135 [100]

ck8ppha